
CL02F–03

DISASSEMBLY

1. REMOVE BOOT AND PUSH ROD

(a) Pull out the boot with the push rod.

(b) Remove the boot from the push rod.

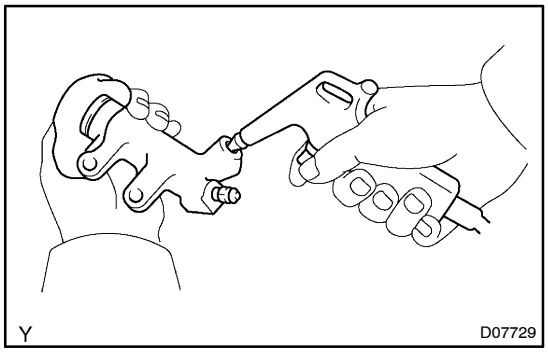

2. REMOVE PISTON AND SPRING

Using compressed air, remove the piston with the spring from the cylinder.

NOTICE:

- **Blowing off the air may cause the piston's jump–out. When removing the piston, hold it with your hand using a waste cloth.**
- **Take care not to splash brake fluid when air–blowing.**

3. REMOVE BLEEDER PLUG