
CL09I–01

INSTALLATION

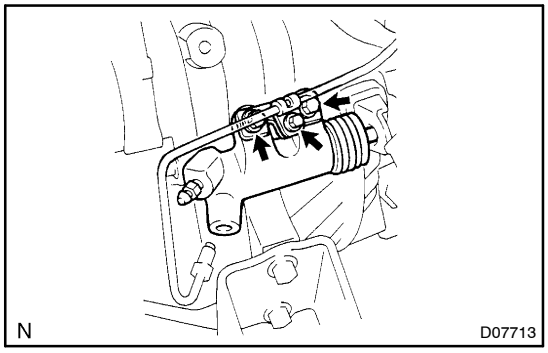


1. INSTALL RELEASE CYLINDER

(a) Install the release cylinder and clutch line bracket with the 2 bolts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

(b) Install the clutch line clamp to the clutch line bracket with the bolt.
Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

(c) Install the air cleaner case assembly with the air hose.

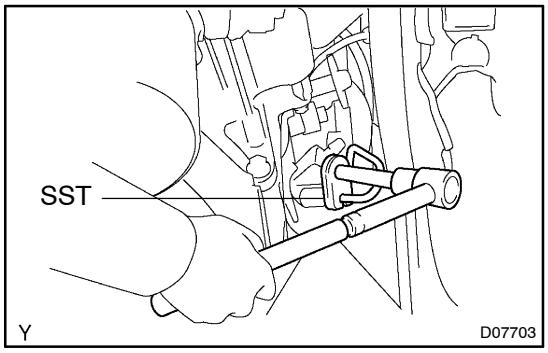

2. CONNECT CLUTCH LINE AND BLEED CLUTCH SYSTEM

(a) Raise the vehicle.

CAUTION:
Make sure that the vehicle is securely supported.

(b) Using SST, connect the clutch line.
SST 09023–00100
Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

(c) Fill the brake reservoir tank with brake fluid and bleed clutch system.

(d) Check for the leaks.

(e) Install the LH and RH engine under covers.

(f) Lower the vehicle.