
ANTI–LOCK BRAKE SYSTEM WITH ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

HOW TO PROCEED WITH TROUBLESHOOTING

DI6Q9–01

Troubleshoot in accordance with the procedure on the following pages.

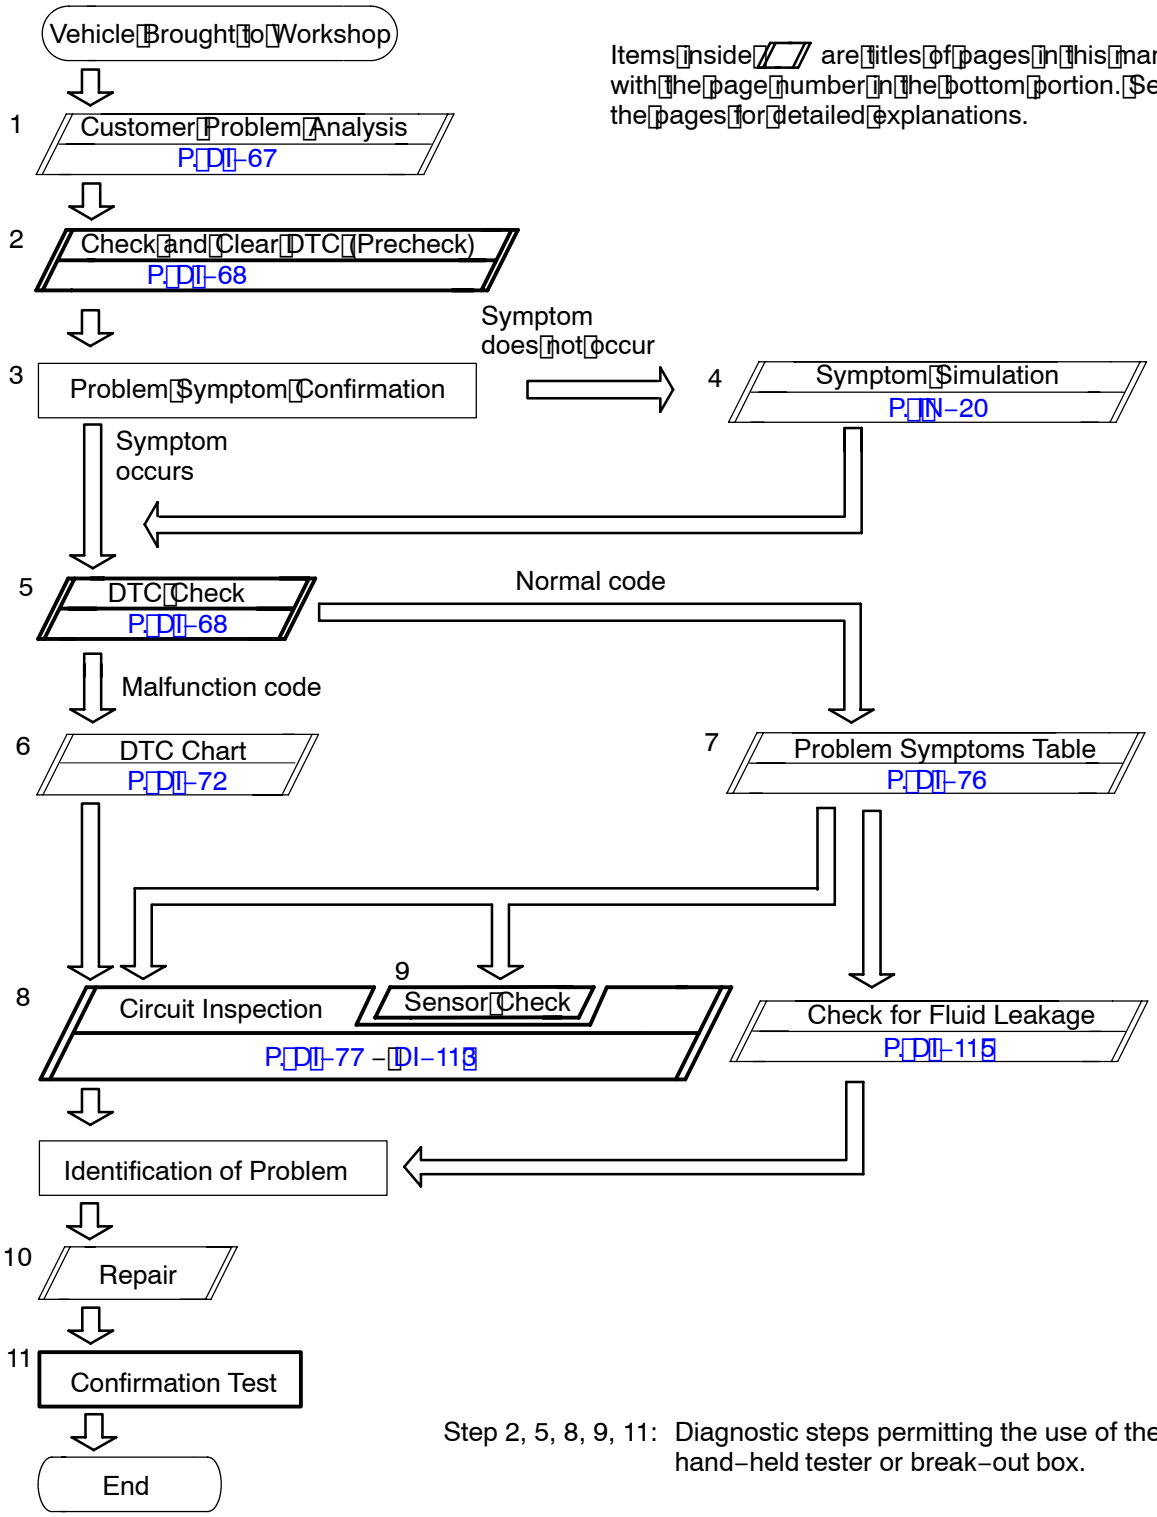

Items inside // are titles of pages in this manual, with the page number in the bottom portion. See the pages for detailed explanations.

Step 2, 5, 8, 9, 11: Diagnostic steps permitting the use of the hand–held tester or break–out box.

Fail safe function:
When a failure occurs in the ABS system, the ABS warning light is lit and the ABS operation is prohibited. In addition to this, when the failure which disables the EBD operation occurs, the brake warning light is lit as well and the EBD operation is prohibited.