
DI6QQ–01

Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting between terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

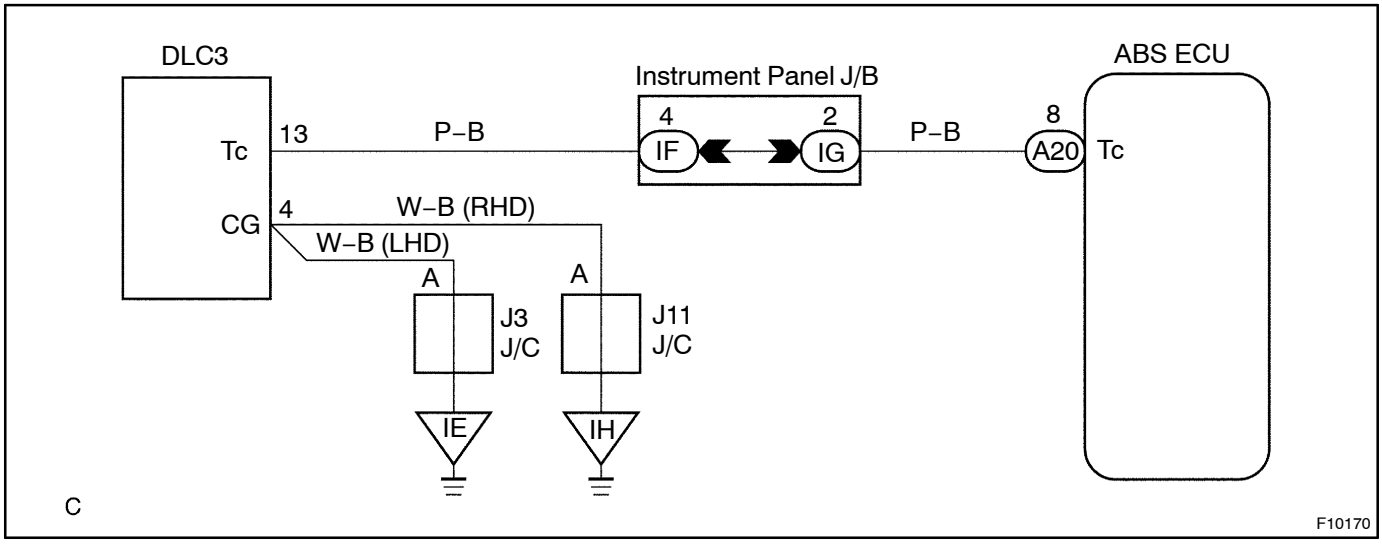

INSPECTION PROCEDURE

1	**Check voltage between terminals Tc and CG of DLC3.**

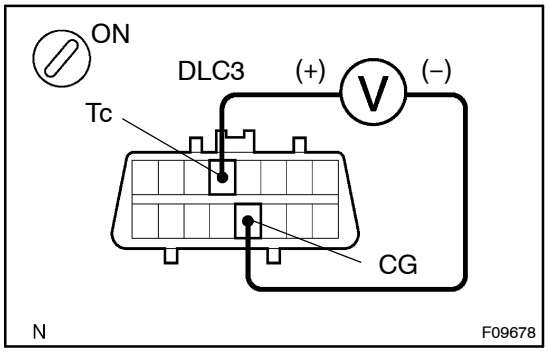

CHECK:

(a) Turn the ignition switch ON.

(b) Measure voltage between terminals Tc and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK	**If ABS warning light does not blink even after Tc and CG are connected, the ECU may be defective.**

NG

2	**Check for open and short circuit in harness and connector between ABS ECU and DLC3, DLC3 and body ground (See page IN–30).**

NG → **Repair or replace harness or connector.**

OK

Check and replace ABS ECU.