
DI6QY–02

Taillight relay circuit

CIRCUIT DESCRIPTION

Taillight relay will be ”ON” by operating the taillight switch. The transistor which activates the tail light relay has two sorts: one activates by the tail light switch for fail safe and the other activates by CPU.

WIRING DIAGRAM

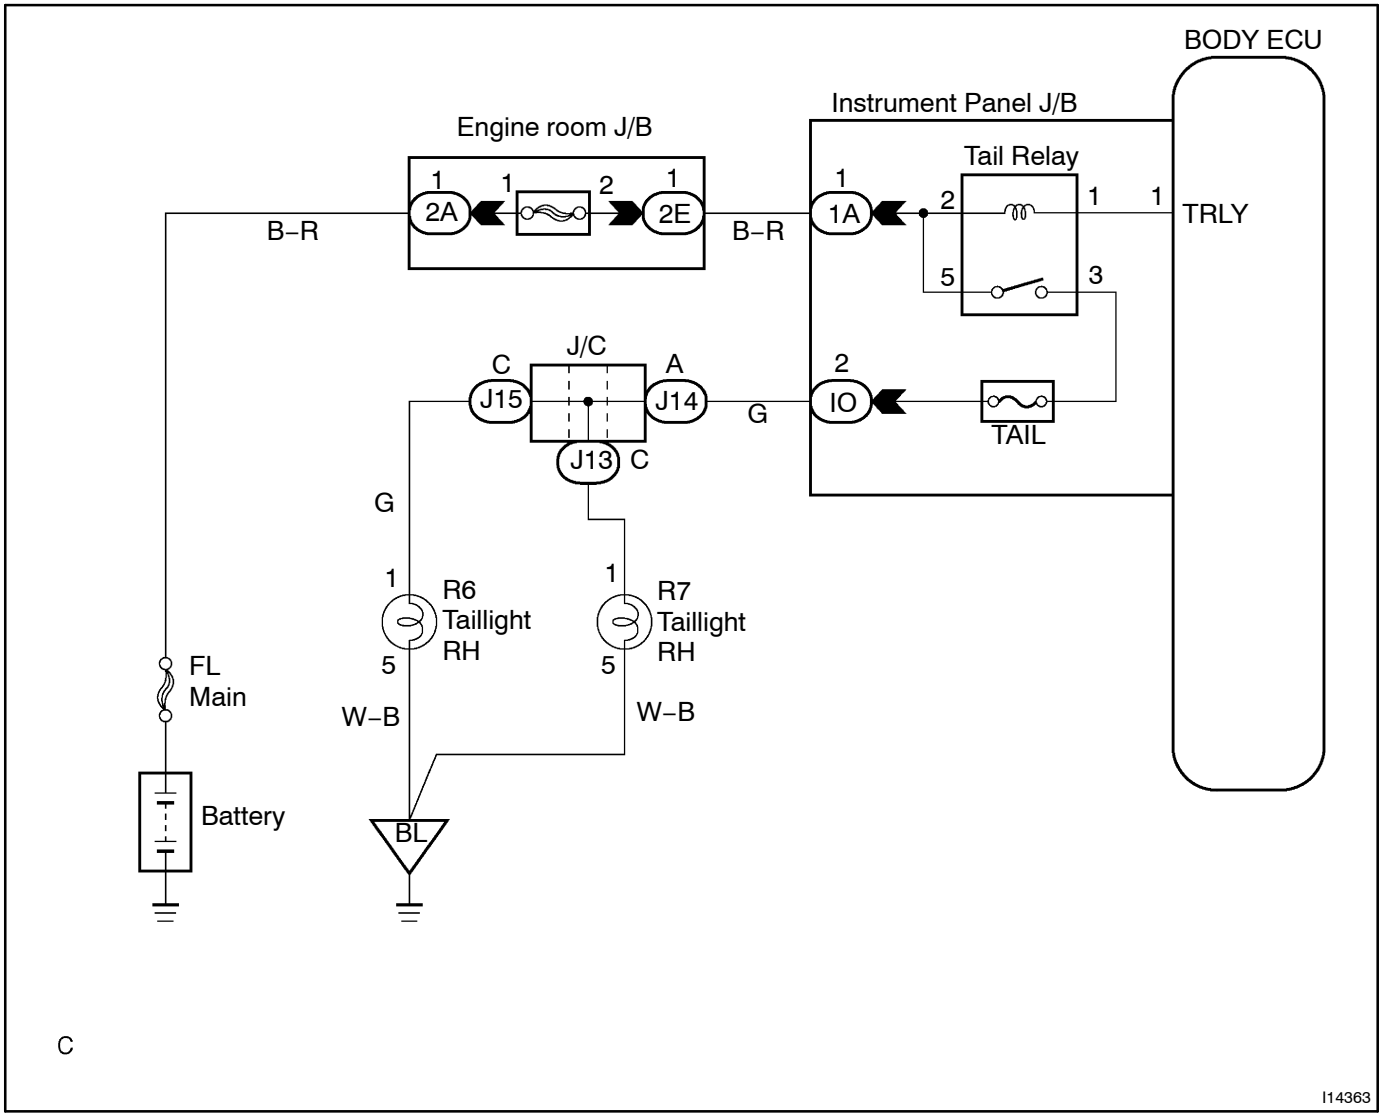

INSPECTION PROCEDURE

1	Check taillight relay (See page BE–18).

NG → Replace the taillight relay.

OK

2	Check wireharness and connector between taillight relay and Body ECU, battery and taillight relay. (See page IN–30)

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).