
DI6U3–01

Headlight dimmer relay circuit


CIRCUIT DESCRIPTION

Dimmer relay will be ”ON” by operating the headlight dimmer switch. The transistor which activates the dimmer relay has two sorts: one activates by the dimmer switch for fail safe and the other activates by CPU.

WIRING DIAGRAM

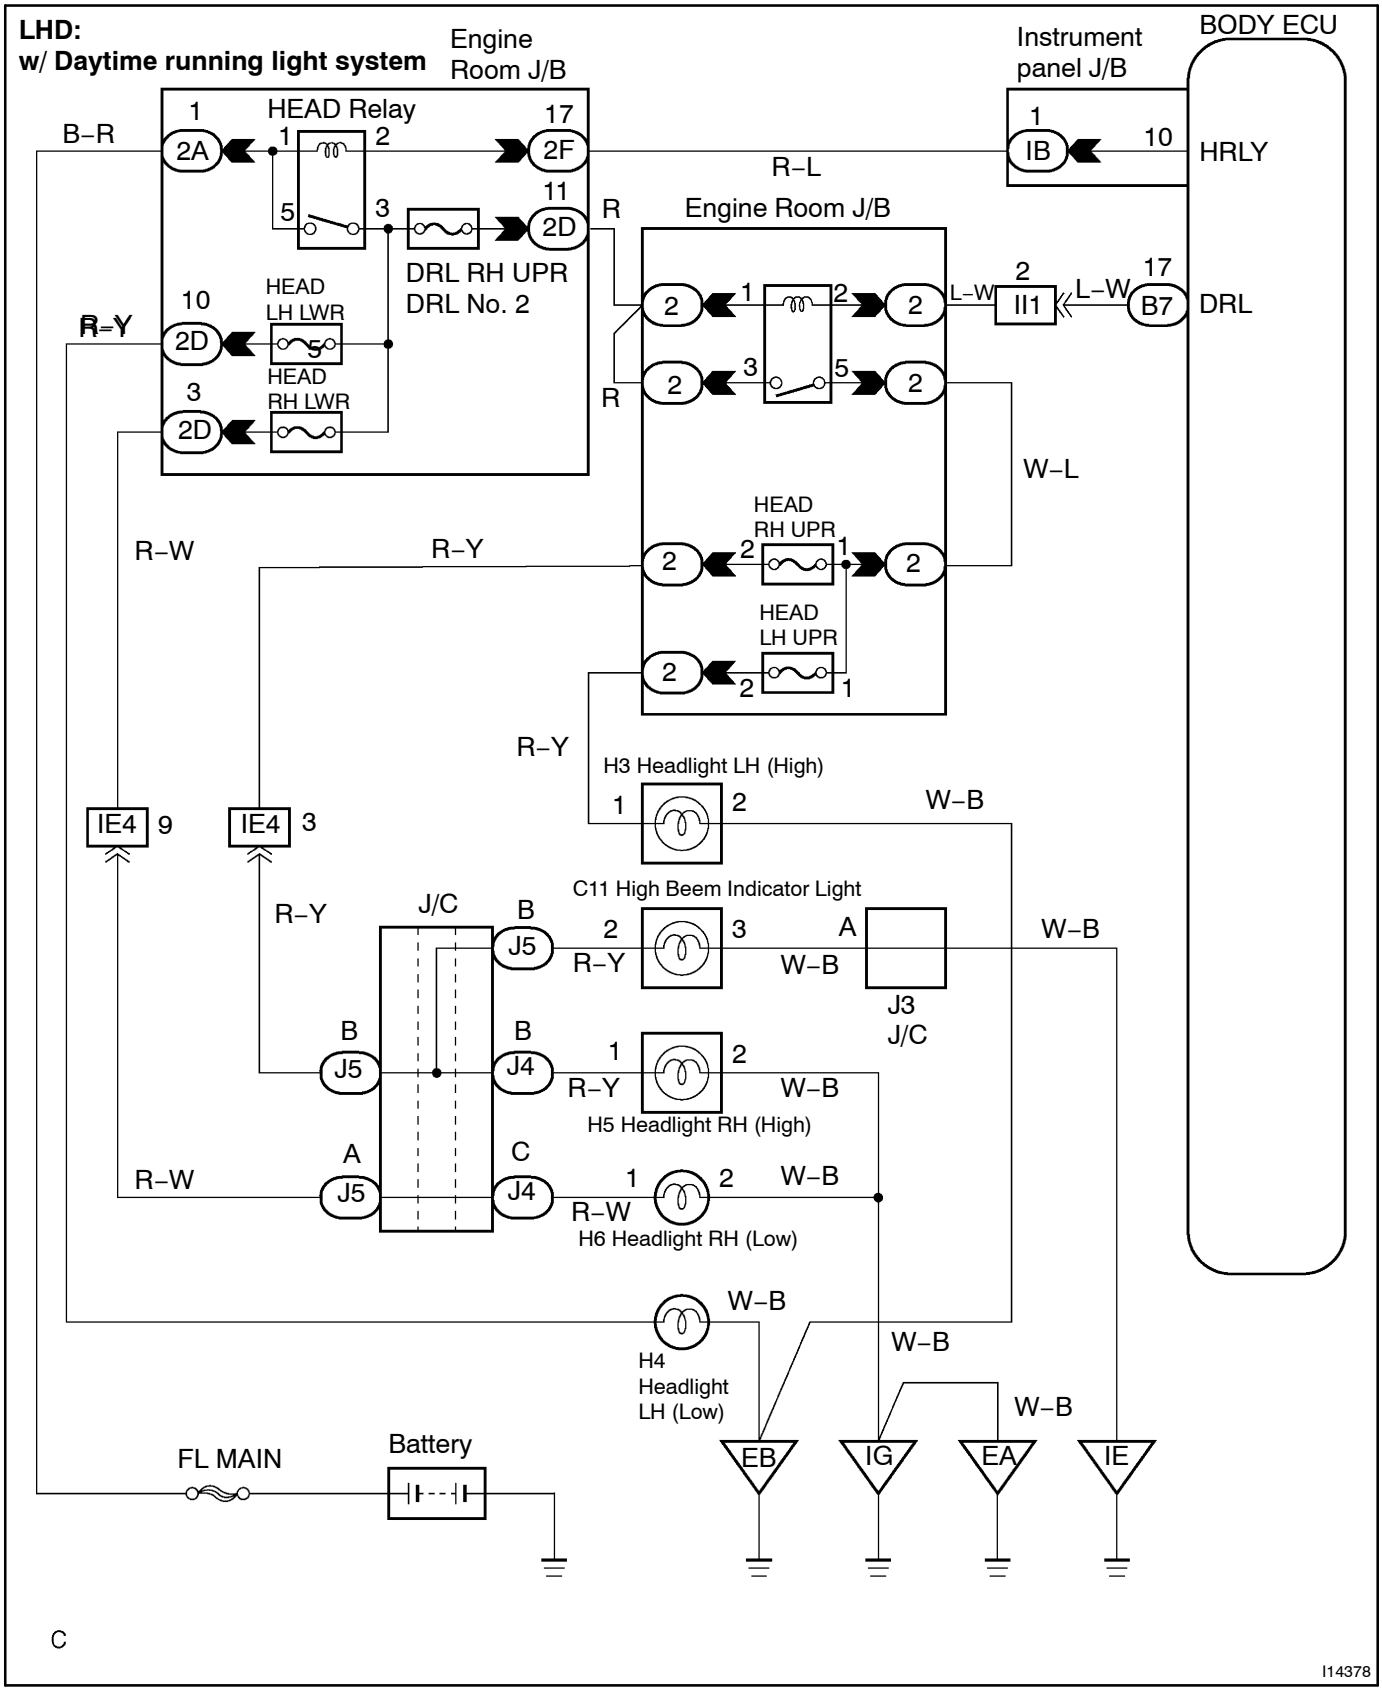

w/o Daytime running light system:

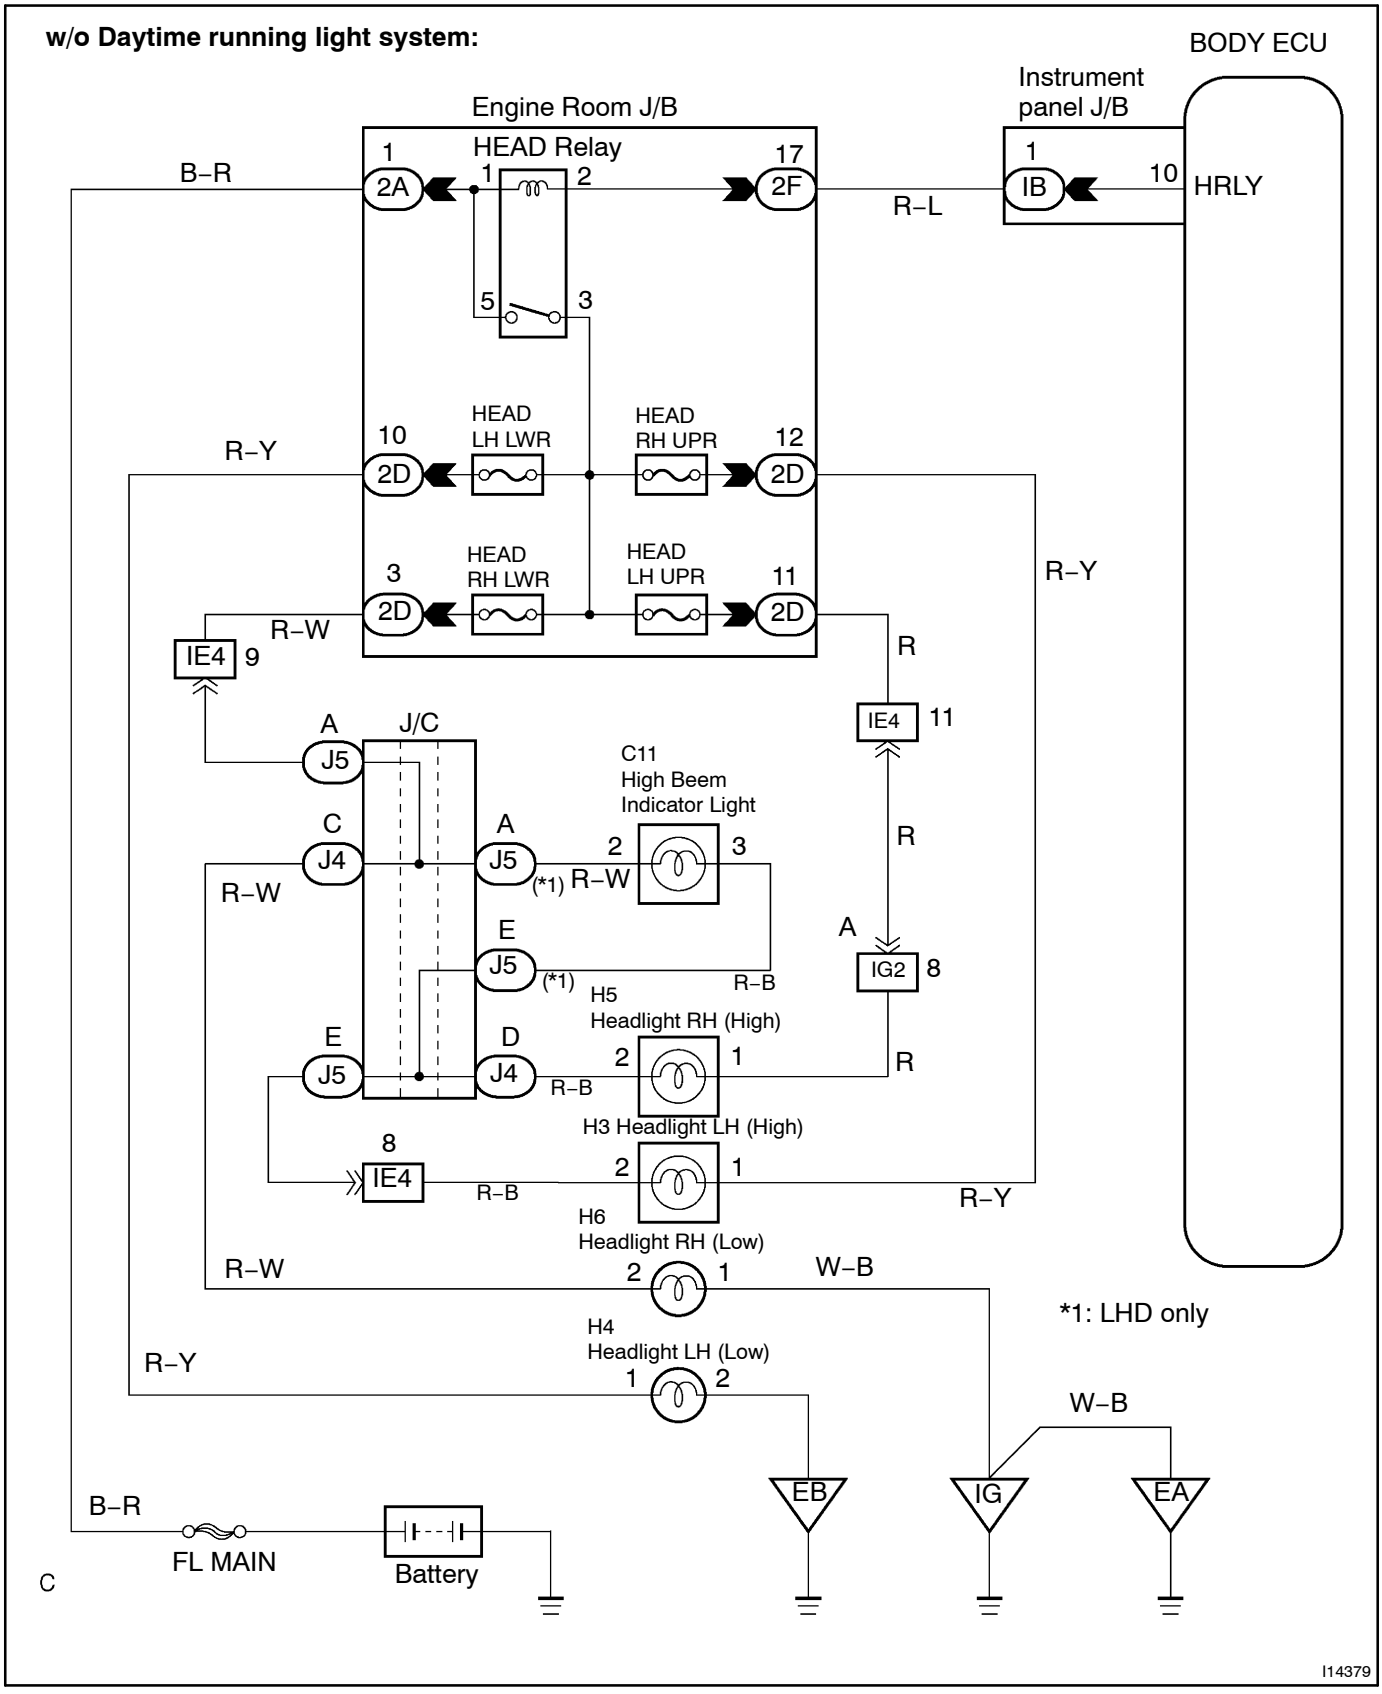

INSPECTION PROCEDURE

1	Check headlight dimmer relay (See page BE–18).

NG → Replace the headlight dimmer relay.

OK

2	Check wireharness and connector between headlight dimmer relay and Body ECU, battery and headlight dimmer relay (See page DI–367).

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).