
DI5VO–04

Light control switch circuit

CIRCUIT DESCRIPTION

This circuit defects the state of the light control switch.

WIRING DIAGRAM

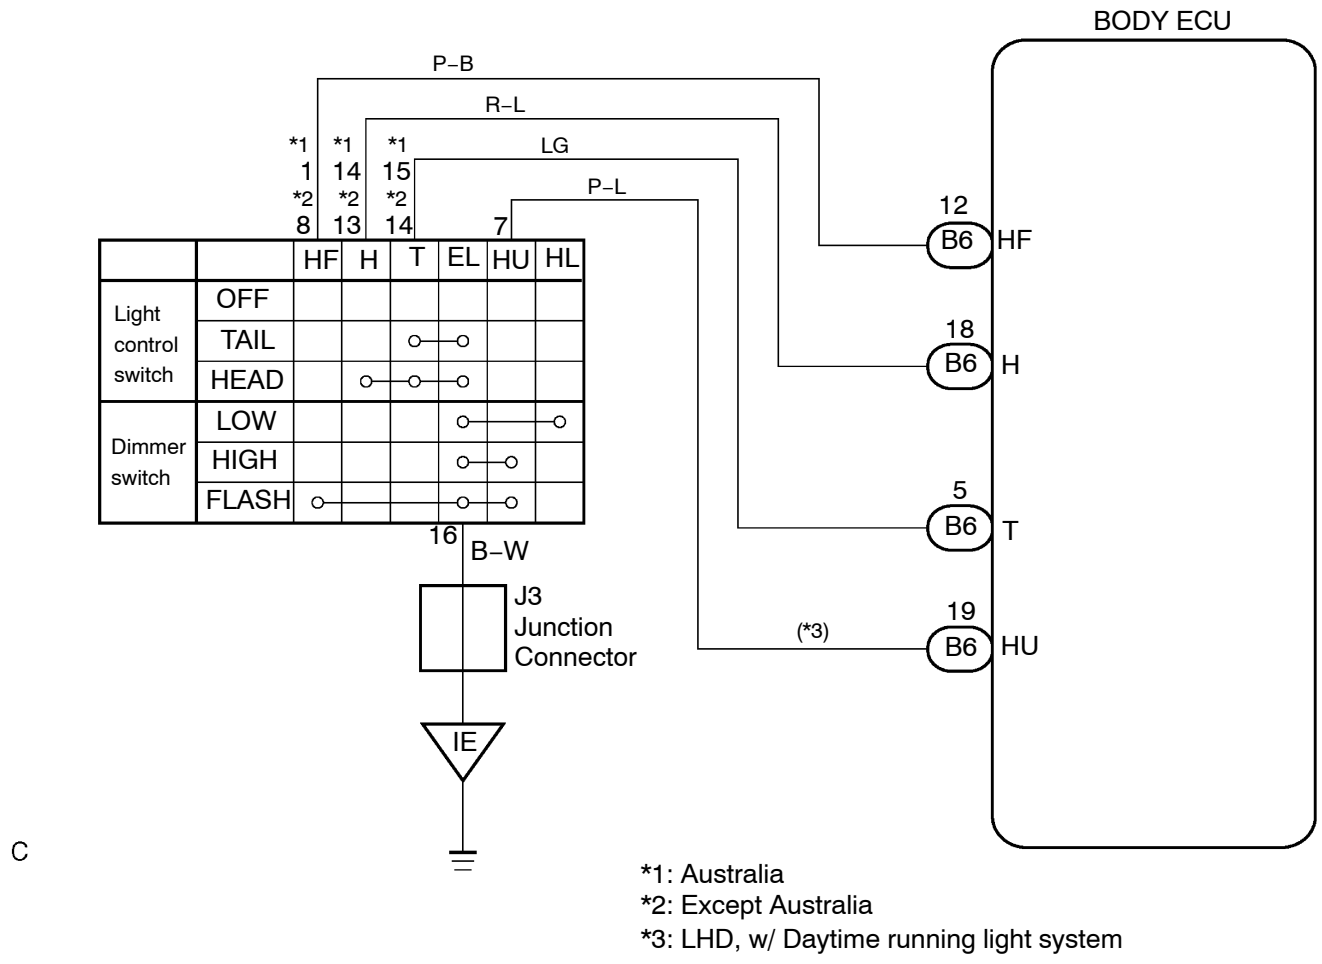

I13764

INSPECTION PROCEDURE

1	Check light control switch (See page BE–18).

NG → Replace the light control switch.

OK

2	Check wireharness and connector between light control switch and Body ECU (See page IN–30).

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).