
DI5VO–05

Headlight dimmer switch circuit

CIRCUIT DESCRIPTION

This circuit defects the state of the headlight dimmer switch.

WIRING DIAGRAM

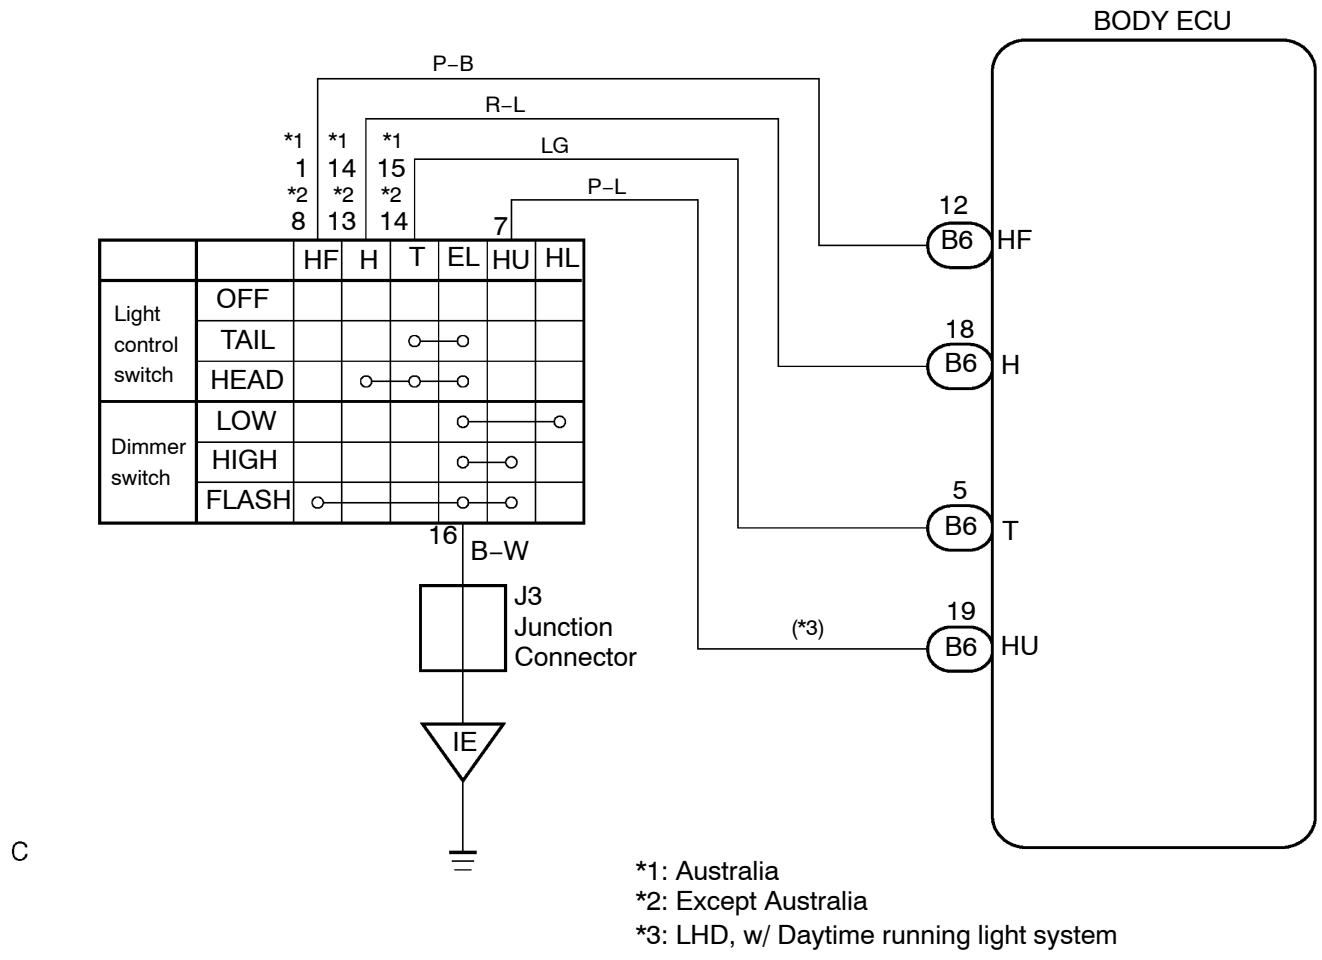

INSPECTION PROCEDURE

1	Check headlight dimmer switch (See page BE–18).

NG → Replace the headlight dimmer switch.

OK

2	Check wireharness and connector between headlight dimmer switch and Body ECU (See page IN–30).

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).