
DI6U4–01

Front fog light relay circuit

WIRING DIAGRAM

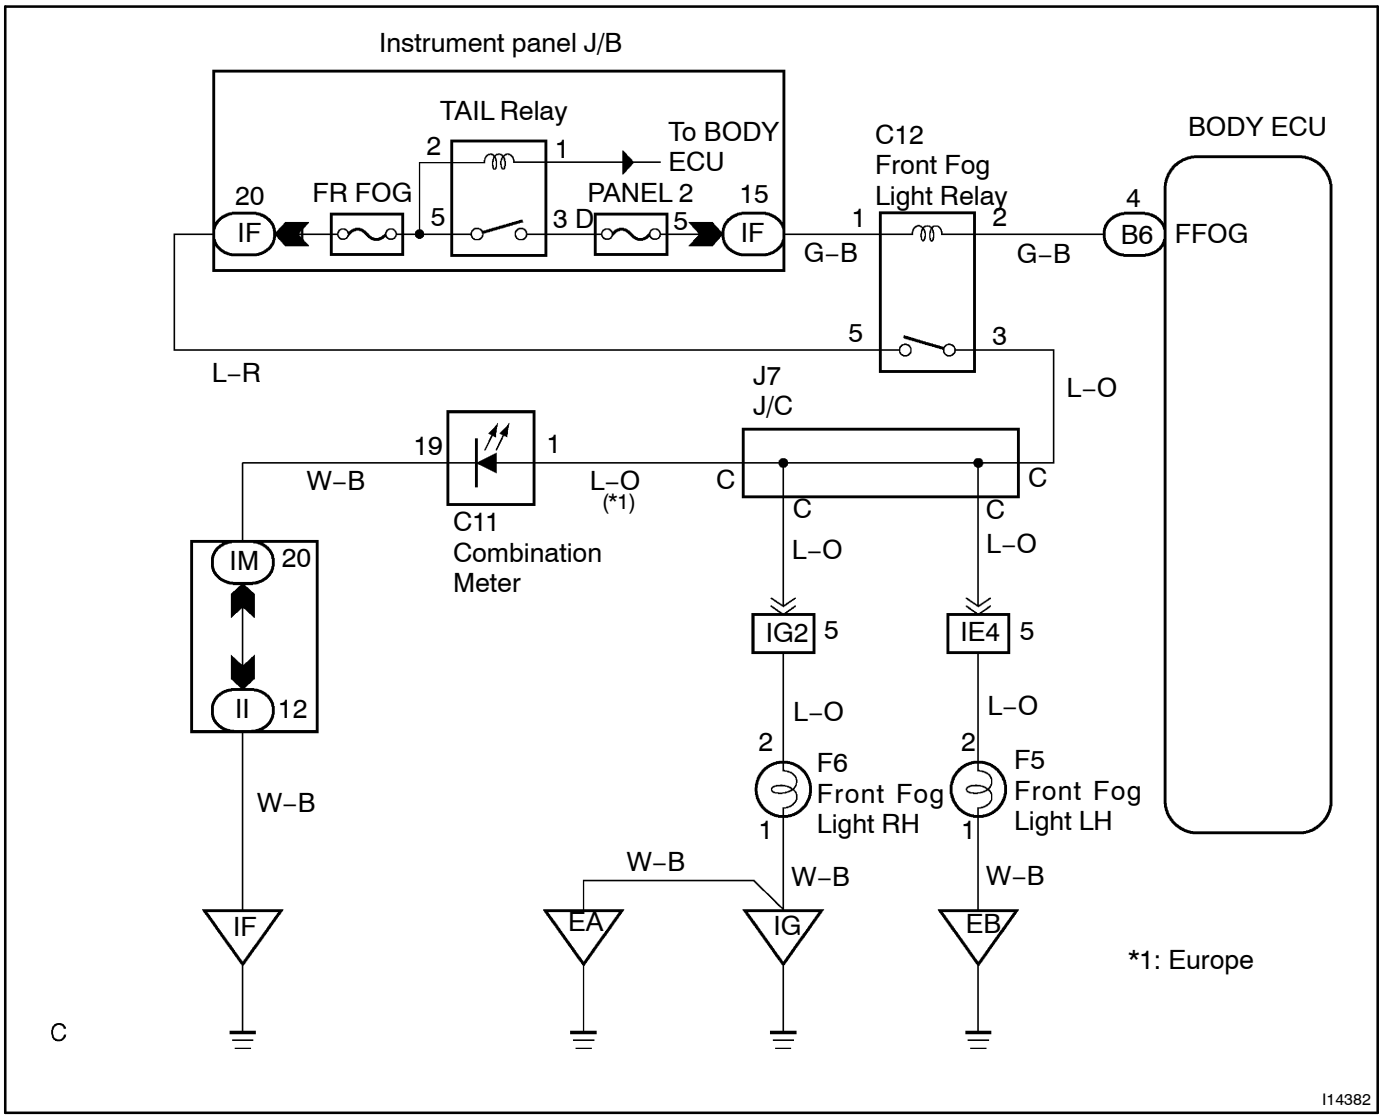

INSPECTION PROCEDURE

1	Check front fog light relay (See page BE–25).

NG → Replace the front fog light relay.

OK

2	Check wire harness and connector between front fog light relay and Body ECU (See page DI–367).

NG → Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).