
DI6U6–01

Rear fog light relay circuit

WIRING DIAGRAM

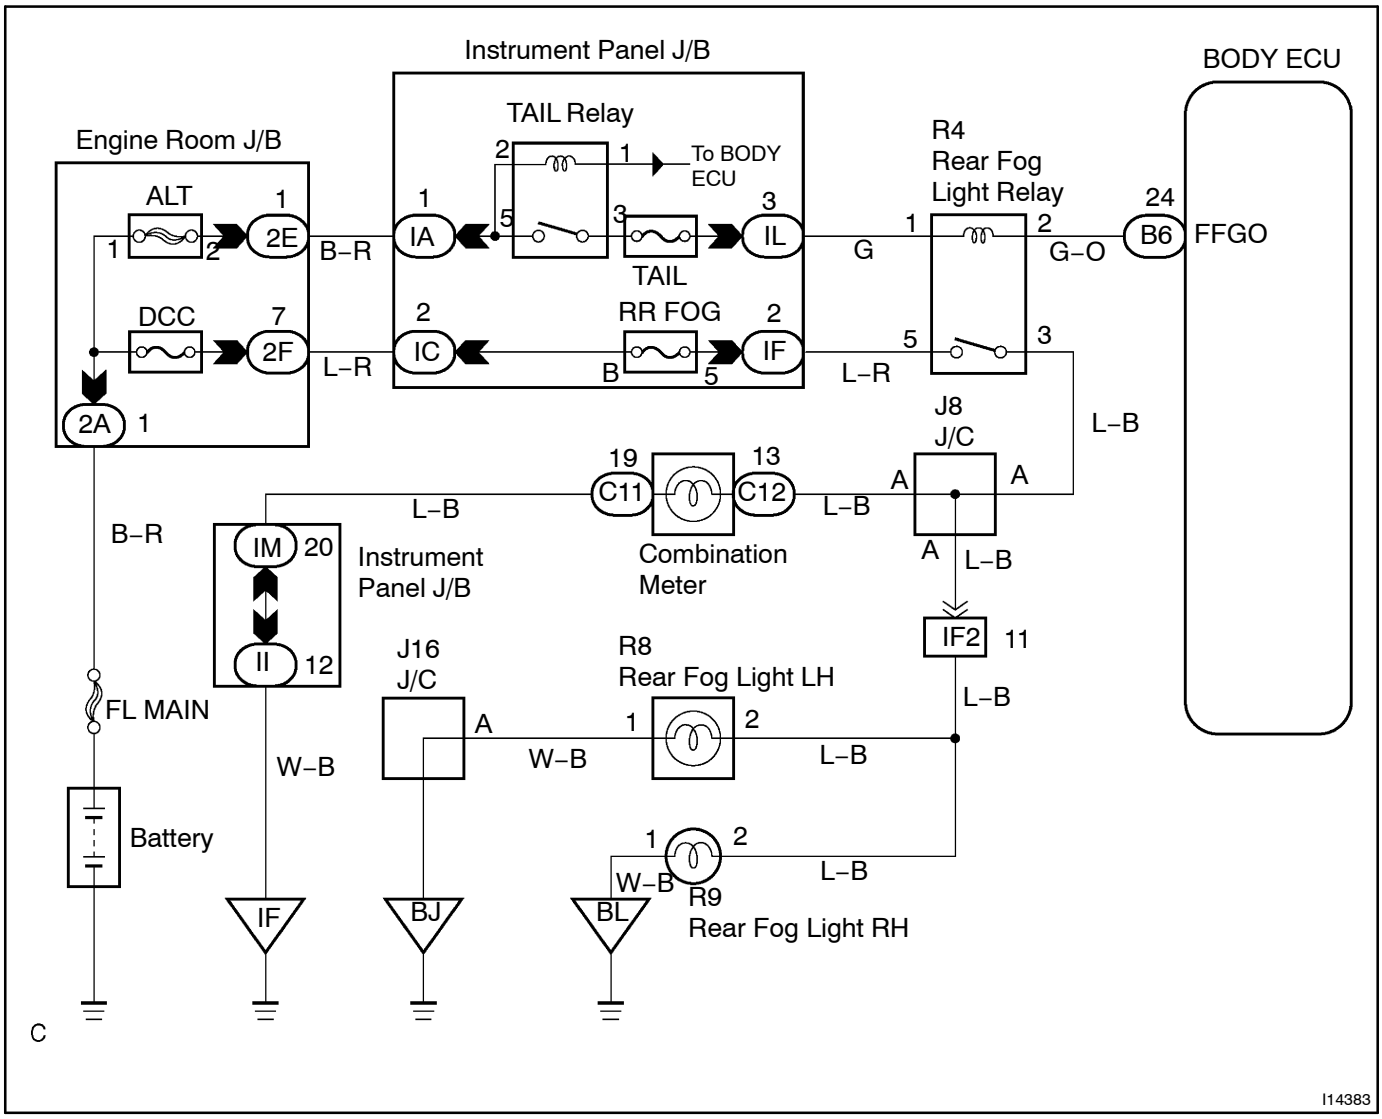

INSPECTION PROCEDURE

1	Check rear fog light relay (See page BE–25).

NG → Replace the rear fog light relay.

OK

2	Check wire harness and connector between rear fog light relay and Body ECU (See page IN–30).

NG → Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI–355)