
DI6U7–01

Turn signal flasher relay (Exept Australia) circuit

WIRING DIAGRAM

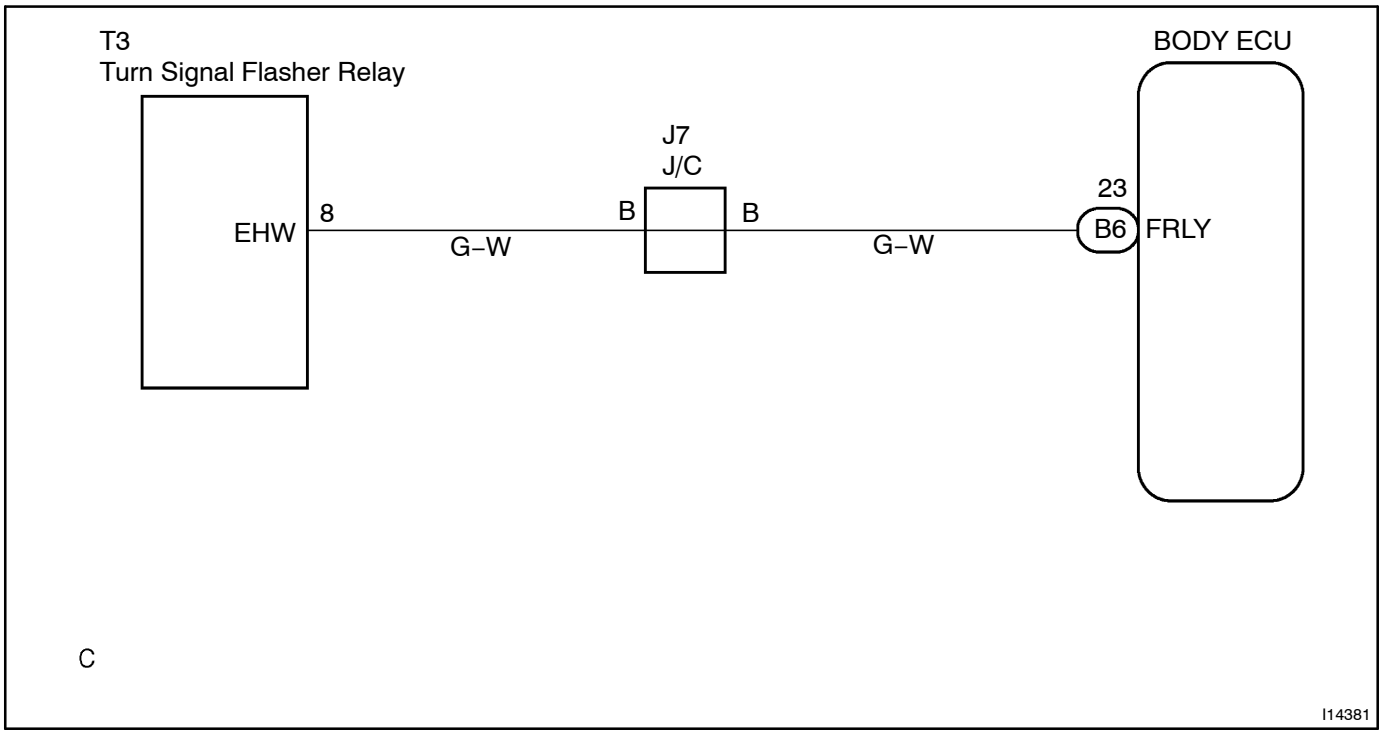

INSPECTION PROCEDURE

1	Check turn signal flasher relay (See page BE–28).

NG → Replace the turn signal flasher relay.

OK

2	Check wire harness and connector between turn signal flasher relay and Body ECU (See page DI–367).

NG → Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI–355)