
DI6U8–01


Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU will make the interior light, ignition light, and courtesy light come on.

WIRING DIAGRAM

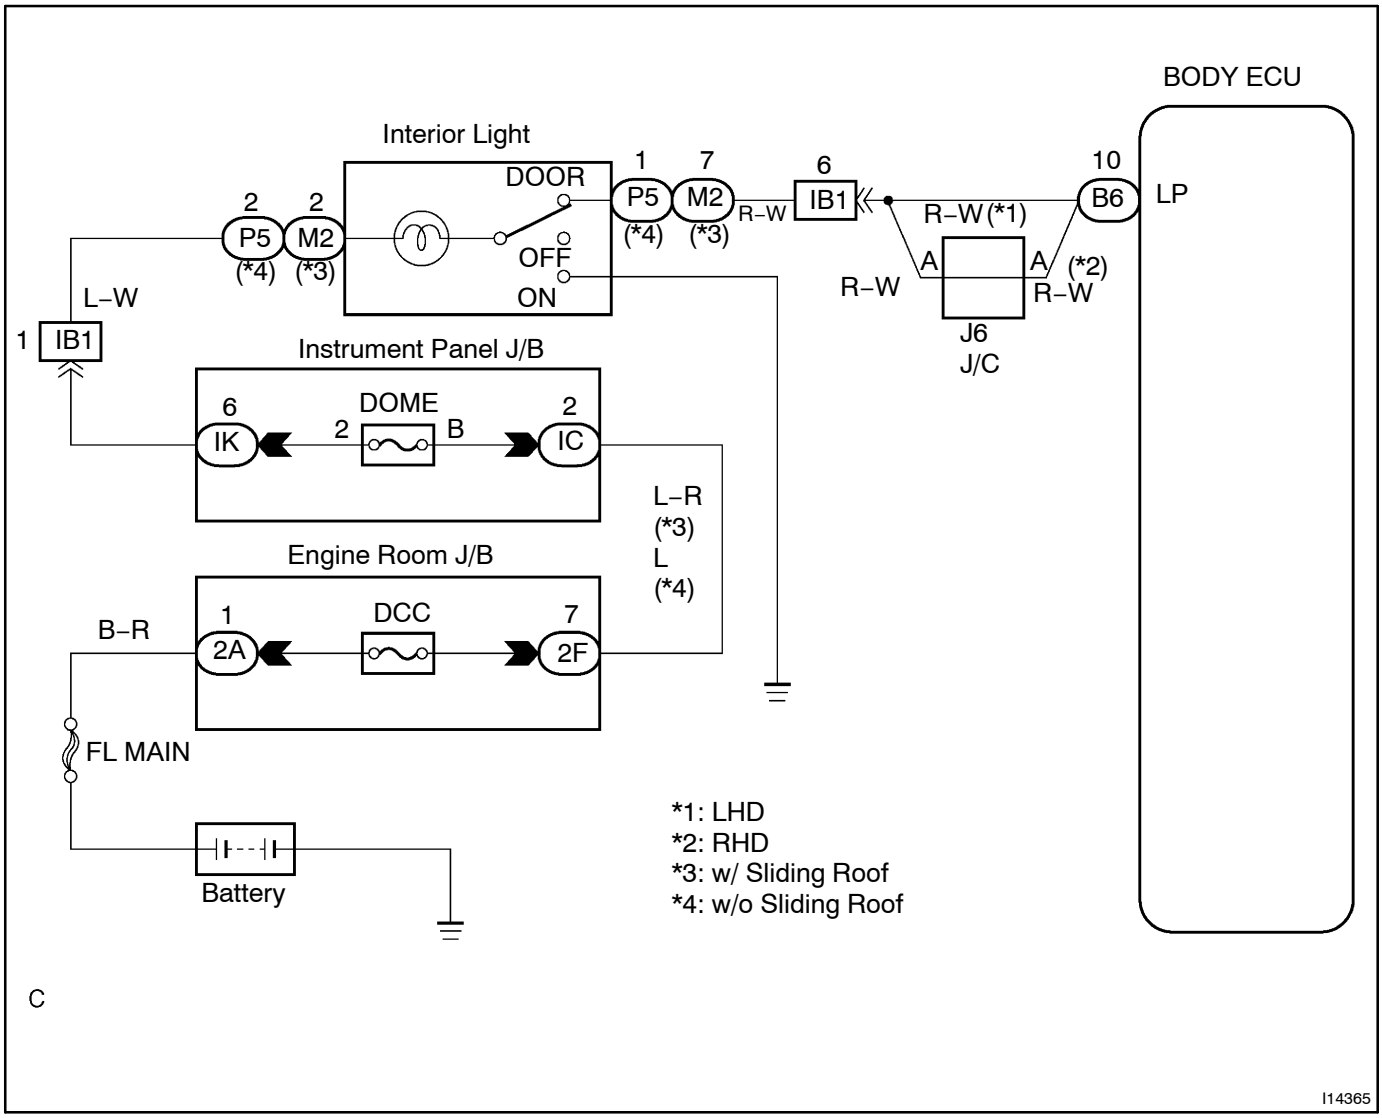

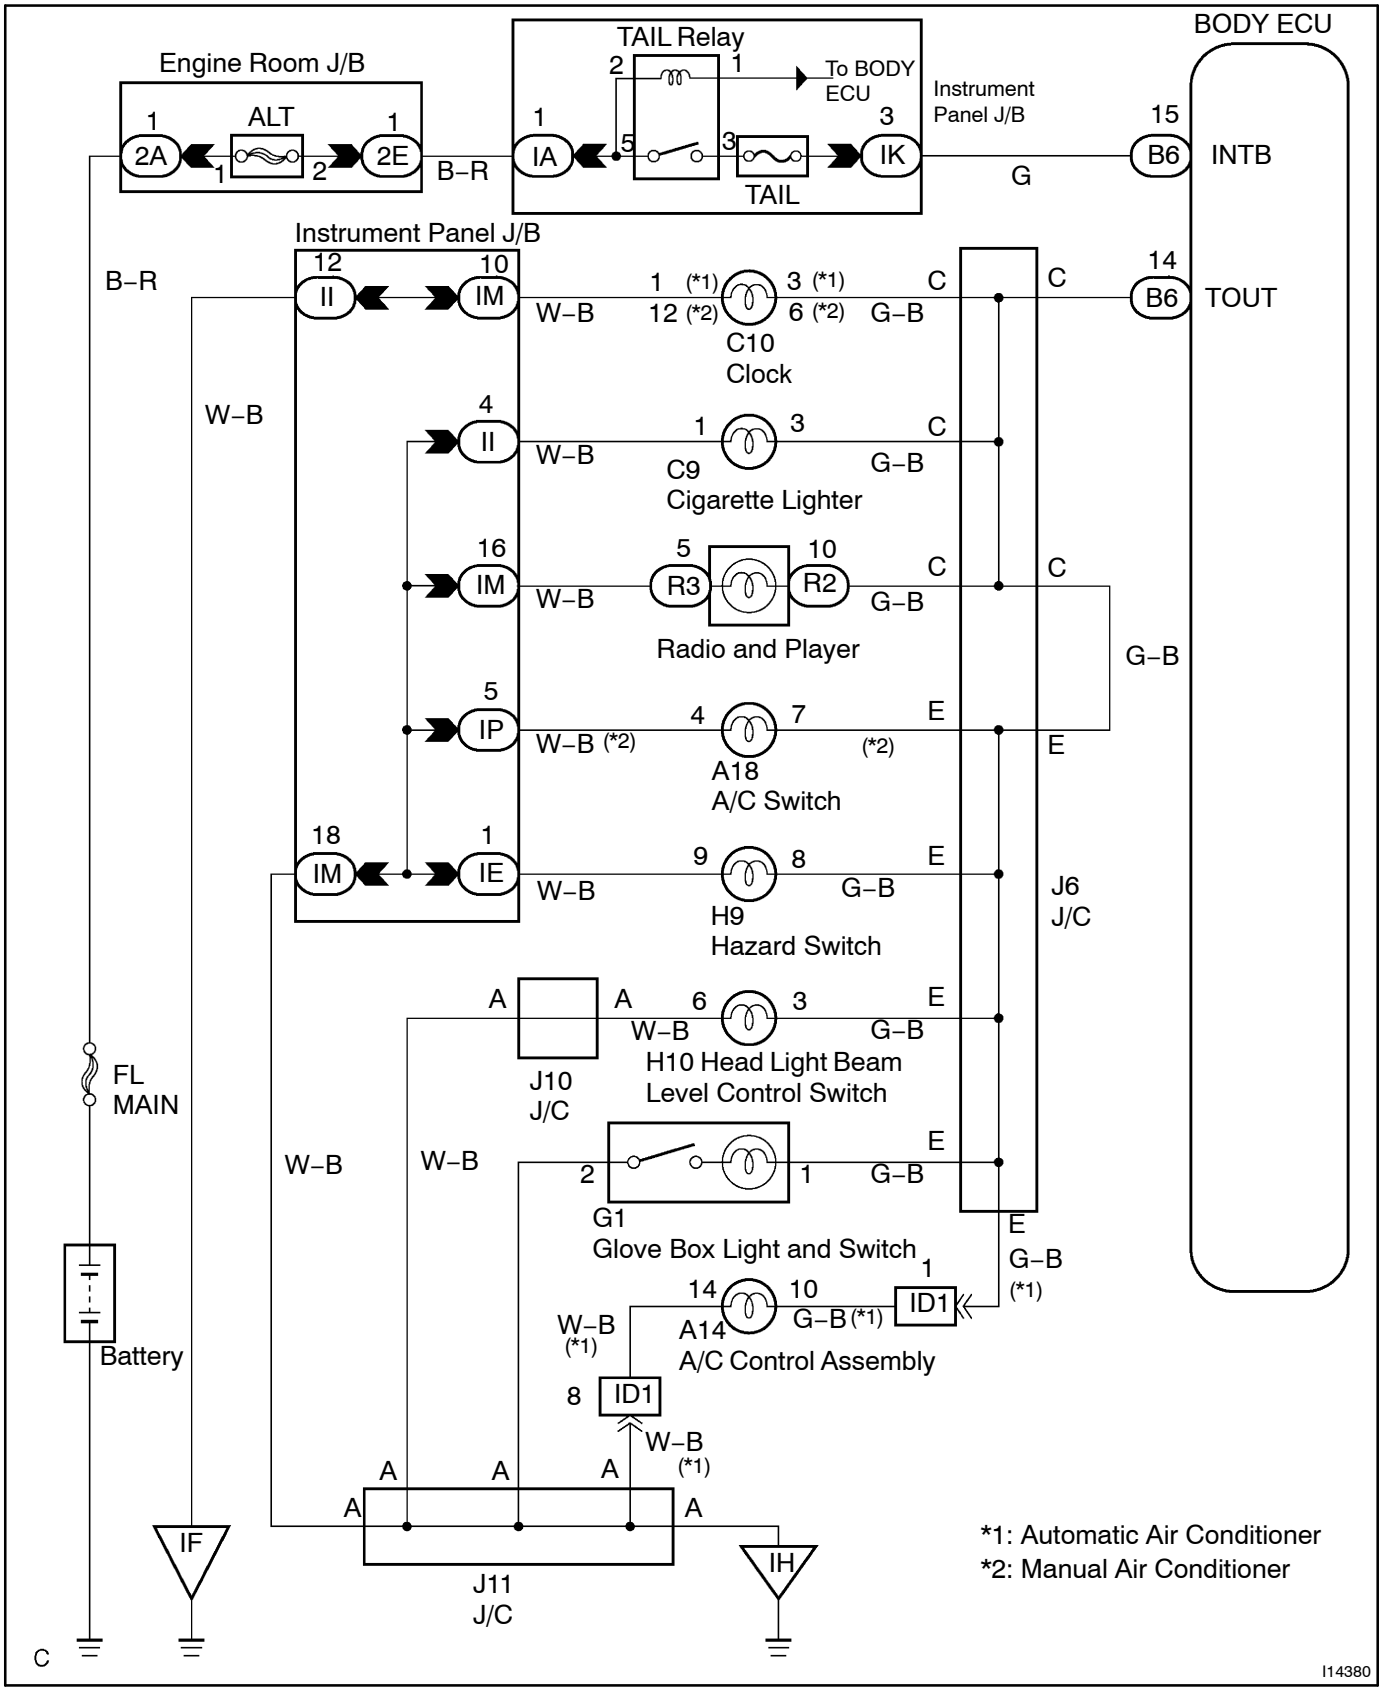
BODY ECU
TAIL Relay
To BODY ECU
Engine Room J/B
Instrument Panel J/B
ALT
2A
2E
IA
IK
B6
INTB
TAIL
B–R
G
Instrument Panel J/B
TOUT
C10
Clock
W–B
G–B
C9
Cigarette Lighter
R3
R2
Radio and Player
A18
A/C Switch
H9
Hazard Switch
J6
J/C
J10
J/C
H10 Head Light Beam
Level Control Switch
G1
Glove Box Light and Switch
ID1
A14
A/C Control Assembly
J11
J/C
IF
IH
FL
MAIN
Battery
*1: Automatic Air Conditioner
*2: Manual Air Conditioner
I14380

INSPECTION PROCEDURE

1	Check DOME fuse.

NG → Replace the fuse.

OK ↓

2	Check illumination light.

NG → Replace the failure light.

OK ↓

3	Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light. (See page IN–30)

NG → Repair or replace wireharness or connector.

OK ↓

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).