
DI6R2–02

Buckle switch circuit

CIRCUIT DESCRIPTION

When the buckle switch of the driver's seat is ON with the ignition switch ON, the body ECU sends a signal to make the seat belt warning light for the driver's seat light up and to sound a buzzer.
When the buckle switch of the passenger seat is ON and the passenger seat belt occupant detecting sensor is ON with the ignition switch ON, the body ECU sends a signal to make the seat belt warning light for the passenger seat light up.

WIRING DIAGRAM

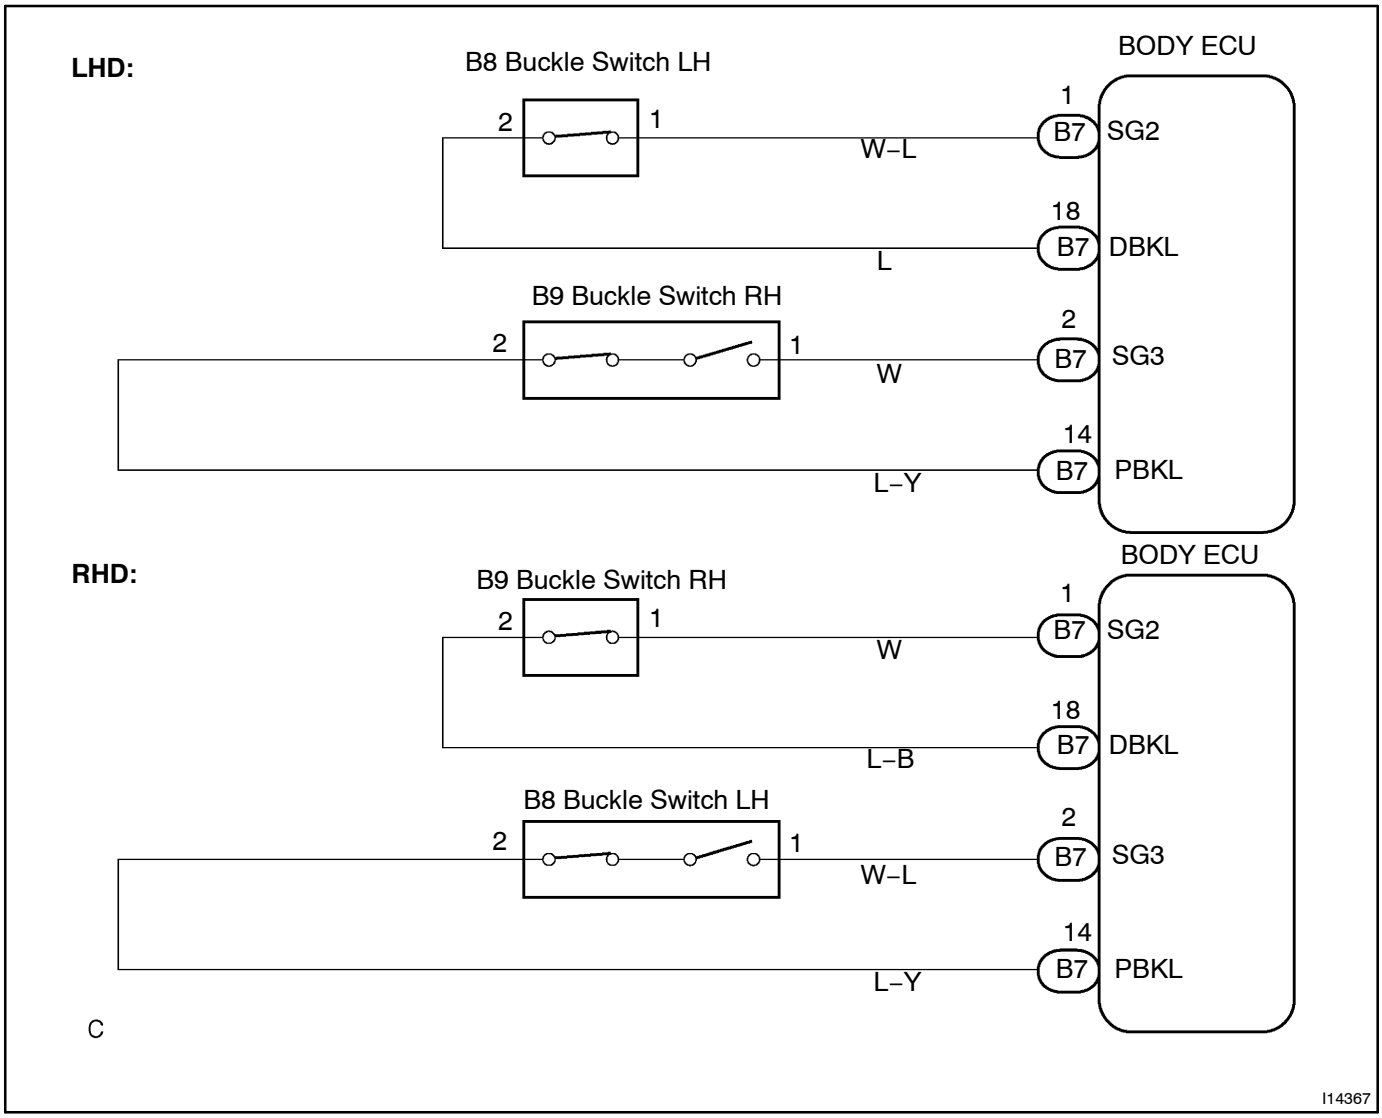

INSPECTION PROCEDURE

1	Check buckle switch. (See page BE–52)

NG → Replace the buckle switch.

OK

2	Check wire harness and connector between buckle switch and body ground. (See page IN–30)

NG → Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI–355)