
Door lock motor circuit

CIRCUIT DESCRIPTION

When the door switch is set to LOCK, the body ECU outputs a signal to lock all of the doors.

WIRING DIAGRAM

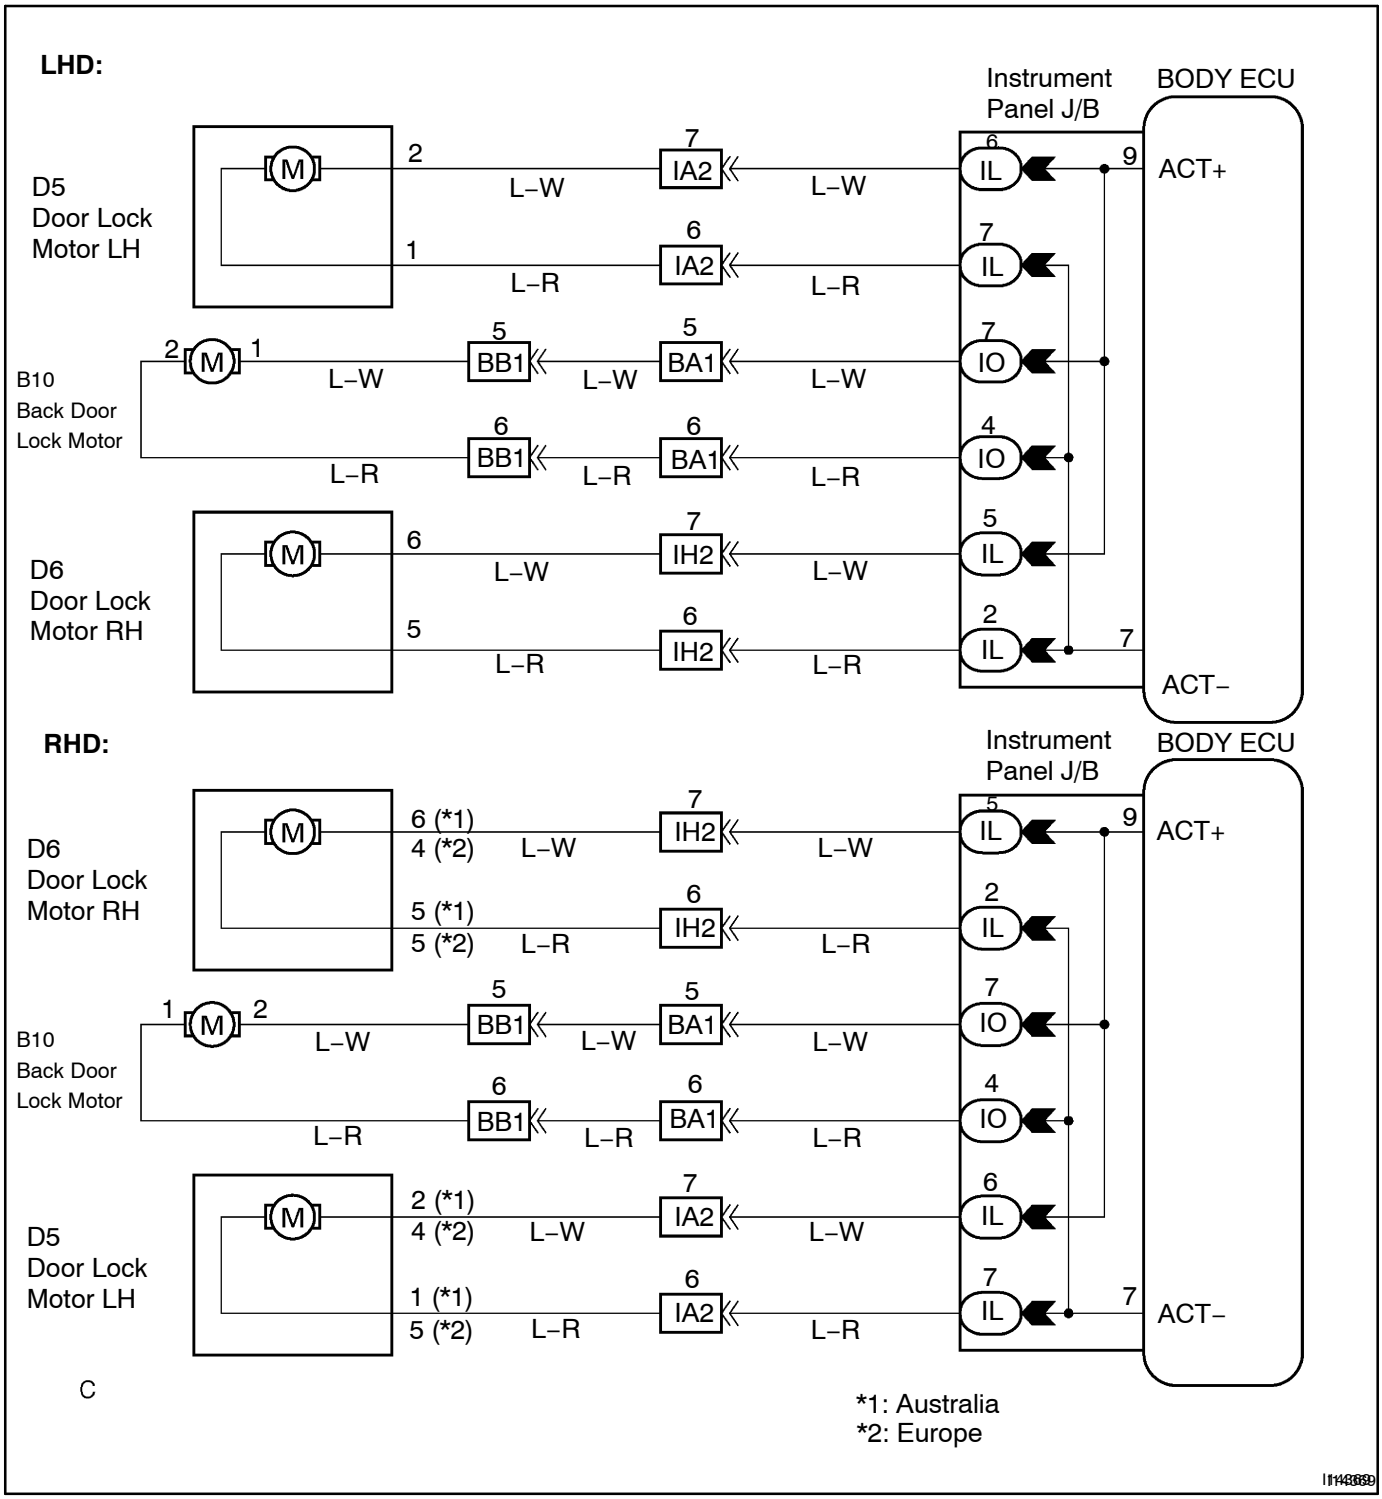

INSPECTION PROCEDURE

1	Check door lock motor (See page BE–63).

NG → Replace the door lock motor.

OK

2	Check wireharness and connector between door lock motor and body ECU (See page IN–30).

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).