
DI6R7–02

Door courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

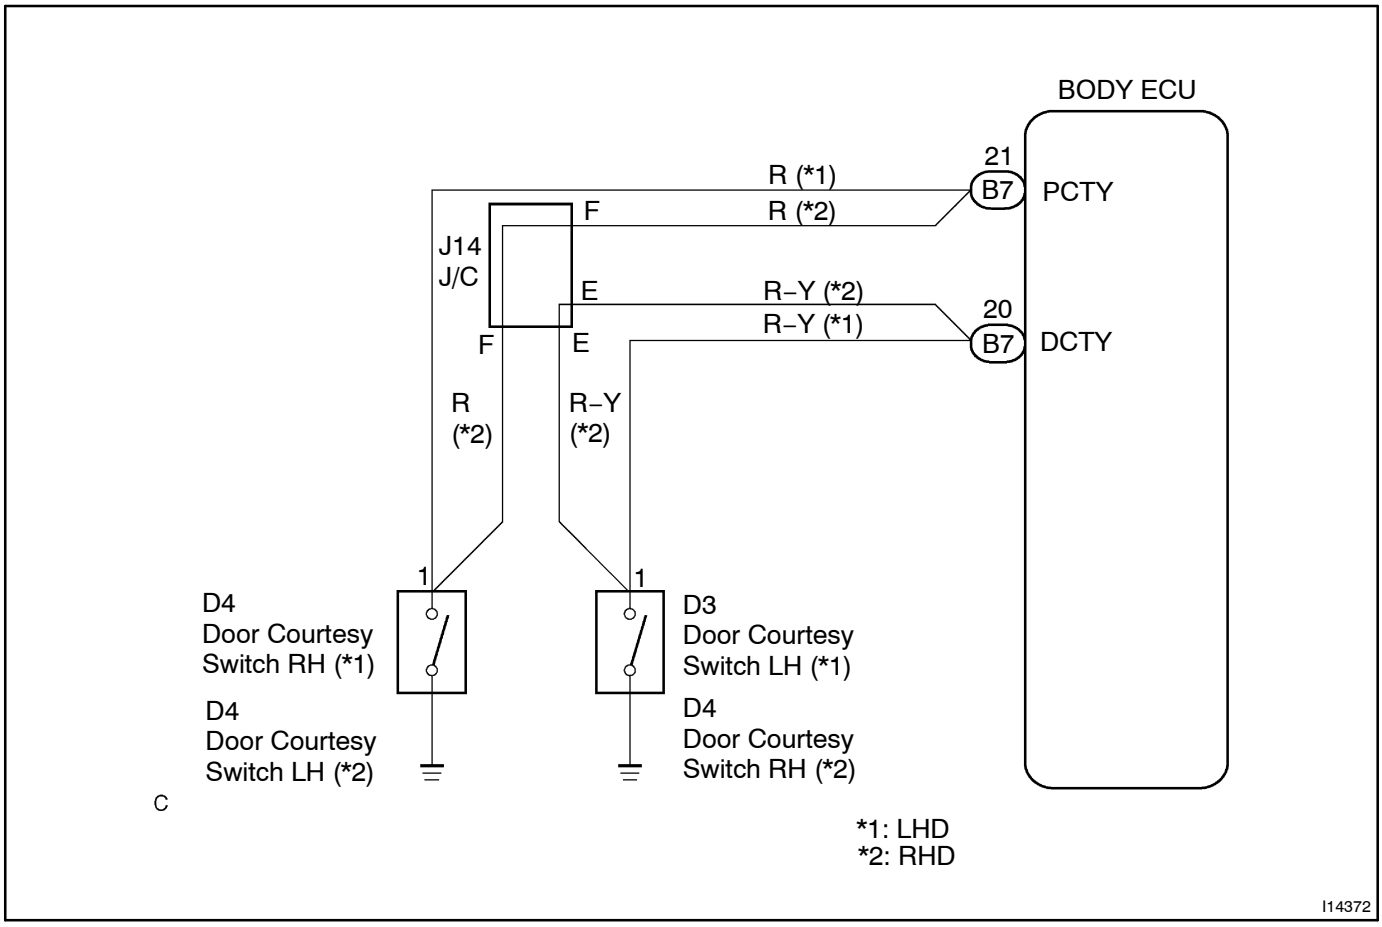

INSPECTION PROCEDURE

1	Check courtesy switch (See page BE–31).

NG → Replace the courtesy switch.

OK

2	Check that there is a grounding malfunction caused by looseness of the tighten screw.

NG → Install screw.

OK

3	Check wireharness and connector between courtesy light and body ECU, courtesy switch and body ECU. (See page IN–30)

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).