
DI6R8–02

Luggage courtesy switch circuit

CIRCUIT DESCRIPTION

The luggage courtesy switch goes on when luggage compartment door is opened and goes off when luggage compartment door is closed.

WIRING DIAGRAM

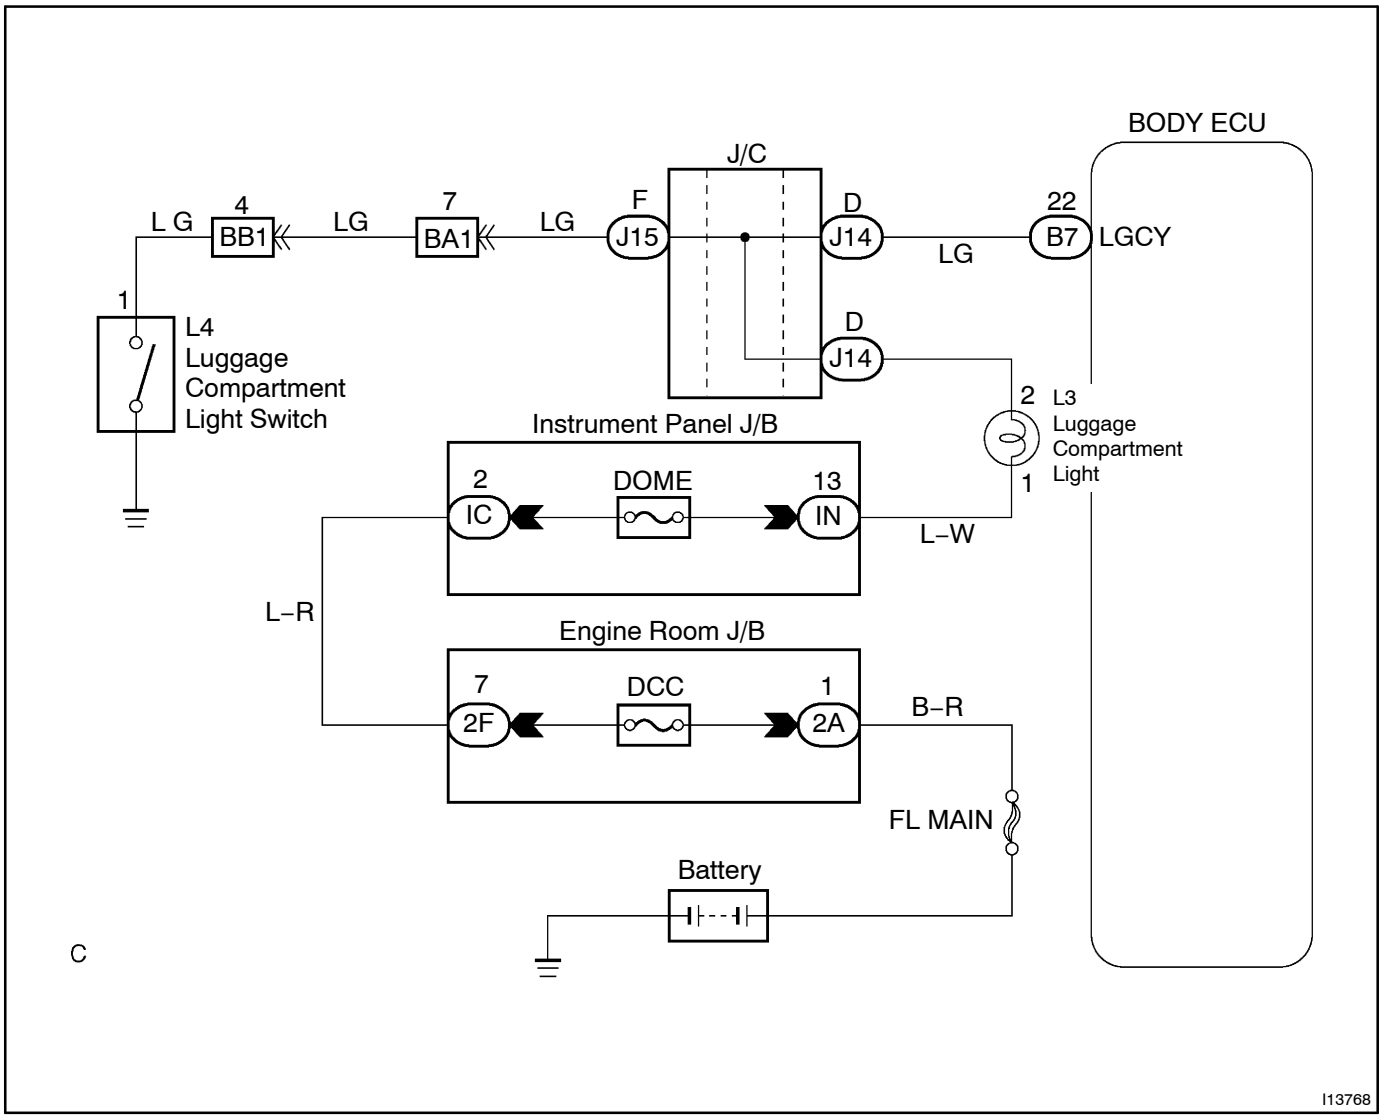

INSPECTION PROCEDURE

1	Check luggage courtesy switch (See page BE–31).

NG → Replace the luggage courtesy switch.

OK

2	Check wire harness and connector between luggage courtesy switch and Body ECU. (See page IN–30)

NG → Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI–355)