
DI6RB–02

Fuel Sender gauge circuit

CIRCUIT DESCRIPTION

This circuit detects sensor signals from the fuel sender gauge.

WIRING DIAGRAM

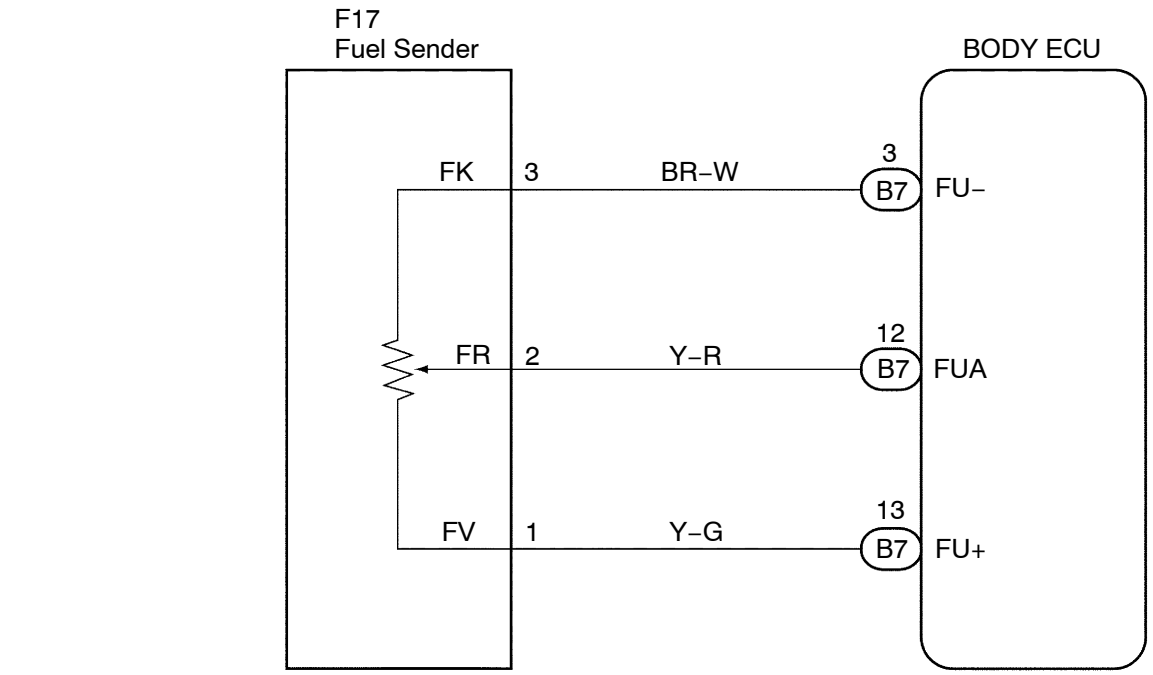

INSPECTION PROCEDURE

1	Check fuel sender gauge (See page BE–52).

NG → Replace the fuel sender gauge.

OK

2	Check wireharness and connector between fuel sender gauge and Body ECU. (See page IN–30)

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).