
DI2AJ–06

Brake fluid level warning switch circuit

CIRCUIT DESCRIPTION

To detect abnormality of the brake fluid level.

WIRING DIAGRAM

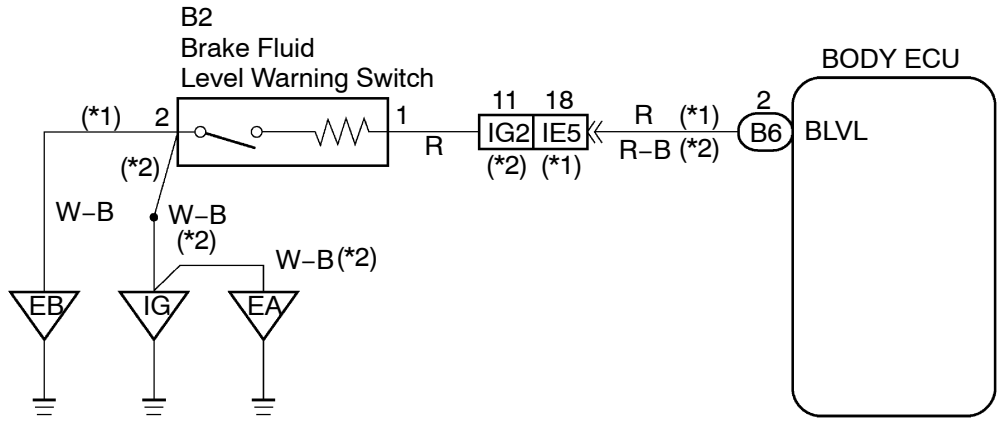

C

*1: LHD
*2: RHD

I14374

INSPECTION PROCEDURE

1	Check brake fluid level warning switch. (See page BE–52).

NG → Replace the brake fluid level warning switch.

OK

2	Check wireharness and connector between brake fluid level warning switch and body ECU. (See page IN–30)

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI–355)