
DI5W2–03

Parking brake switch circuit

CIRCUIT DESCRIPTION

This circuit detects the state of the parking brake switch.

WIRING DIAGRAM

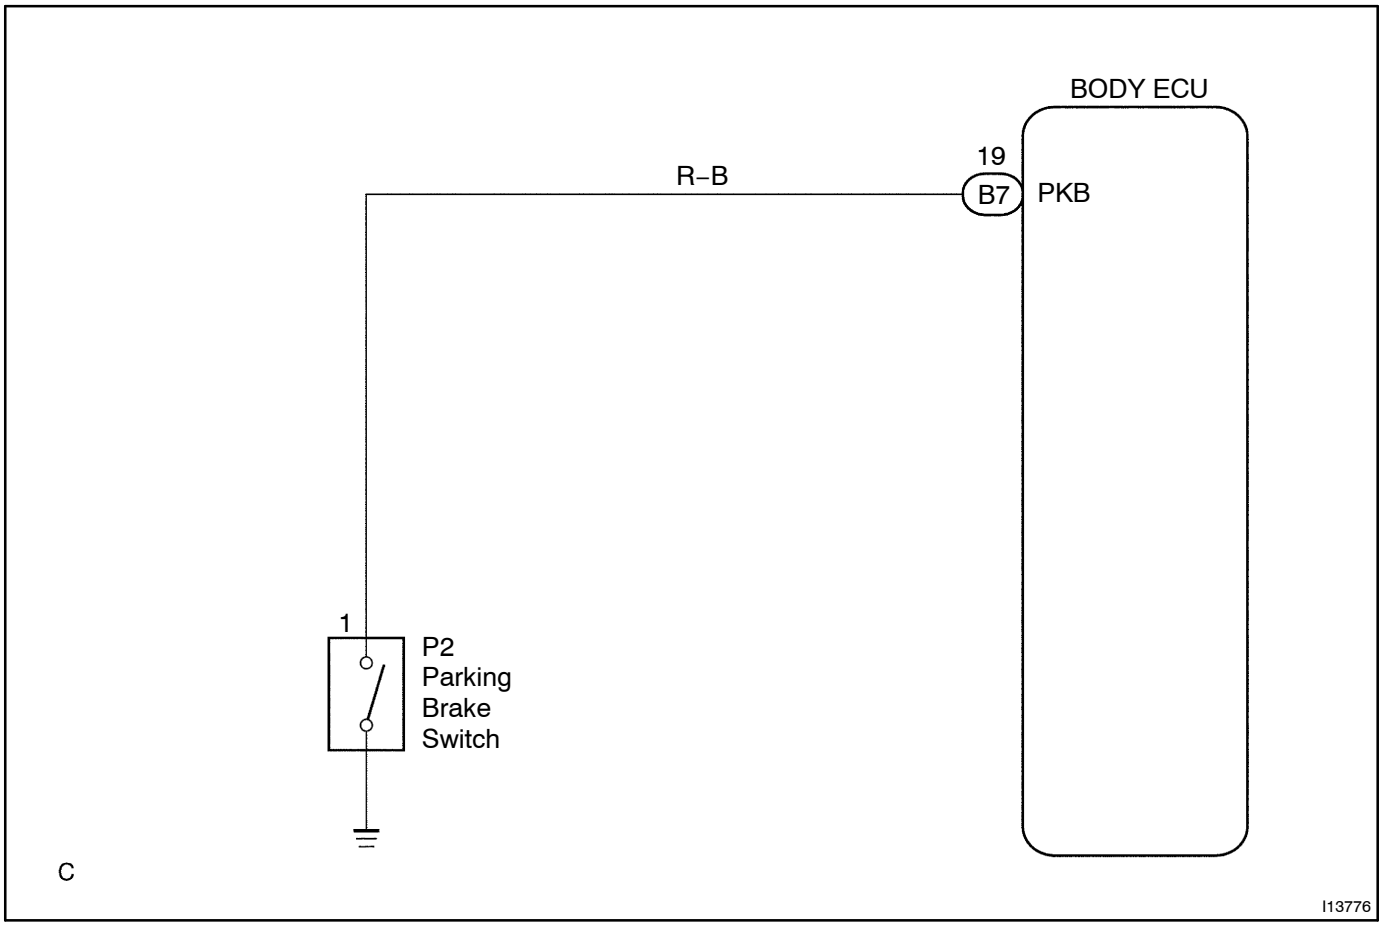

INSPECTION PROCEDURE

1	Check parking brake switch (See page BE–52).

NG → Replace the parking brake switch.

OK

2	Check wireharness and connector between parking brake switch and Body ECU (See page IN–30).

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).