
DI29Z–05

O/D main switch circuit

CIRCUIT DESCRIPTION

Body ECU detect the state O/D main switch.

WIRING DIAGRAM

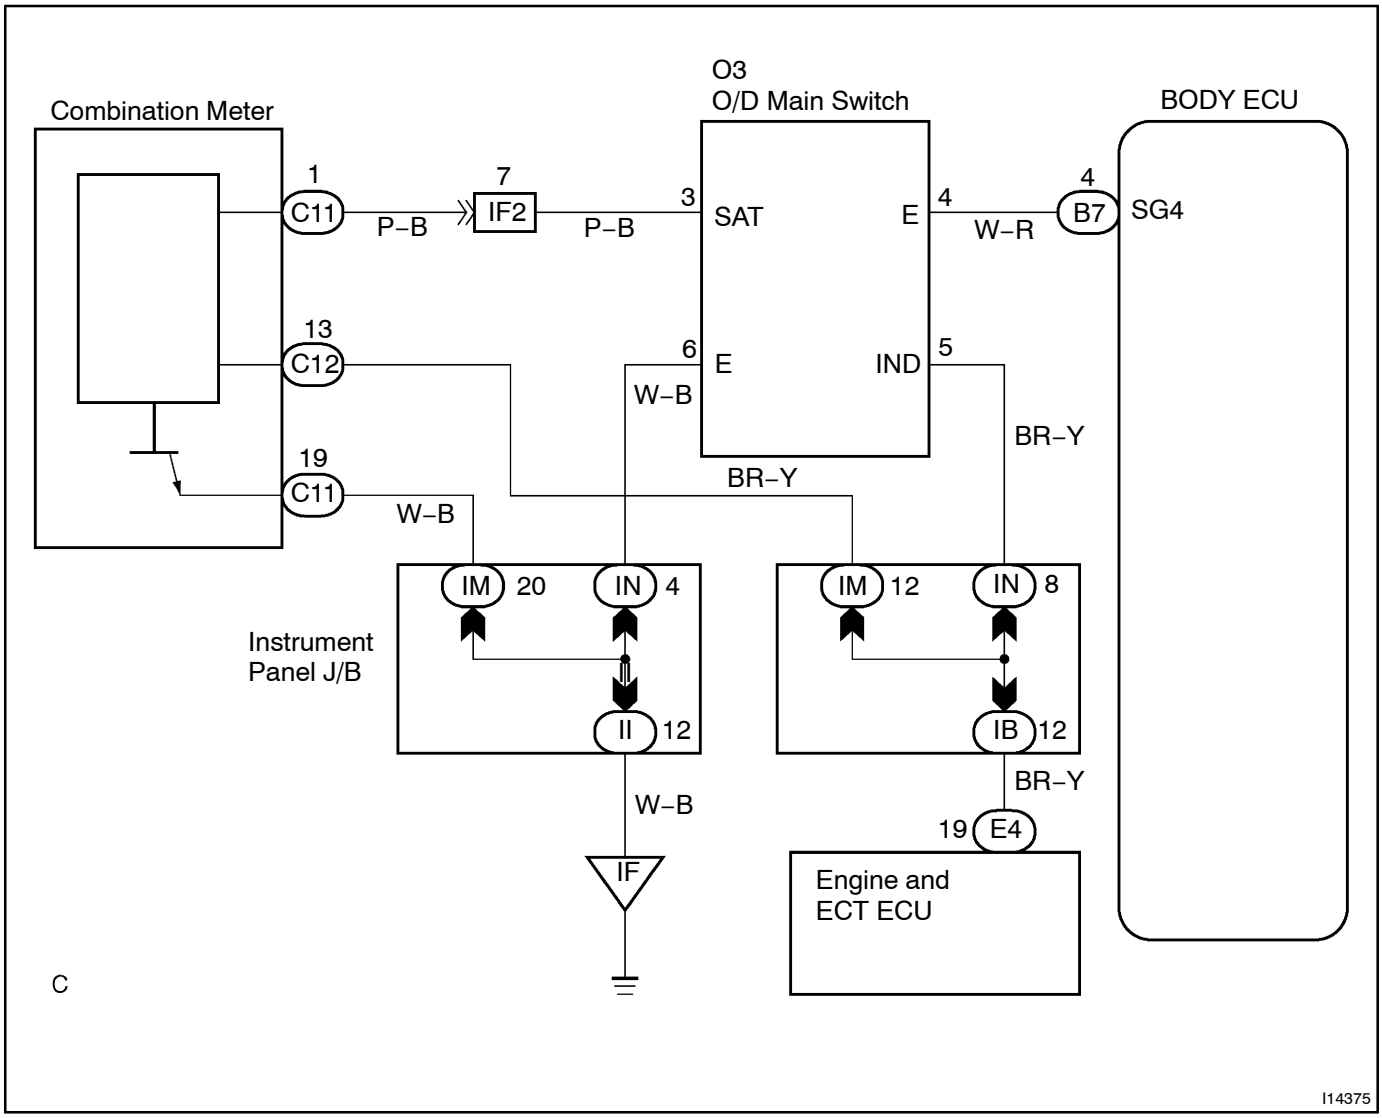

INSPECTION PROCEDURE

1	Check O/D main switch (See page DI–52).

NG → Replace the O/D main switch.

OK

2	Check wireharness and connector between O/D main switch and body ECU (See page IN–30).

NG → Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI–355).