
DI1CH–04

Back Up Power Source Circuit

CIRCUIT DESCRIPTION


This is the back–up power source for the A/C control assembly. Power is supplied even when the ignition switch is off and is used for DTC memory, etc..

WIRING DIAGRAM

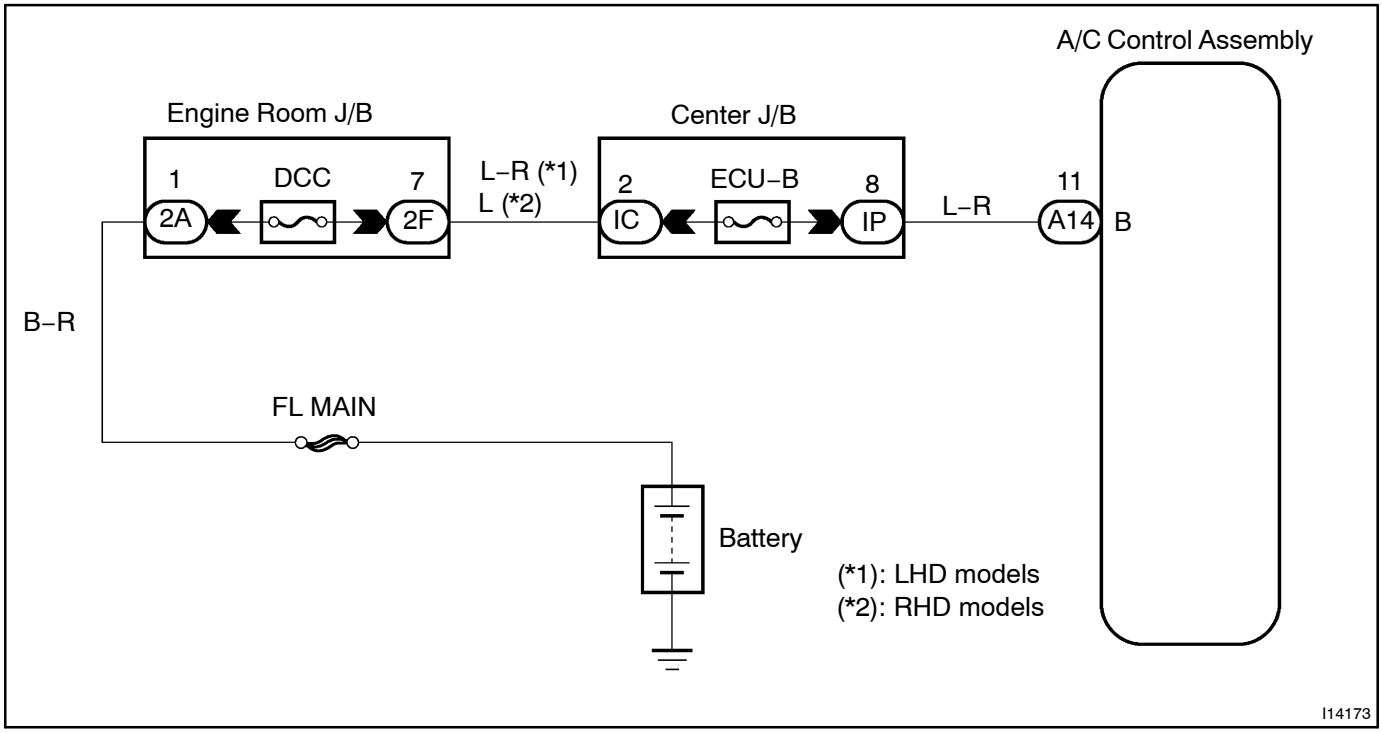

INSPECTION PROCEDURE

1	**Check voltage between terminal B of A/C control assembly connector and body ground.**

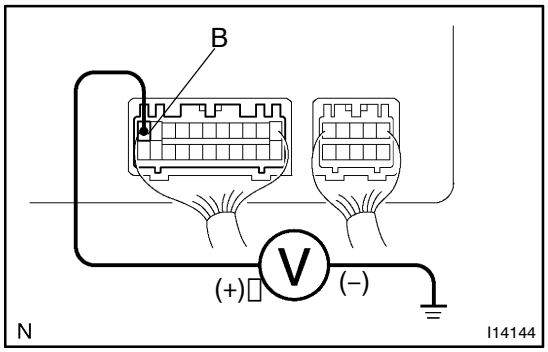


PREPARATION:
Remove A/C control assembly with connectors still connected.
CHECK:
Measure voltage between terminal B of A/C control assembly connector and body ground.
OK:
Voltage : 10 – 14 V

OK	**Proceed to next circuit inspection shown on problem symptoms table (See page DI–432).**

NG

2	**Check ECU–B fuse.**

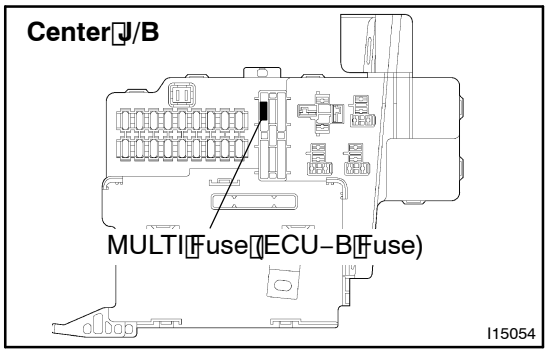

PREPARATION:
Remove MULTI fuse (ECU–B fuse) from center J/B.
CHECK:
Check continuity of MULTI fuse (ECU–B fuse).
OK:
Continuity exists.

NG	**Check for short in all the harness and components connected to the MULTI fuse (ECU–B fuse) (See page DI–473).**

OK

Check and repair harness and connector between A/C control assembly and battery.