

IN0FE–01

VEHICLE LIFT AND SUPPORT LOCATIONS

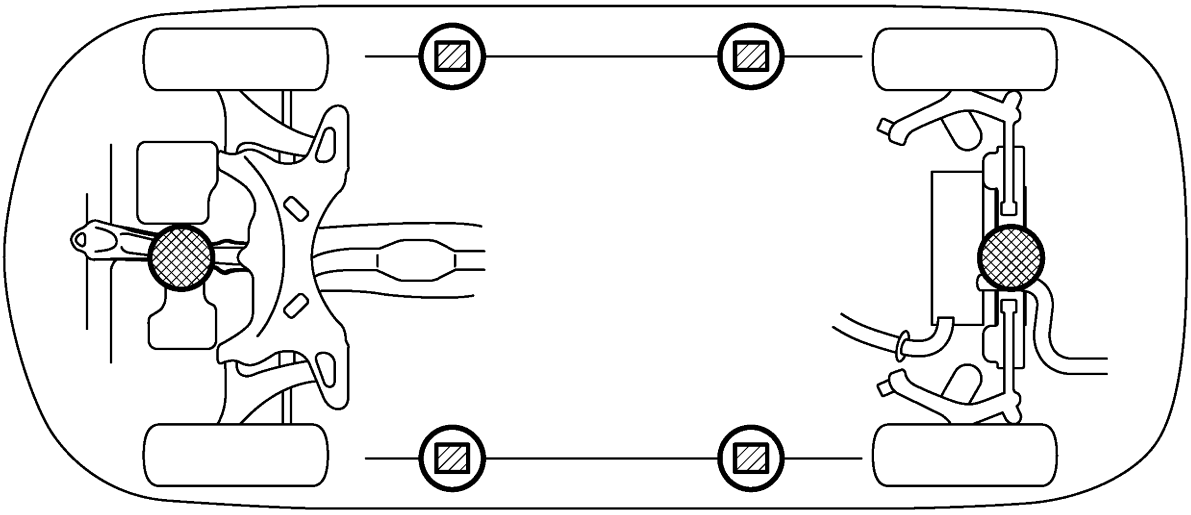

Front

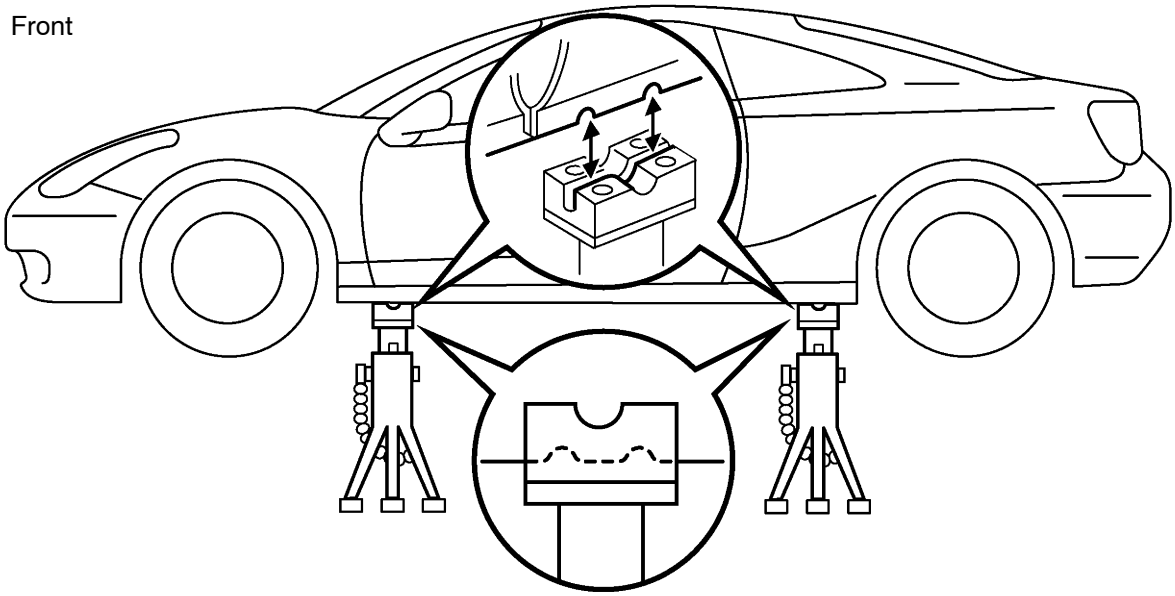

JACK POSITION

Front ..... Front crossmember
Rear..... Rear axle beam

CAUTION : When jacking–up the rear and front, make sure the vehicle is not carrying any extra weight.

PANTOGRAPH JACK POSITION


SUPPORT POSITION

Safety stand and swing arm type lift .....

N

B02925


Plate type lift:

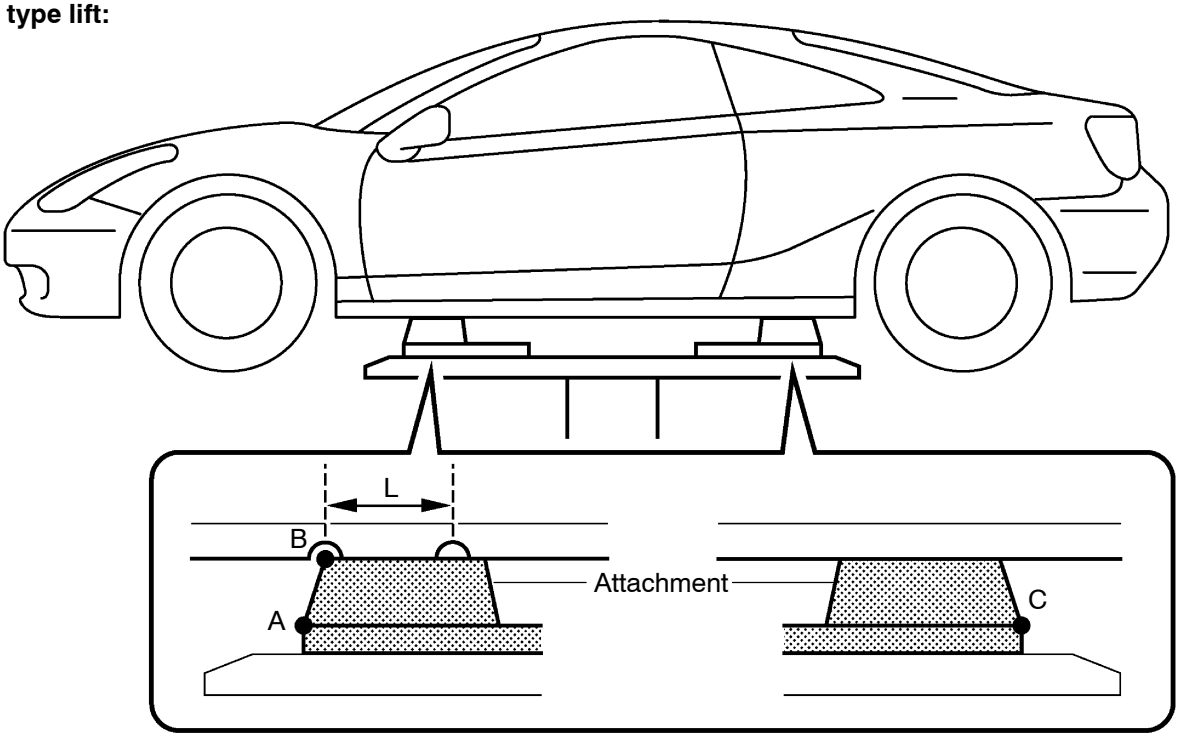

HINT :

Left and right set position	Place the vehicle over the center of the lift.
Front and rear set position	• Align the cushion gum ends of the plate with the attachment lower ends (A, C). • Align the attachment upper end (B) with the front jack supporting point (L).

Attachment dimensions

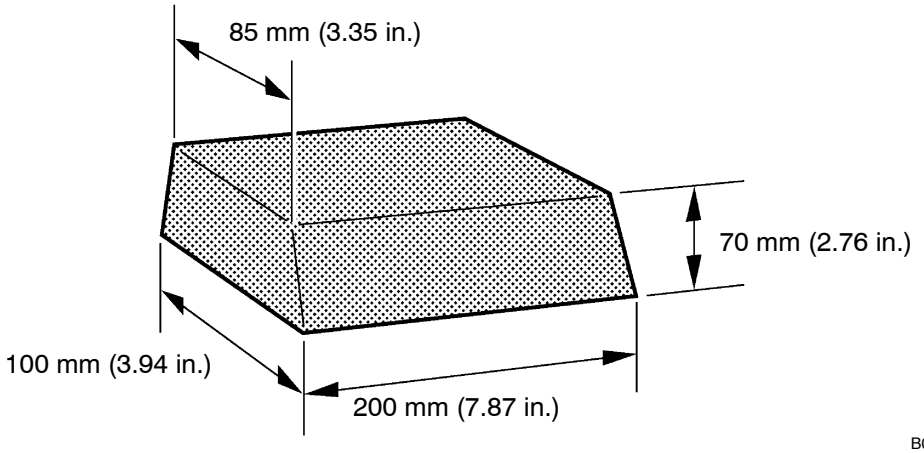

N

B02926