

# MANUAL TRANSAXLE UNIT

## COMPONENTS

MX09X–02

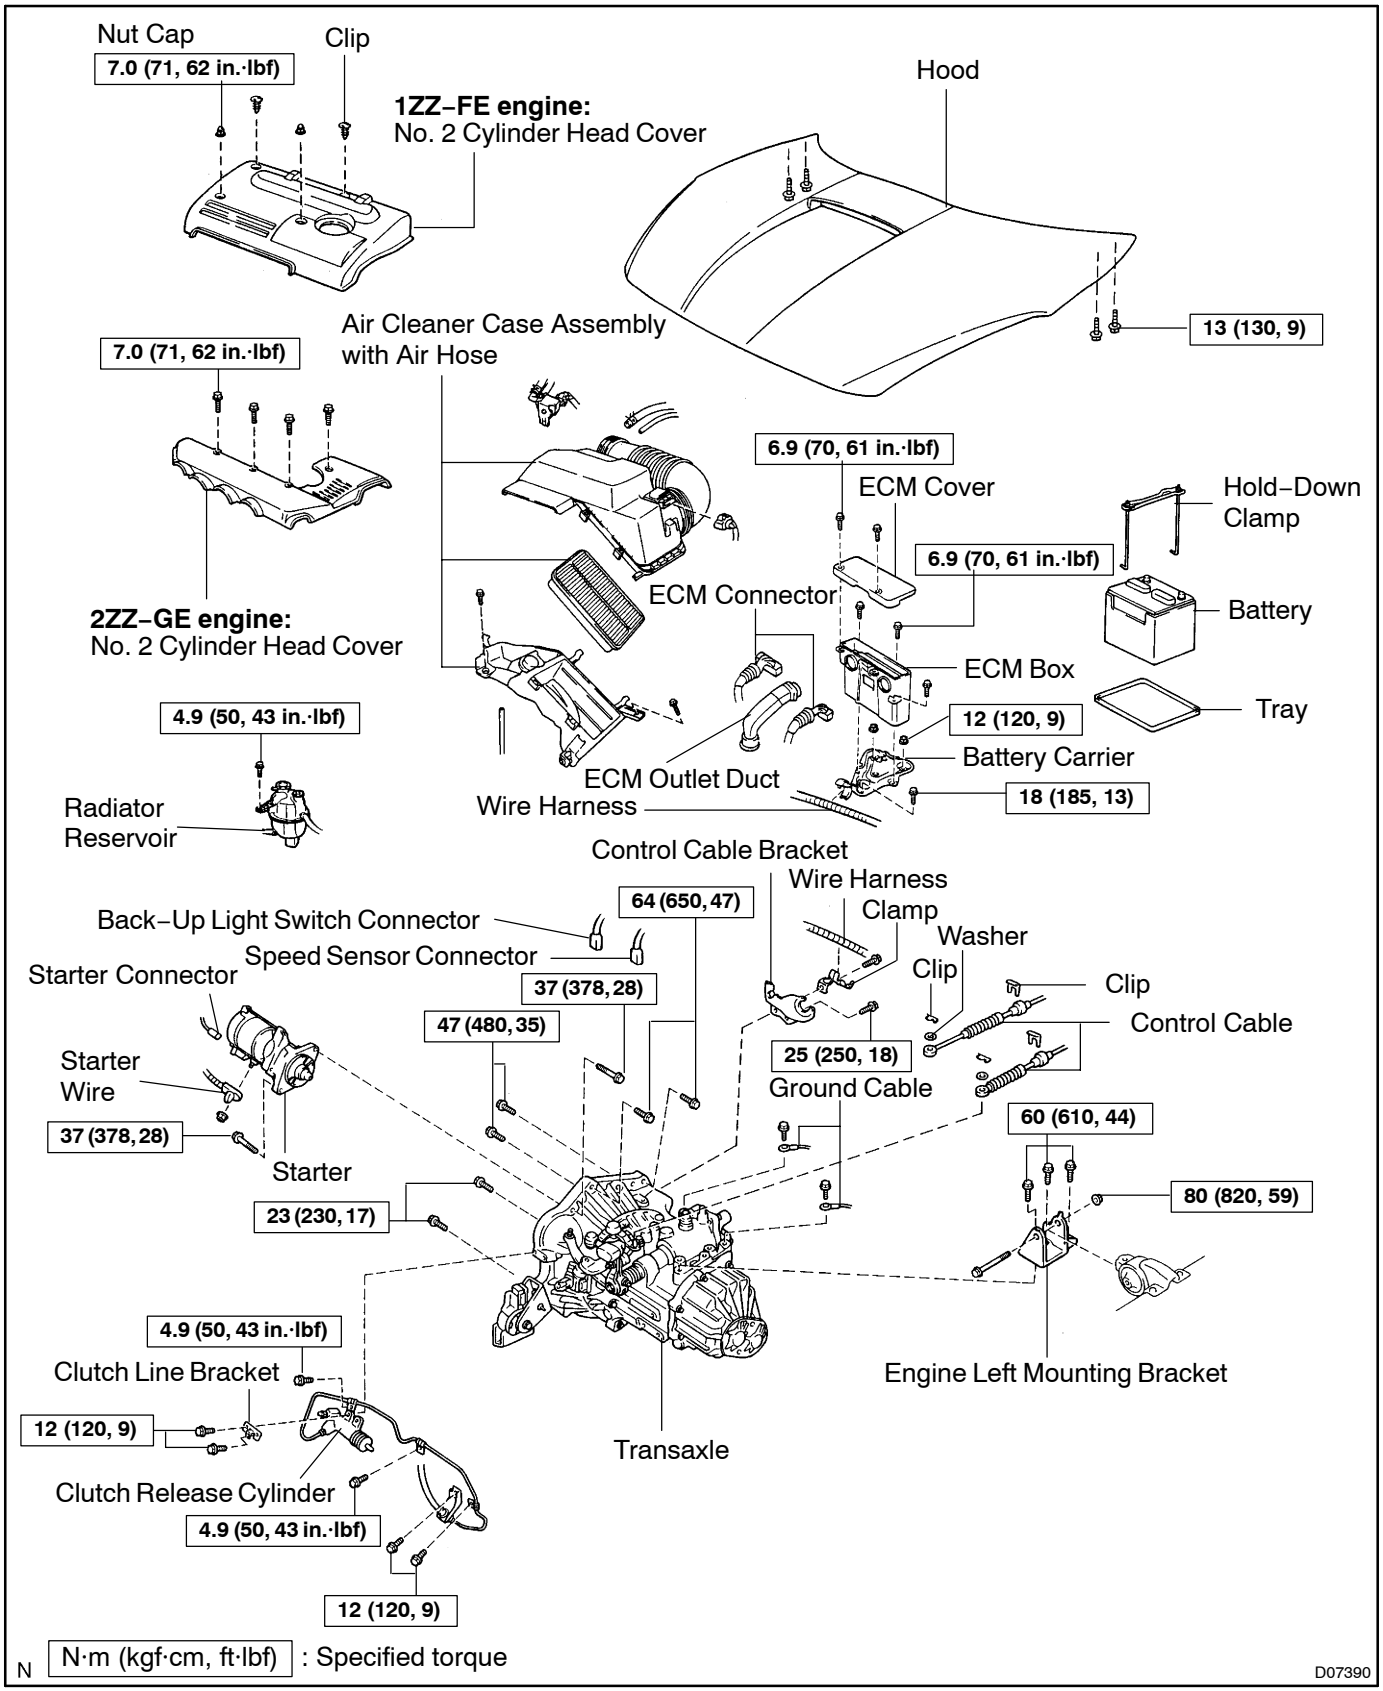

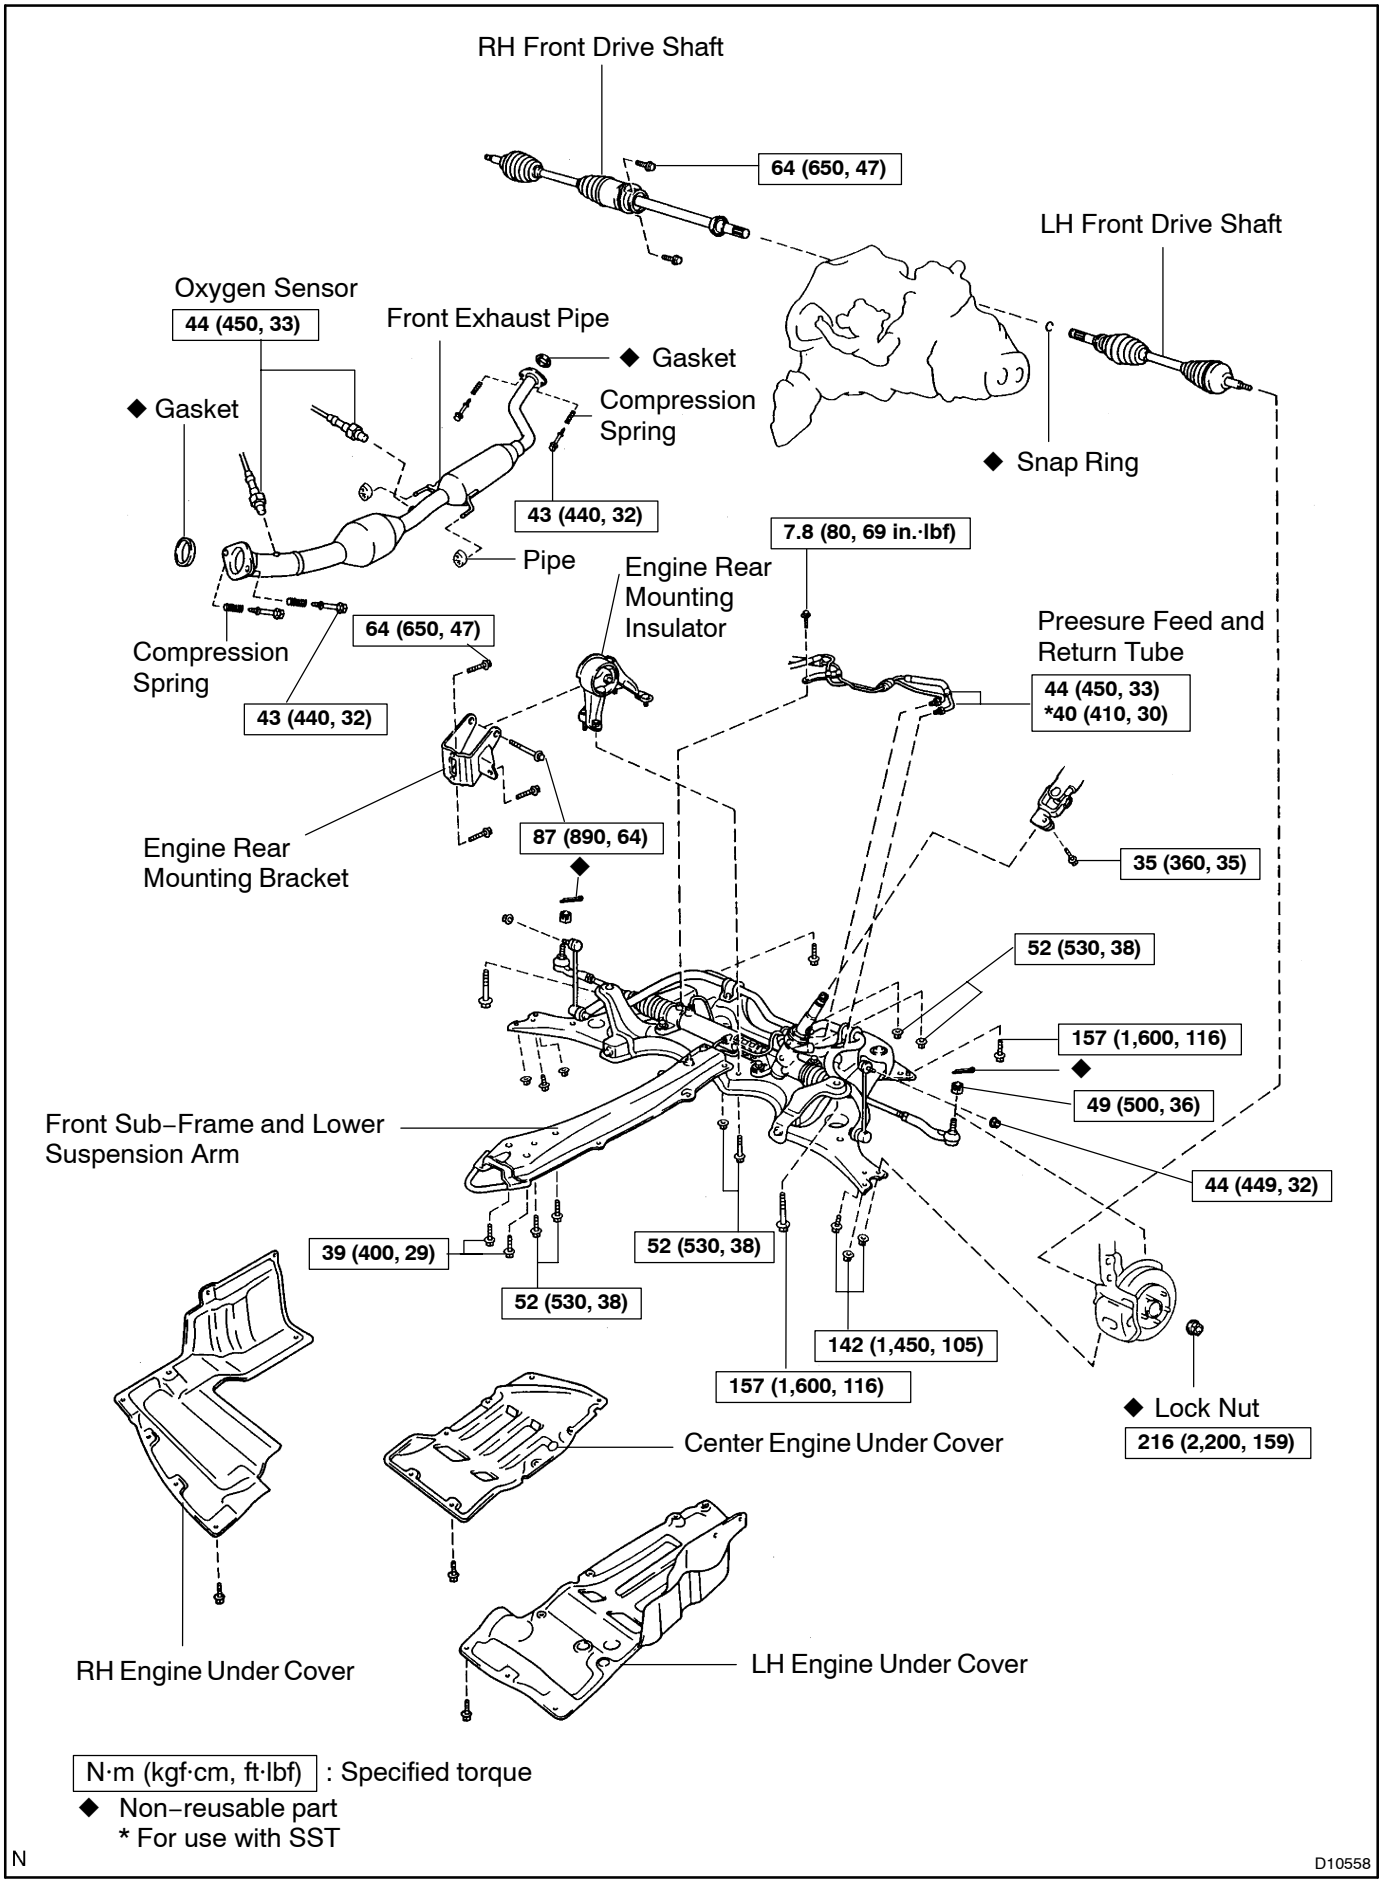


N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
* For use with SST

N

D10558