









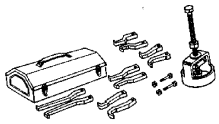



















MANUAL TRANSAXLE (C60)






PP2E2–01

SST (Special Service Tools)

	09223–50010	Crankshaft Front oil Seal Replacer	Output shaft front bearing inner race
	09226–10010	Crankshaft Front & Rear Bearing Replacer	Transmission case oil seal
	09308–00010	Oil Seal Puller	Output shaft front bearing
	09316–60011	Transmission & Transfer Bearing Replacer	Differential tapered roller bearing
	(09316–00011)	Replacer Pipe	
	09325–12010	Transmission Oil Plug	Input shaft rear radial ball bearing 6th driven gear
	09350–32014	TOYOTA Automatic Transmission Tool Set	Differential case tapered roller bearing
	(09351–32120)	Overdrive Bearing Replacer	
	(09351–32140)	Oil Seal Replacer	
	09517–12010	Rear Axle Shaft Oil Seal Replacer	Output shaft rear radial ball bearing Input shaft rear radial ball bearing
	09564–32011	Differential Preload Adaptor	
	09608–00071	Drive Pinion Rear Bearing Cone Replacer	Input shaft center radial ball bearing 4th driven gear and center radial ball bearing

	09612–22011	Tilt Handle Bearing Replacer	No. 3 clutch hub assembly 5th driven gear
	09612–65014	Steering Worm Bearing Puller	Input shaft front bearing Differential tapered roller bearing outer race
	09710–28021	Front Suspension Bushing Tool Set	Transaxle case oil seal
	(09710–08041)	Bushing Replacer	
	09950–00020	Bearing Remover	
	09950–00030	Bearing Remover Attachment	
	09950–30011	Puller A Set	
	(09951–03010)	Upper Plate	
	(09953–03010)	Center Bolt	
	(09954–03010)	Arm	
	(09955–03021)	Claw No.2	
	09950–40011	Puller B Set	
	(09951–04010)	Hanger 150	

	(09952–04010)	Slide Arm	
	(09953–04020)	Center Bolt 150	
	(09953–04030)	Center Bolt 200	
	(09954–04010)	Arm 25	
	(09955–04021)	Claw No.2	
	(09955–04061)	Claw No.6	
	(09957–04010)	Attachment	
	(09958–04011)	Holder	
	09950–50012	Puller C Set	No. 3 clutch hub assembly
	(09954–05030)	Claw No.3	
	09950–60010	Replacer Set	
	(09951–00180)	Replacer 18	Transmission case bushing
	(09951–00350)	Replacer 35	Differential tapered roller bearing

	(09951–00360) Replacer 36	Input shaft front oil seal
	(09951–00400) Replacer 40	Input shaft front bearing
	(09951–00560) Replacer 56	Output shaft front bearing
	09950–60020 Replacer Set No.2	
	(09951–00680) Replacer 68	Differential tapered roller bearing outer race (Transaxle case side)
	(09951–00710) Replacer 71	Differential tapered roller bearing outer race (transmission case side)
	09950–70010 Handle Set	
	(09951–07100) Handle 100	
	(09951–07150) Handle 150	