
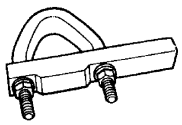







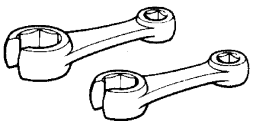

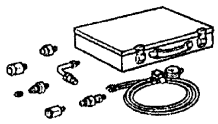












STEERING

PP2EK–01

SST (Special Service Tools)

	09608–04031	Front Hub Inner Bearing Cone Replacer	Tilt steering column
	09612–00012	Rack & Pinion Steering Rack Housing Stand	PS gear
	09612–20010	Power Steering Oil Seal Puller	PS gear
	09612–22011	Tilt Handle Bearing Replacer	PS gear
	09616–00010	Steering Worm Bearing Adjusting Socket	PS gear
	09617–35020	Power Steering Ring Nut Wrench	PS gear
	09631–12071	Steering Rack Oil Seal Test Tool	PS gear
	09631–20051	Steering Rack Cover "C"	PS gear
	09631–20081	Seal Ring Tool	PS gear
	09631–22020	Power Steering Hose Nut 14 x 17 mm Wrench Set	PS vane pump PS gear
	09633–00020	Power Steering Hose Nut Wrench	PS gear
	09640–10010	Power Steering Pressure Gauge Set	Power steering fluid

	(09641–01010)	Gauge Assy	
	(09641–01030)	Attachment B	
	(09641–01060)	Attachment E	
	09922–10010	Variable Open Wrench	PS gear
	09950–50012	Puller C Set	Tilt steering column
	(09951–05010)	Hanger 150	
	(09952–05010)	Slide Arm	
	(09953–05020)	Center Bolt 150	
	(09954–05020)	Claw No.2	
	09950–60010	Replacer Set	
	(09951–00210)	Replacer 21	PS gear
	(09951–00240)	Replacer 24	PS gear
	(09951–00280)	Replacer 28	PS vane pump PS gear

	(09951–00340) Replacer 34	PS gear
	(09951–00350) Replacer 35	PS gear
	(09951–00400) Replacer 40	PS gear
	(09952–06010) Adapter	PS gear
	09950–70010 Handle Set	
	(09951–07100) Handle 100	PS vane pump PS gear
	(09951–07150) Handle 150	PS gear
	(09951–07200) Handle 200	PS gear
	(09951–07360) Handle 360	PS gear