
RS0JX–02

REMOVAL

NOTICE:

- **If the wiring connector of the SRS is disconnected and the ignition switch is in ON position, DTCs will be recorded.**
- **Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.**

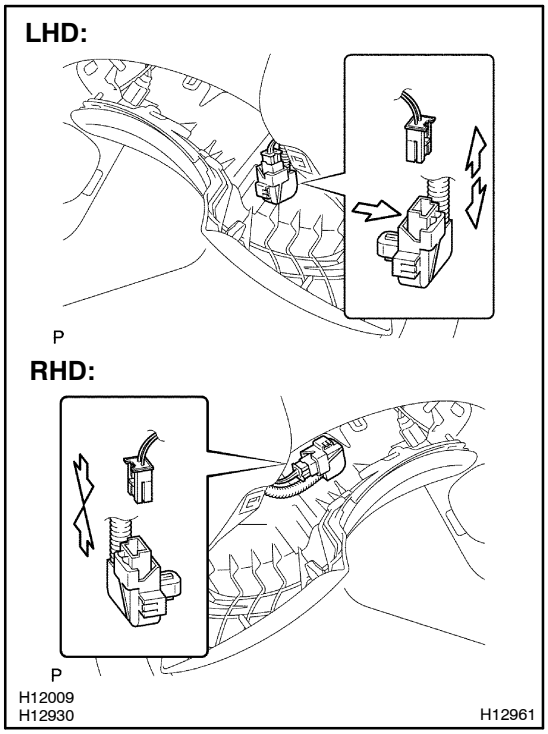

1. DISCONNECT AIRBAG CONNECTOR


(a) Remove the 3 screws, 2 bolts and lower finish panel.

(b) Remove the connector cover from the lower finish panel.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

(c) Disconnect the airbag connector.

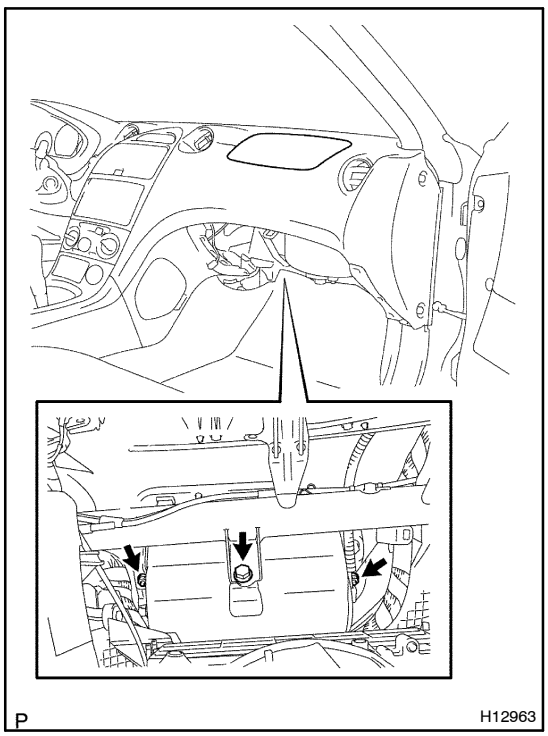

2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

Remove the bolt and 2 nuts.

CAUTION:

- **Do not store the front passenger airbag assembly with the airbag deployment side facing downward.**
- **Never disassemble the front passenger airbag assembly.**

NOTICE:

When removing the front passenger airbag assembly, take care not to damage the wire harness.