
RS0K7–01

INSTALLATION

NOTICE:


Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

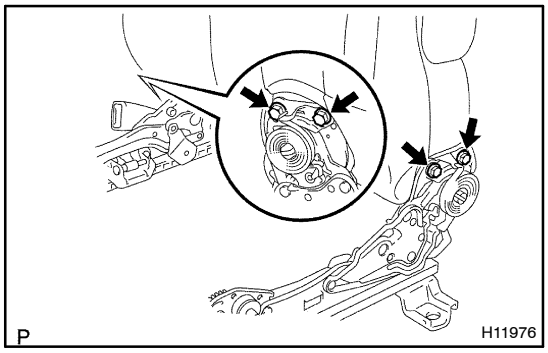

1. INSTALL SEATBACK ASSEMBLY

(a) Install the seatback assembly to the seat adjuster with the 4 bolts.


Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

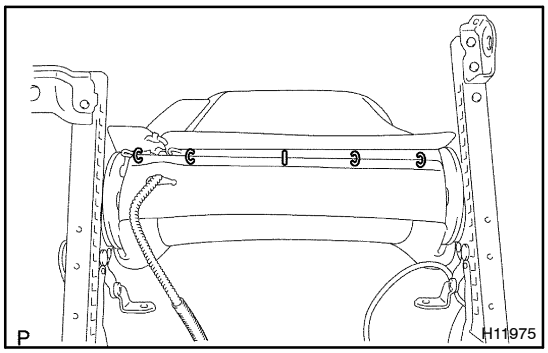

(b) Install 5 new hog rings.

HINT:


When installing the hog rings, take care to prevent wrinkles as little as possible.

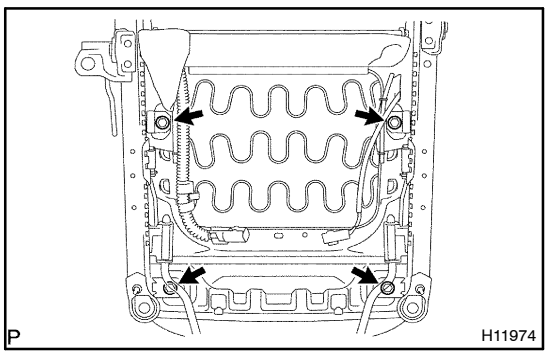


2. INSTALL SEAT CUSHION ASSEMBLY

(a) Install the seat cushion assembly with the 4 bolts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

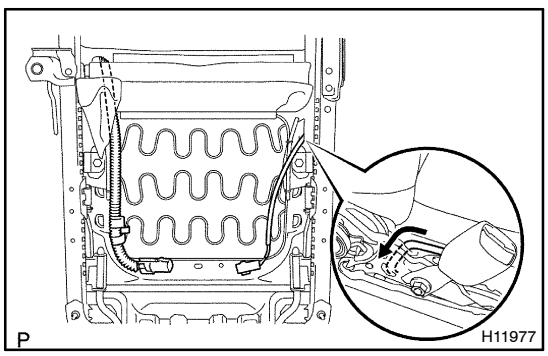


(b) Install the wire harness to the seat cushion assembly.

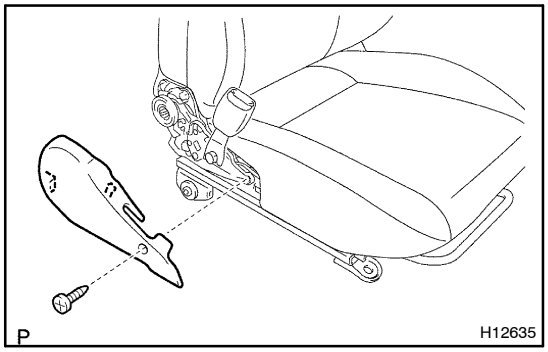

3. INSTALL INNER FRONT SEAT CUSHION SHIELD

Install the inner front seat cushion shield with the screw.

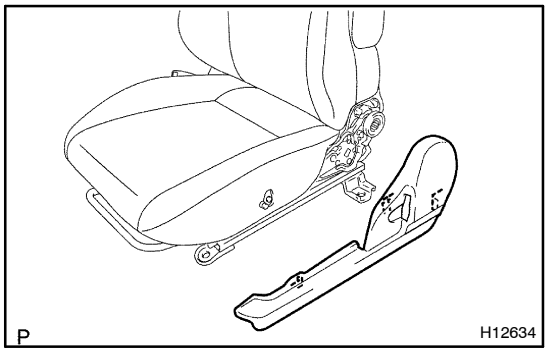

4. INSTALL FRONT SEAT CUSHION SHIELD

5. INSTALL RECLINING ADJUSTER KNOB

6. INSTALL RECLINING ADJUSTER RELEASE HANDLE

7. INSTALL FRONT SEAT

NOTICE:

When mounting the seat to the vehicle, take care not to damage the airbag wire harness.

(a) Connect the side airbag connector.

(b) Slide the front seat to the most front position.

NOTICE:

Make sure that seat adjuster locks.

(c) Without holding the seat track handle, mount the seat to the vehicle.

HINT:

If holding the seat track handle, the adjusted rearmost position slip off.

(d) Tighten the bolts on the front side temporarily, from the bolt on the inner side tighten them completely.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

(e) Slide the seat to the most front position to install the bolts on the rear side.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

(f) Install the 2 seat track covers.