

RS0KE–01

REMOVAL

NOTICE:

- **If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.**
- **Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.**
- **Never reuse the sensor involved in a collision when the SRS has deployed.**
- **Never repair a sensor in order to reuse it.**

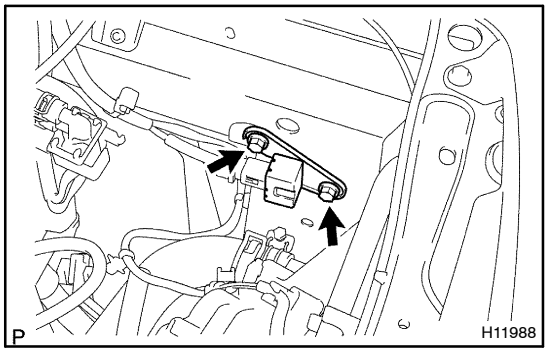

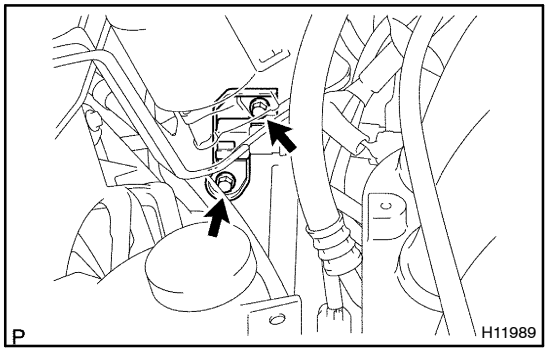

1. LH:

REMOVE FRONT AIRBAG SENSOR

(a) Remove the air cleaner hose.
(b) Remove the air cleaner cap.
(c) Remove the air filter.
(d) Remove the 2 bolts and air cleaner case.
(e) Disconnect the connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

(f) Remove the 2 bolts and front airbag sensor LH.

2. RH:

REMOVE FRONT AIRBAG SENSOR

(a) Remove the 5 clips and upper front fender apron seal.
(b) Disconnect the connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

(c) Remove the 2 bolts and front airbag sensor RH.