RS0KH–01

INSTALLATION


1. INSTALL FRONT AIRBAG SENSOR LH AND RH

(a) Install the front airbag sensors with the 4 bolts.
Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

(b) Connect the front airbag sensor connector.

NOTICE:

- **Connection of the connector is done after the sensor assembly has been installed.**
- **Make sure the sensor is installed with the specified torque.**
- **If the sensor has been dropped, or there are cracks, dents or other defects in the case, brackets or connector, replace the removed sensor with a new one.**
- **The front sensor is equipped with an electrical connection check mechanism. Be sure to lock this mechanism securely when connecting the connector. If the connector is not securely locked, a malfunction code will be detected by the diagnostic system.**

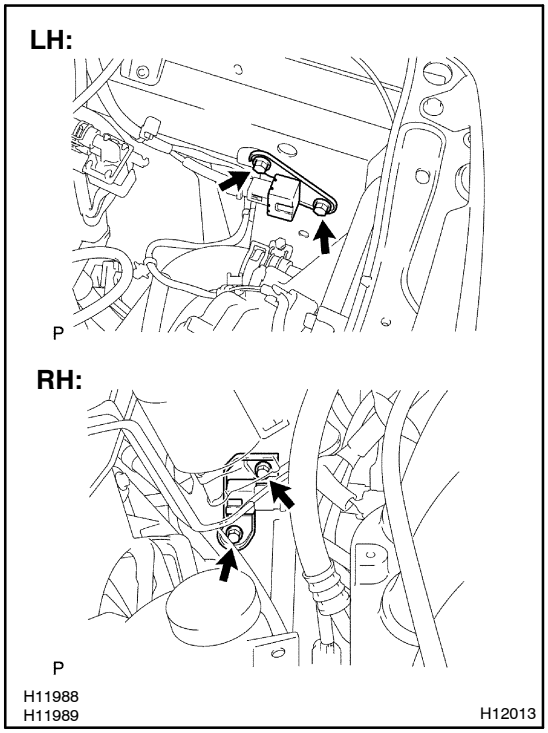

HINT:
Install the front airbag sensor with the arrow on the sensor facing toward the front of the vehicle.

2. INSTALL HEAD LIGHT

Install headlights with the 4 bolts and 2 screws (See page BE–20).

3. INSTALL AIR CLEANER CASE

Install the air cleaner case with the 2 bolts.

4. INSTALL AIR FILTER

5. INSTALL AIR CLEANER CAP

6. INSTALL AIR CLEANER HOSE

7. INSTALL UPPER FRONT FENDER APRON SEAL

Install the upper front fender apron seal with the 5 clips.

