RS0KO–01

REMOVAL


NOTICE:

- **If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.**
- **Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.**
- **Never reuse the sensor involved in a collision when the SRS has deployed.**
- **Never repair a sensor in order to reuse it.**

HINT:

For step 1 to 4, refer to page BO–11.

1. **REMOVE NO. 2 DOOR INSIDE HANDLE BEZEL**
2. **REMOVE OUTER MIRROR SWITCH ASSEMBLY**
3. **REMOVE FROMT DOOR LOWER FRAME BRACKET GARNISH**
4. **REMOVE DOOR TRIM**

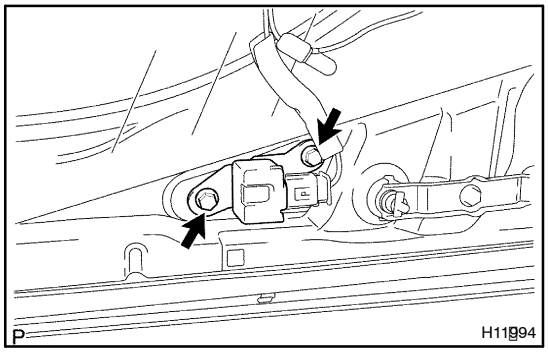

5. **REMOVE DOOR SIDE AIRBAG SENSOR**

(a) Disconnect the door side airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

(b) Remove the 2 bolts and door side airbag sensor.