
SA07D–05


DISASSEMBLY

1. REMOVE LOWER BALL JOINT

(a) Remove the cotter pin and nut.

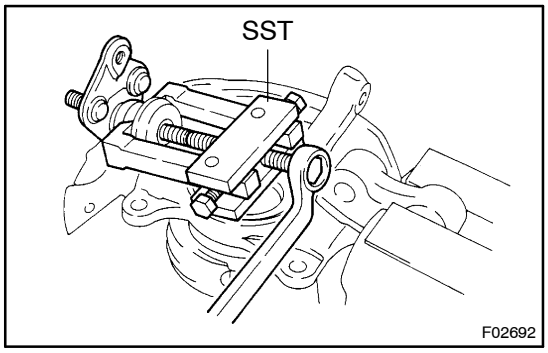


(b) Using SST, remove the lower ball joint.
SST 09628–62011

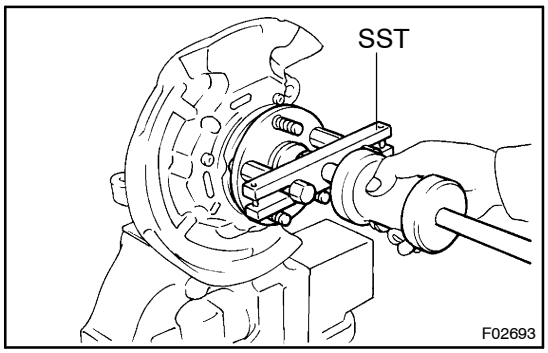

2. REMOVE AXLE HUB

(a) Using SST, remove the axle hub.
SST 09520–00031 (09520–00040, 09521–00010, 09521–00020)

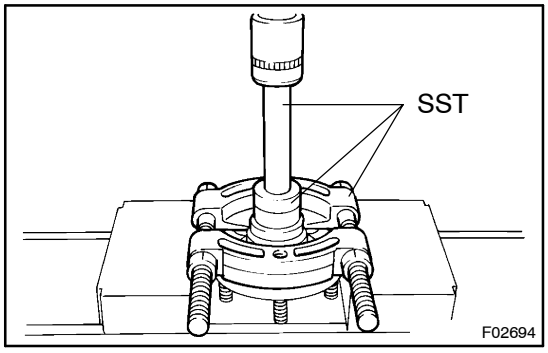

(b) Using SST and a press, remove the inner race (outside) from the axle hub.
SST 09555–55010, 09950–60010 (09951–00380), 09950–70010 (09951–07150)


3. REMOVE DUST COVER

Using a torx socket (T30), remove the 3 bolts and dust cover.

4. REMOVE BEARING FROM STEERING KNUCKLE

(a) Using snap ring pliers, remove the snap ring.

(b) Place the inner race on the outside of the bearing.

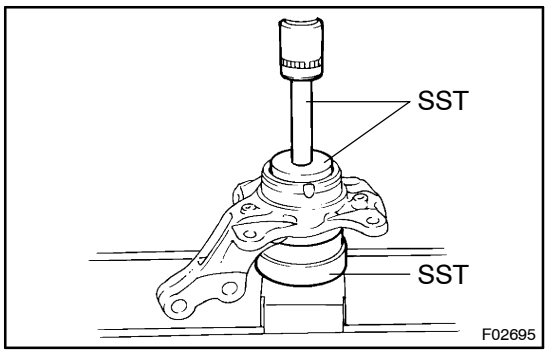

(c) Using SST and a press, remove the bearing.
SST 09527–17011, 09950–60010 (09951–00650), 09950–70010 (09951–07150)