
SA108–02

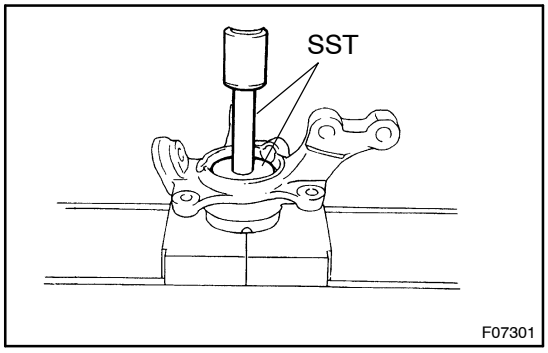

REASSEMBLY

1. INSTALL BEARING

(a) Using SST and a press, install a new bearing to the steering knuckle.


SST 09950–60020 (09951–00730),
09950–70010 (09951–07150)

(b) Using snap ring pliers, install a new snap ring.

2. INSTALL DUST COVER

Place the dust cover and using a torx socket (T30), install the 3 bolts.

Torque: 8.3 N·m (85 kgf·cm, 74 in.·lbf)

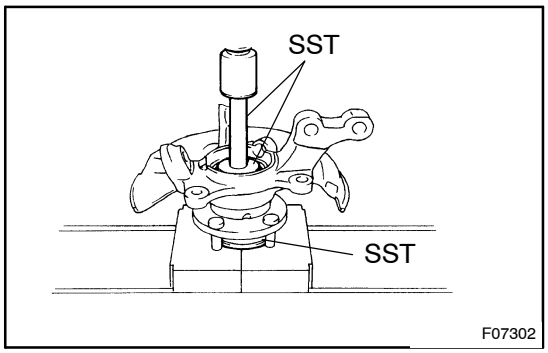

3. INSTALL FRONT AXLE HUB

Using SST and a press, install the axle hub.

SST 09608–32010, 09950–60010 (09951–00550)
09950–70010 (09951–07150)

4. INSTALL LOWER BALL JOINT

(a) Install the lower ball joint and tighten the nut.

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

(b) Install a new cotter pin.

If the holes for the cotter pin are not aligned, tighten the nut further up to 60°.