
# FRONT WHEEL HUB BOLT

SA1CN–03

## REPLACEMENT


**1. REMOVE FRONT WHEEL**

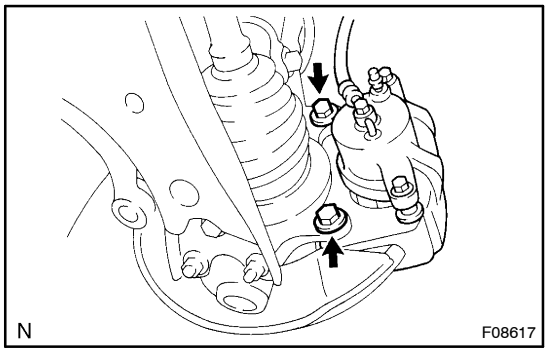


**2. REMOVE BRAKE CALIPER AND DISC**

(a) Remove the 2 bolts, brake caliper and disc.


(b) Support the brake caliper securely.

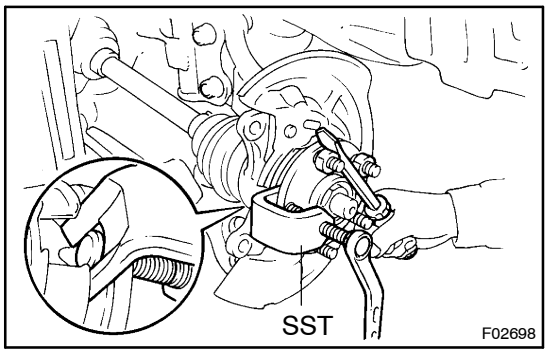


**3. REMOVE HUB BOLT**

Using SST, 2 nuts and a screwdriver or an equivalent, remove the hub bolt.

SST 09628–10011

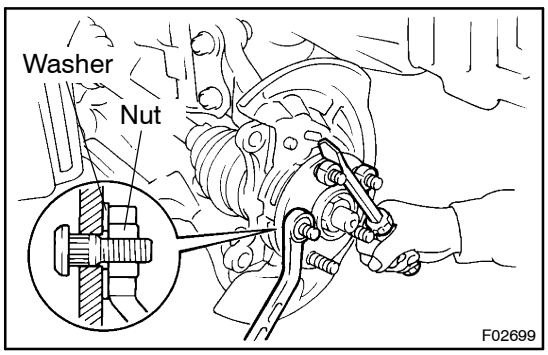


**4. INSTALL HUB BOLT**

(a) Install a washer and nut to a new hub bolt as shown in the illustration.

(b) Using a screwdriver or an equivalent to hold, install the hub bolt by torquing the nut.

(c) Remove the 3 nuts and washer.

**5. INSTALL DISC AND BRAKE CALIPER**

Install the disc, brake caliper and 2 bolts.

**Torque: 107 N·m (1,090 kgf·cm, 79 ft·lbf)**

**6. INSTALL FRONT WHEEL**

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**