
SA0CS–05

DISASSEMBLY

REMOVE COIL SPRING

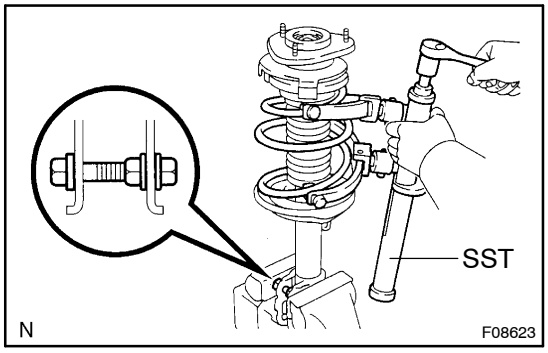


(a) Install 2 nuts and a bolt to the bracket at the lower side of the shock absorber and secure it in a vise.

(b) Using SST, compress the coil spring.
SST 09727–30021 (09727–00010, 09727–00021, 09727–00031)

NOTICE:

Do not use an impact wrench. It will damage the SST.

(c) Remove the cap from the suspension support.

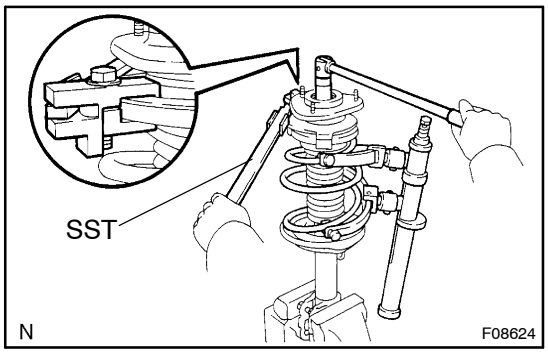

(d) Using SST to hold the spring seat, remove the nut.
SST 09729–22031

(e) Remove the suspension support, dust seal, spring seat, upper insulator, coil spring, spring bumper and lower insulator.