
SA07Y–05

REMOVAL

1. REMOVE STEERING KNUCKLE WITH AXLE HUB
(See page SA–12)

2. REMOVE LOWER BALL JOINT

(a) Remove the cotter pin and nut.

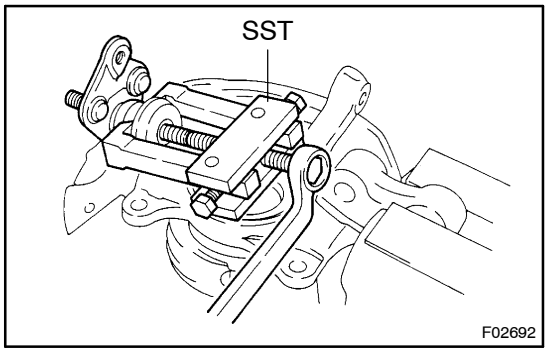

(b) Using SST, remove the lower ball joint.
SST 09628–62011