
SA10F–02

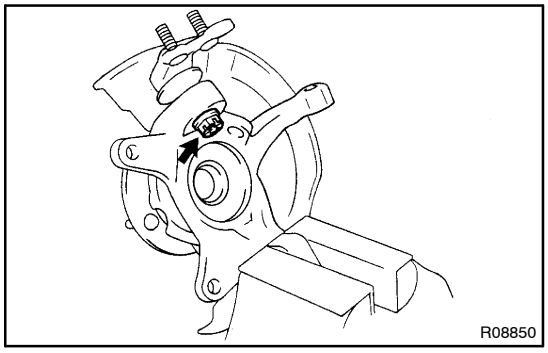

INSTALLATION

1. INSTALL LOWER BALL JOINT

(a) Install the lower ball joint and tighten the nut.

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

(b) Install a new cotter pin.

If the holes for the cotter pin are not aligned, tighten the nut further up to 60°.

2. INSTALL STEERING KNUCKLE WITH AXLE HUB
(See page SA–15)

3. CHECK ABS SPEED SENSOR SIGNAL
(See page DI–68)

4. CHECK FRONT WHEEL ALIGNMENT
(See page SA–4)