
SA1L8–02

# DISASSEMBLY

**w/ ABS:**

**REMOVE ABS SPEED SENSOR**

(a) Using a pin punch and hammer, drive out the 2 pins and remove the 2 attachments from SST.
SST 09520–00031 (09520–00040, 09521–00020)

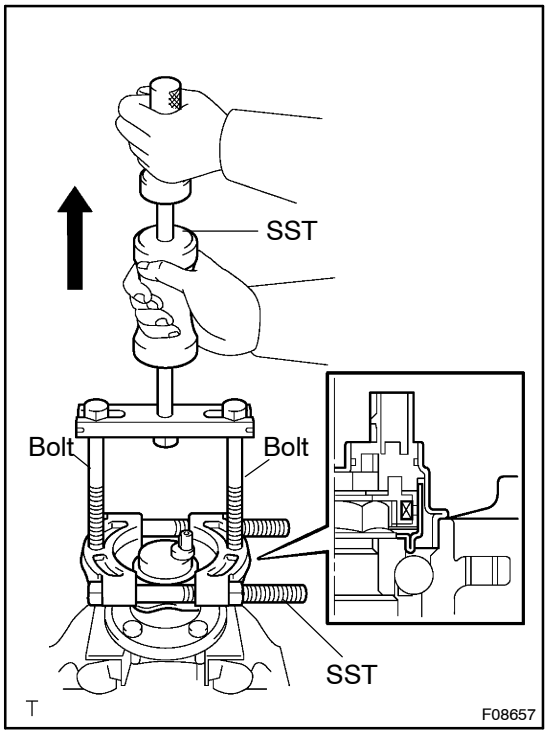


(b) Mount the axle hub assembly in a soft jaw vise.

**NOTICE:**

**Replace the axle hub assembly if it is dropped or a strong shock is given to it.**

(c) Using SST and 2 bolts (Diameter: 12 mm, Pitch: 1.5 mm), remove the ABS speed sensor.
SST 09520–00031 (09520–00040, 09521–00020), 09950–00020

**NOTICE:**

- **Do not allow any foreign matter sticking to the sensor rotor.**
- **Pull out the ABS speed sensor straightly not to damage the sensor rotor.**
- **If damage has occurred to the sensor rotor, replace the axle hub assembly.**
- **Do not scratch the contacting surface of the axle hub and speed sensor.**