SA1P9–01

REASSEMBLY

w/ ABS:


INSTALL NEW ABS SPEED SENSOR

(a) Clean the contacting surface of the axle hub and a new ABS speed sensor.

NOTICE:

Do not allow any foreign matter sticking to the sensor rotor.

(b) Place the ABS speed sensor on the axle hub so that the connector is set at the bottom under the on–vehicle condition.

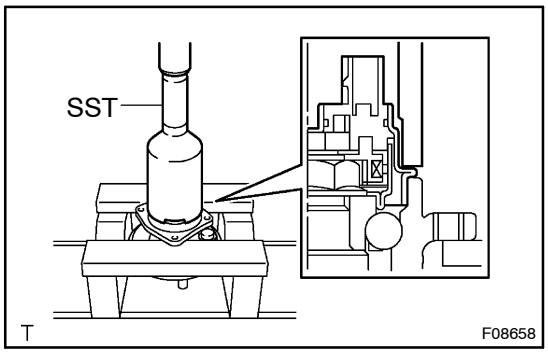

(c) Using SST and a press, install a new ABS speed sensor to the axle hub.

SST 09214–76011

NOTICE:

- **Do not tap the speed sensor with a hammer directly.**
- **Check that there should be no foreign matter on the speed sensor detection portion.**
- **Press in the ABS speed sensor straightly and slowly.**