
REAR WHEEL HUB BOLT

SA1Q4–01

REPLACEMENT


1. REMOVE REAR WHEEL

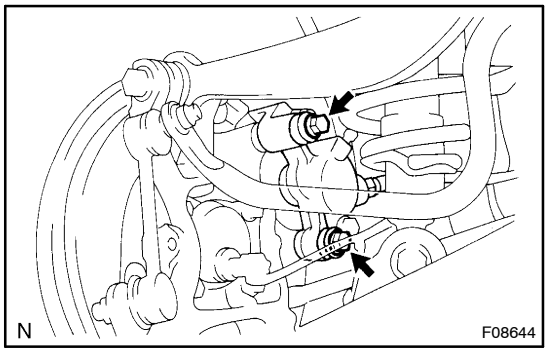

2. REMOVE BRAKE CALIPER AND DISC

(a) Remove the 2 bolts, brake caliper and disc.


(b) Support the brake caliper securely.

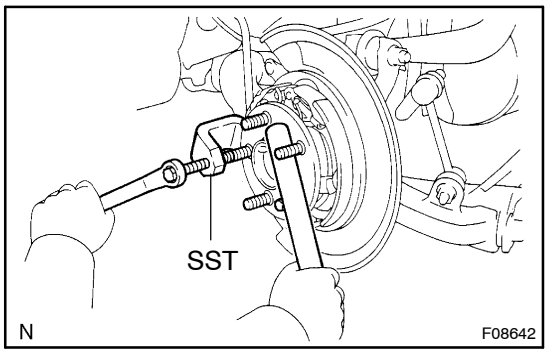

3. REMOVE HUB BOLT

Using SST and a brass bar, remove the hub bolt.

SST 09628–10011

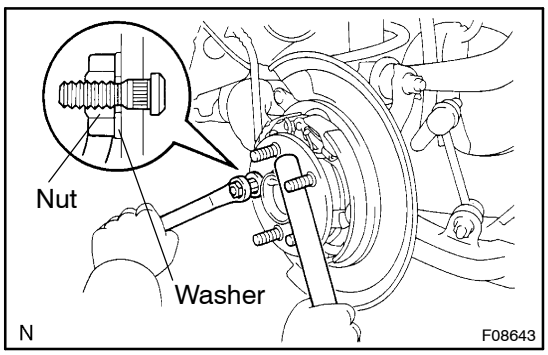

4. INSTALL HUB BOLT

(a) Install a washer and nut to a new hub bolt as shown in the illustration.

(b) Using a brass bar to hold, install the hub bolt by torquing the nut.

5. INSTALL DISC AND BRAKE CALIPER

Install the disc and brake caliper and 2 bolts.

Torque: 47 N·m (475 kgf·cm, 34 ft·lbf)

6. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)