
SA1OW–01

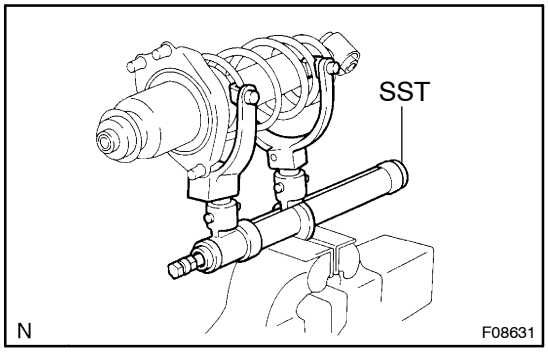


DISASSEMBLY

REMOVE COIL SPRING

(a) Using SST, compress the coil spring.
SST 09727–30021 (09727–00010, 09727–00021, 09727–00031)

NOTICE:
Do not use an impact wrench. It will damage the SST.

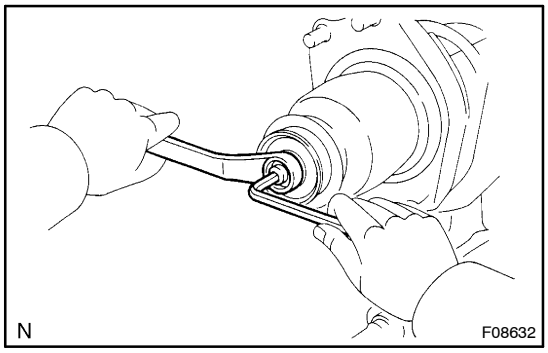

(b) Using a 6 mm hexagon wrench to hold the piston rod, remove the nut.
(c) Remove the washer, cushion, spring bracket, upper insulator, suspension support, spring bumper and coil spring.