
TILT STEERING COLUMN


COMPONENTS

SR0YK–02

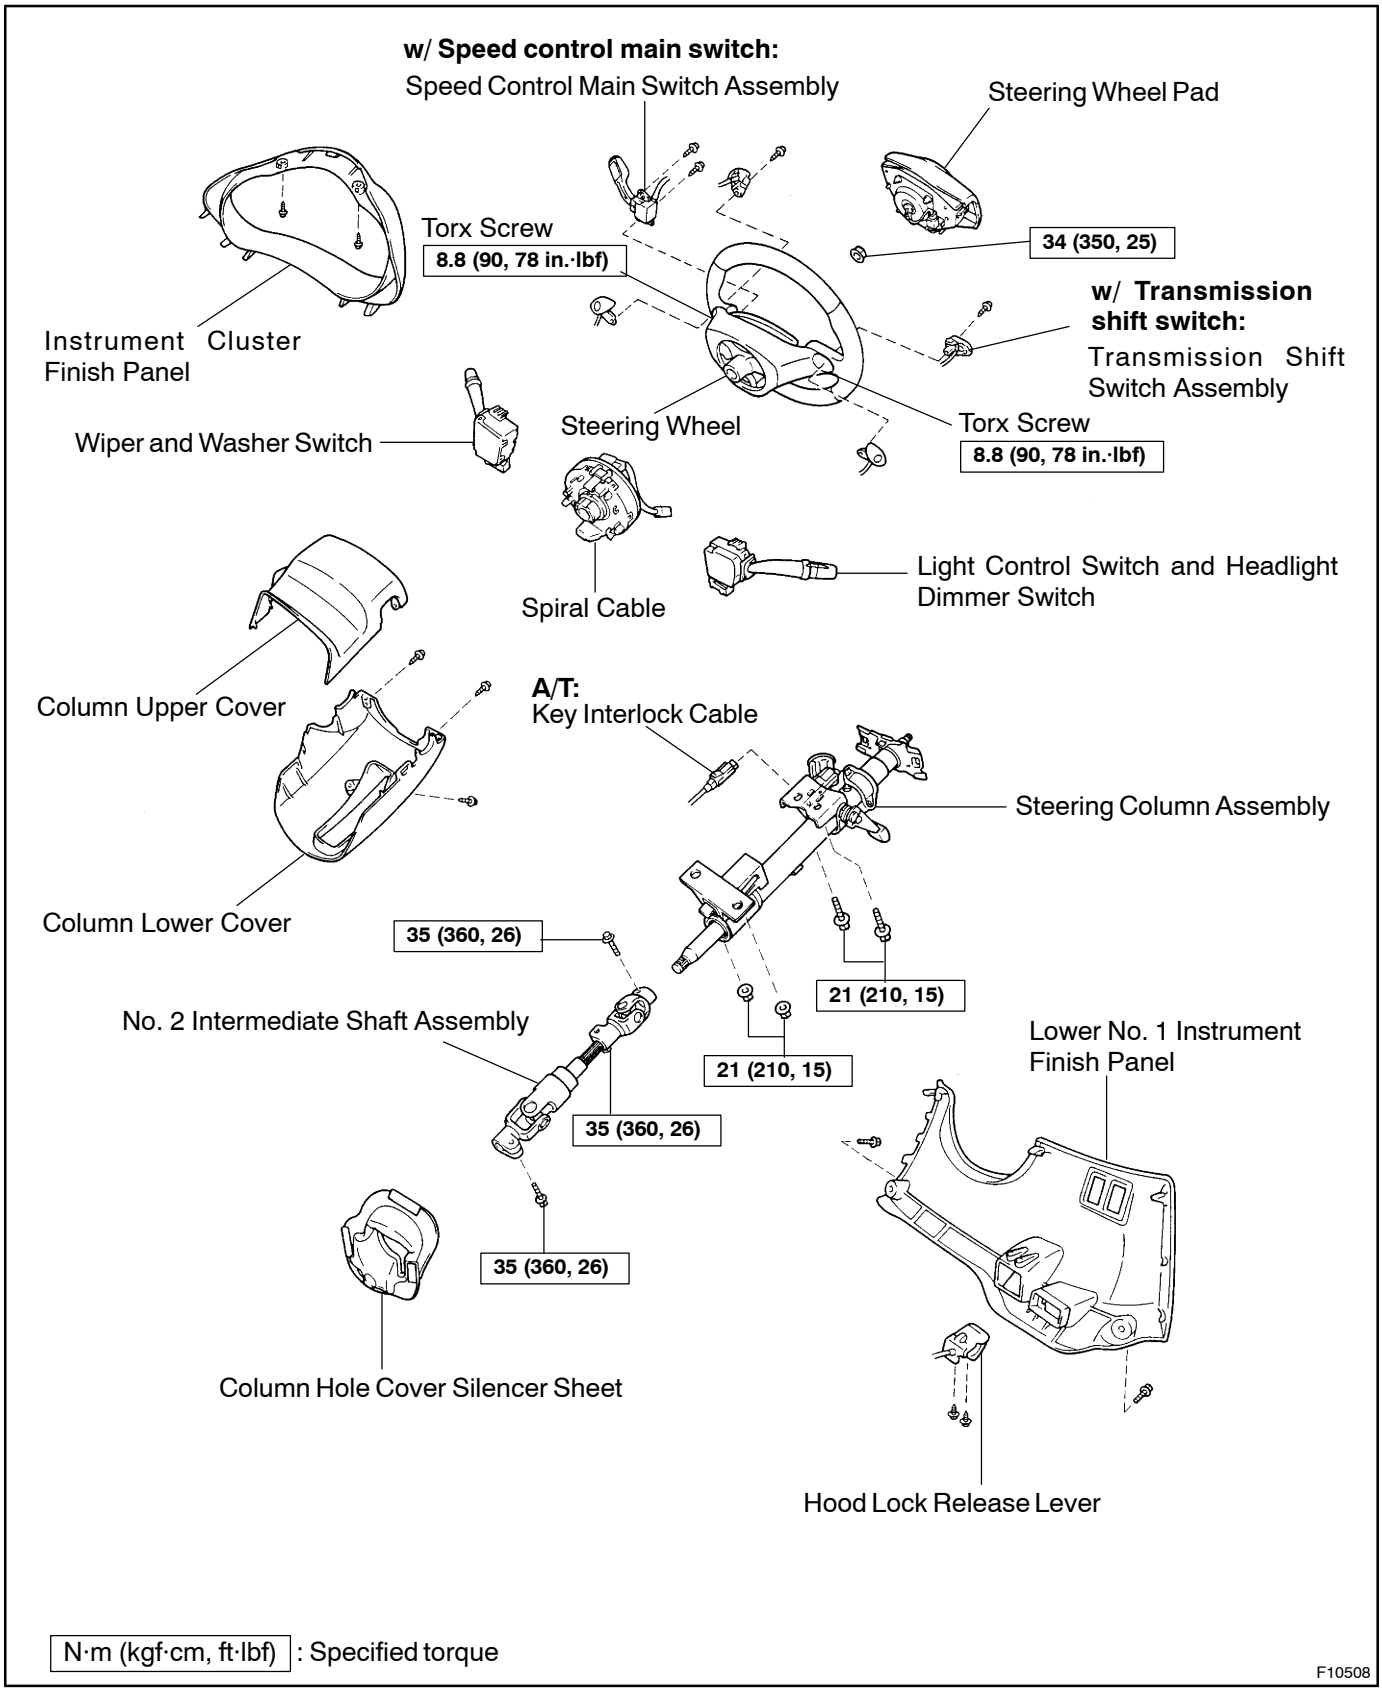

N·m (kgf·cm, ft·lbf) : Specified torque

F10508

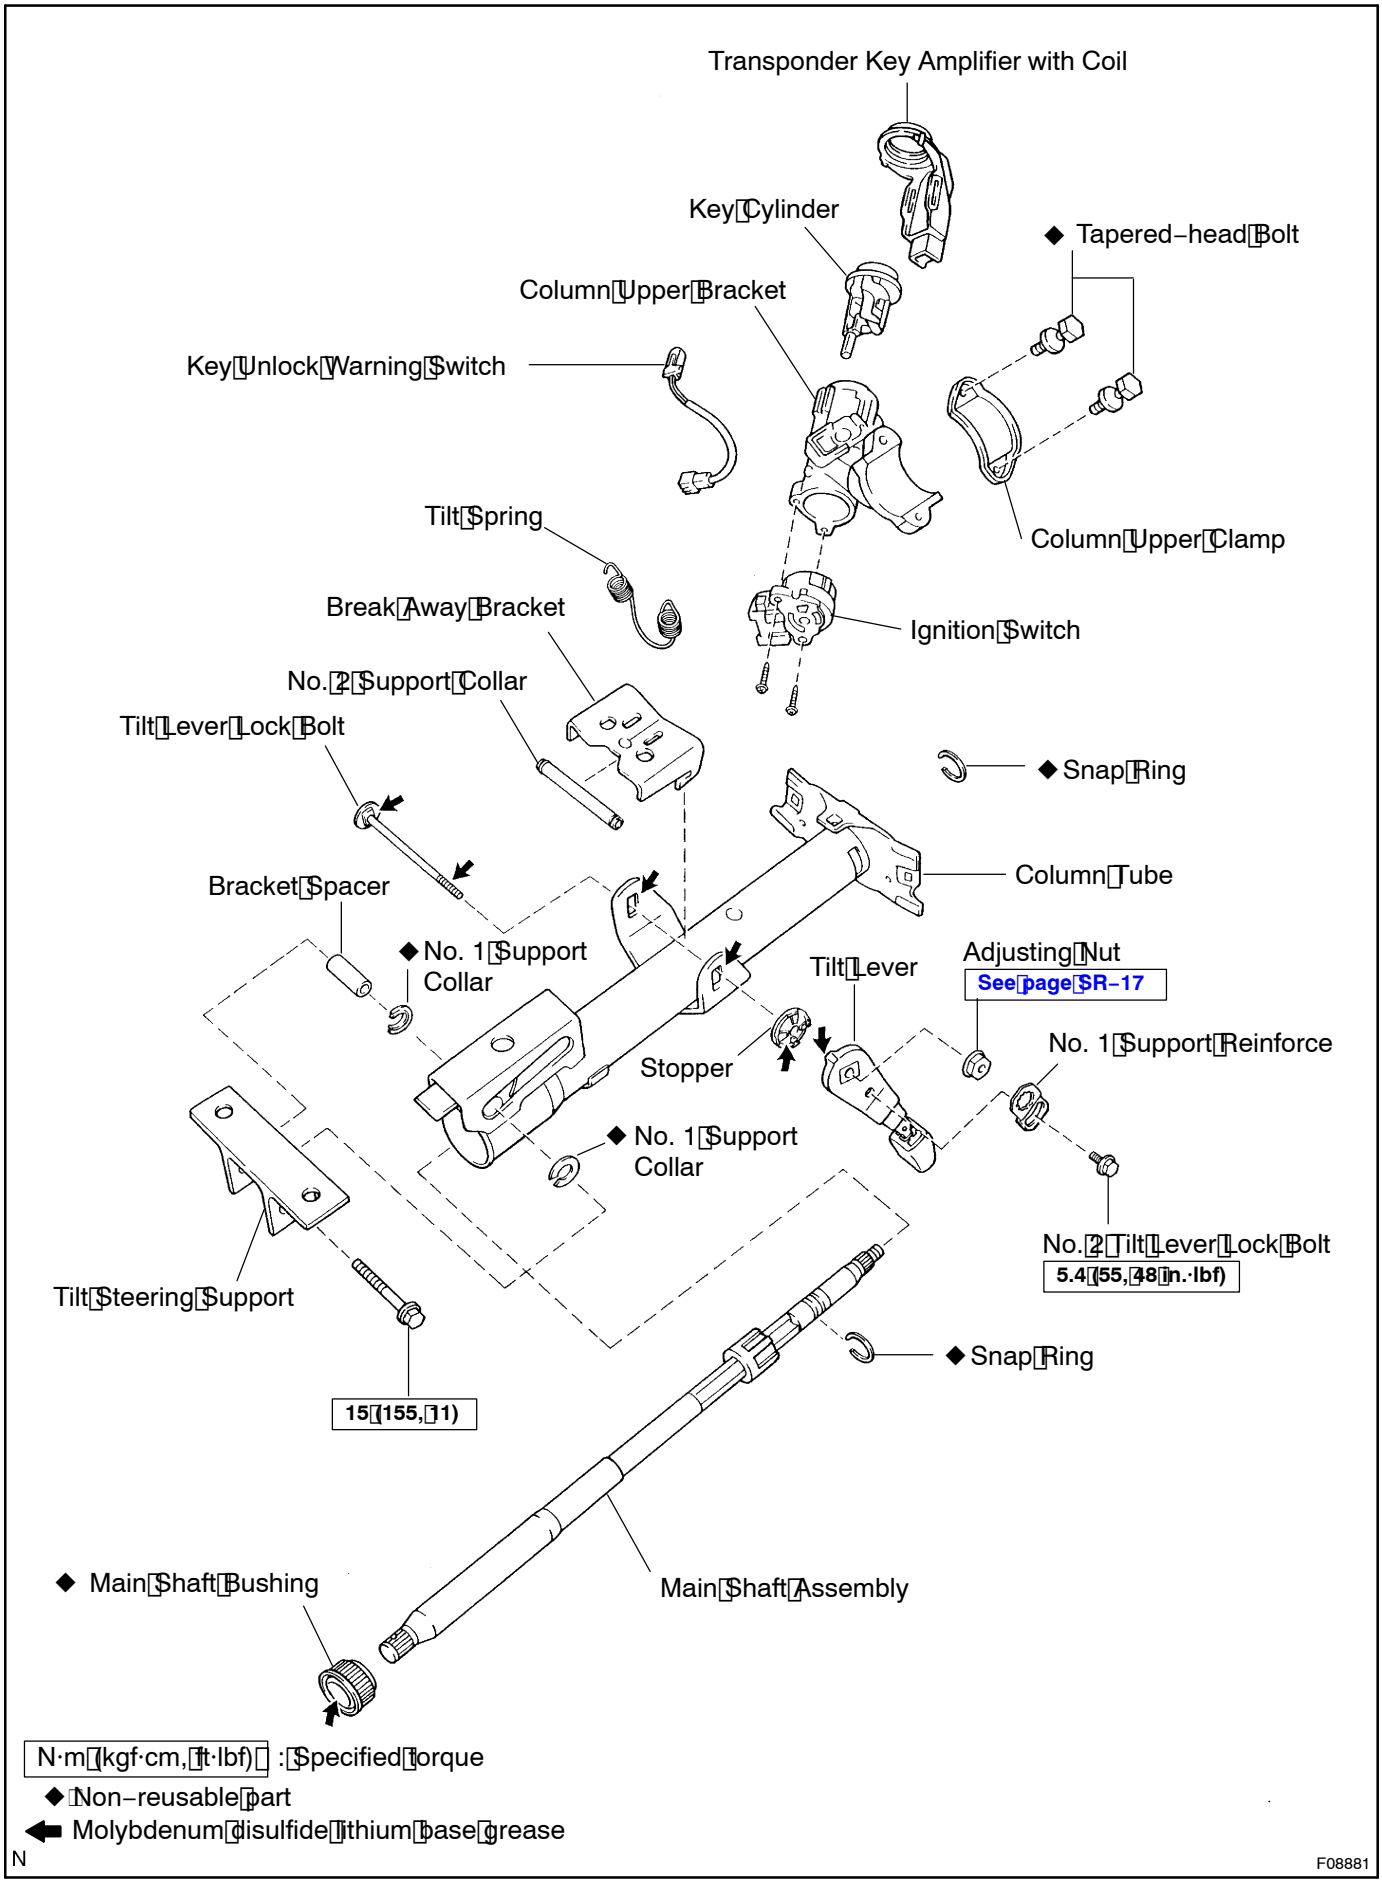
Transponder Key Amplifier with Coil
Key Cylinder
◆ Tapered–head Bolt
Column Upper Bracket
Key Unlock Warning Switch
Tilt Spring
Column Upper Clamp
Break Away Bracket
Ignition Switch
No. 2 Support Collar
Tilt Lever Lock Bolt
◆ Snap Ring
Column Tube
Bracket Spacer
◆ No. 1 Support Collar
Tilt Lever
Adjusting Nut
See page SR–17
No. 1 Support Reinforce
Stopper
◆ No. 1 Support Collar
No. 2 Tilt Lever Lock Bolt
5.4 (55, 48 in.·lbf)
Tilt Steering Support
◆ Snap Ring
15 (155, 11)
◆ Main Shaft Bushing
Main Shaft Assembly
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Molybdenum disulfide lithium base grease
N
F08881