

SR0VN–04

# INSPECTION

**1. INSPECT STEERING LOCK OPERATION**

Check that the steering lock mechanism operates properly.

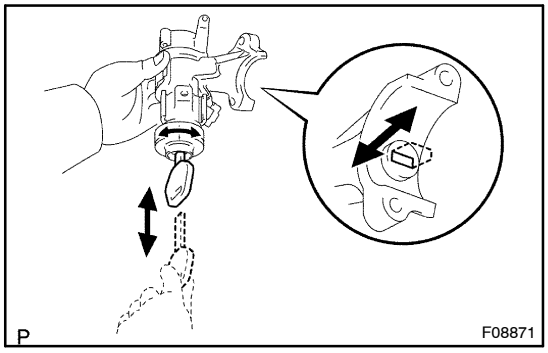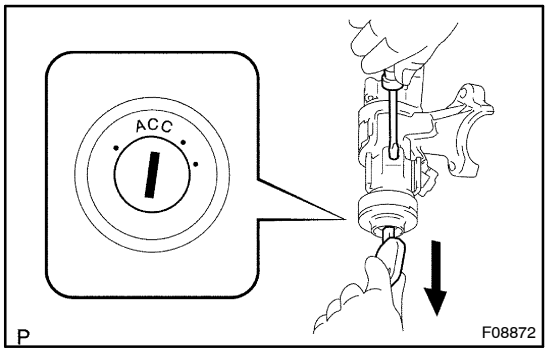


**2. IF NECESSARY, REPLACE KEY CYLINDER**

(a) Place the ignition key at the ACC position.

(b) Push down the stop pin with a screwdriver, and pull out the cylinder.

(c) Install a new cylinder.

HINT:

Make sure the key is at the ACC position.

**3. INSPECT IGNITION SWITCH (See page BE–15)**

**4. IF NECESSARY, REPLACE IGNITION SWITCH**

(a) Remove the 2 screws and ignition switch from the column upper bracket.

(b) Install a new ignition switch with the 2 screws.

**5. INSPECT KEY UNLOCK WARNING SWITCH (See page BE–15)**


**6. IF NECESSARY, REPLACE KEY UNLOCK WARNING SWITCH**

(a) Slide the key unlock warning switch out of the column upper bracket.

(b) Slide a new key unlock warning switch in the column upper bracket.

**7. INSPECT TRANSPONDER KEY AMPLIFIER WITH COIL (See page DI–335)**

**8. IF NECESSARY, REPLACE TRANSPONDER KEY AMPLIFIER WITH COIL**

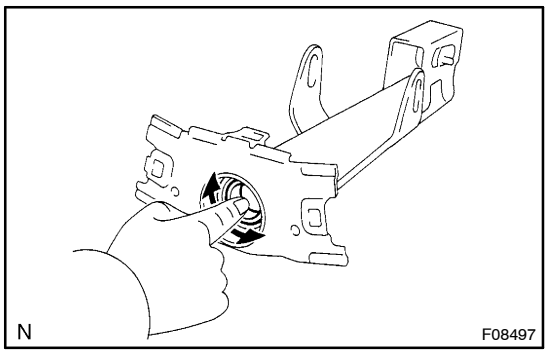


**9. INSPECT BEARING**

Check the bearing rotation condition and check for abnormal noise.

If the bearing is worn or damaged, replace the column tube.