
SR0VU–02

REPLACEMENT

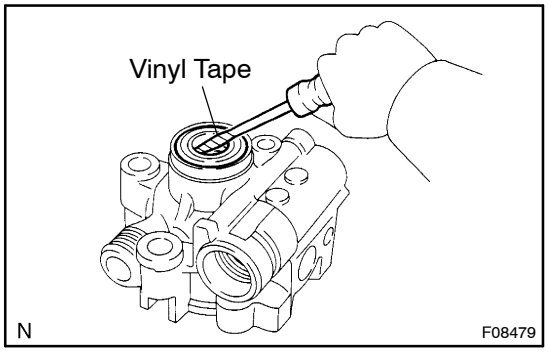

NOTICE:


When using a vise, do not overtighten it.

IF NECESSARY, REPLACE OIL SEAL

(a) Using a screwdriver with vinyl tape wound around its tip, remove the oil seal.

NOTICE:

Be careful not to damage the bushing of the front housing.

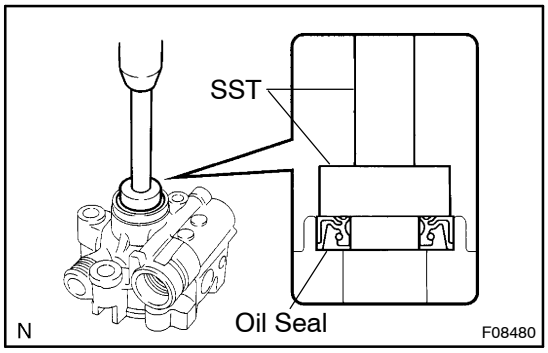

(b) Coat a new oil seal lip with power steering fluid.

(c) Using SST, press in the oil seal.

SST 09950–60010 (09951–00280),
09950–70010 (09951–07100)

NOTICE:

Make sure that the oil seal is installed facing in the correct direction.