

BO2T5–01

DISASSEMBLY


1. REMOVE SUNSHADE STOPPERS
Torque: 2.0 N·m (20 kgf·cm, 17 in.·lbf)
2. REMOVE NO. 1 AND NO. 2 SUNSHADE TRIMS

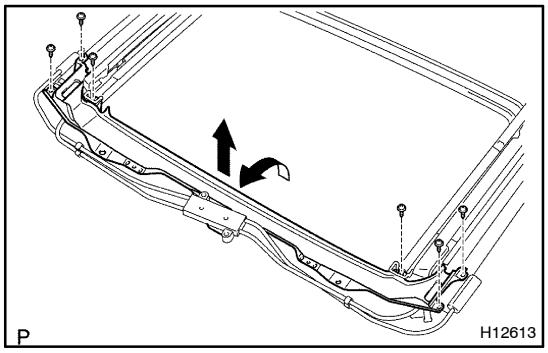

3. REMOVE FRONT HOUSING FRAME
Remove the 6 screws and front housing frame as shown in the illustration.
Torque: 2.0 N·m (20 kgf·cm, 17 in.·lbf)
4. REMOVE REAR ROOF DRIP CANNEL

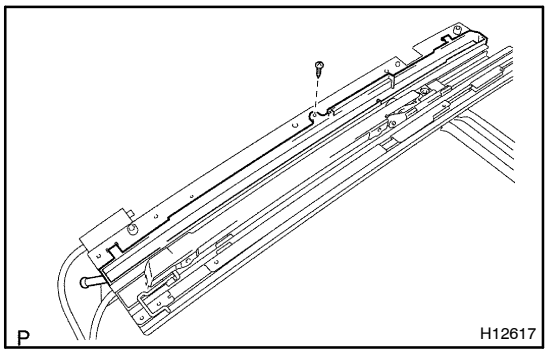


5. REMOVE LH AND RH ROOF DRIP CHANNEL
6. REMOVE CABLE GUIDE CASING
Torque: 2.0 N·m (20 kgf·cm, 17 in.·lbf)

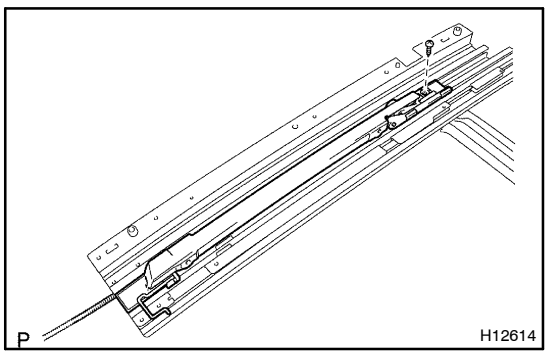

7. REMOVE DRIVE CABLE
(a) Remove the screw.
(b) Slide the drive cable rearward, then remove it.
(c) Employ the same manner described above to the other side.

HINT:
At the time of reassembly, please refer to the following items.
- Adjust the drive cable to a closed and tilted down position.

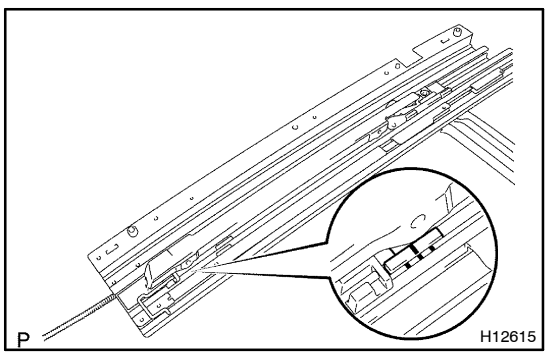

- Slide the cable forward or backward to align the 2 marks as shown in the illustration.