
CL09G–01

INSTALLATION

1. INSTALL MASTER CYLINDER WITH 2 MOUNTING NUTS
   Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)
2. INSTALL PIN AND CLIP

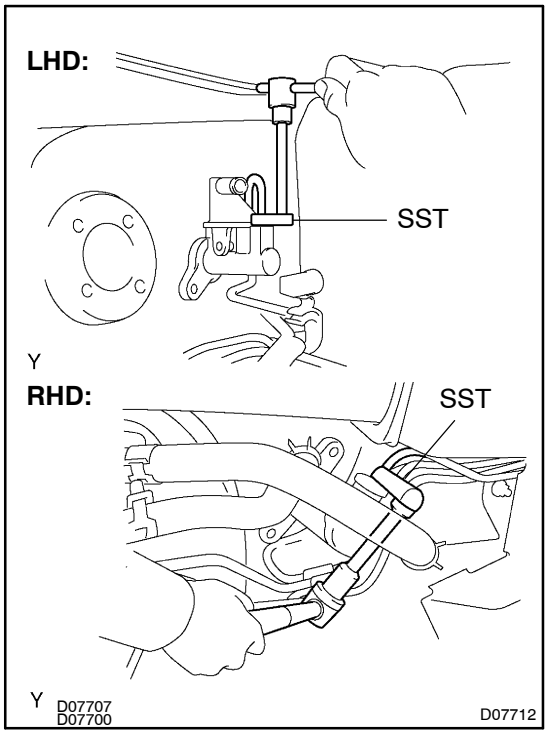


3. CONNECT CLUTCH LINE

Using SST, connect the clutch line.

SST 09023–00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

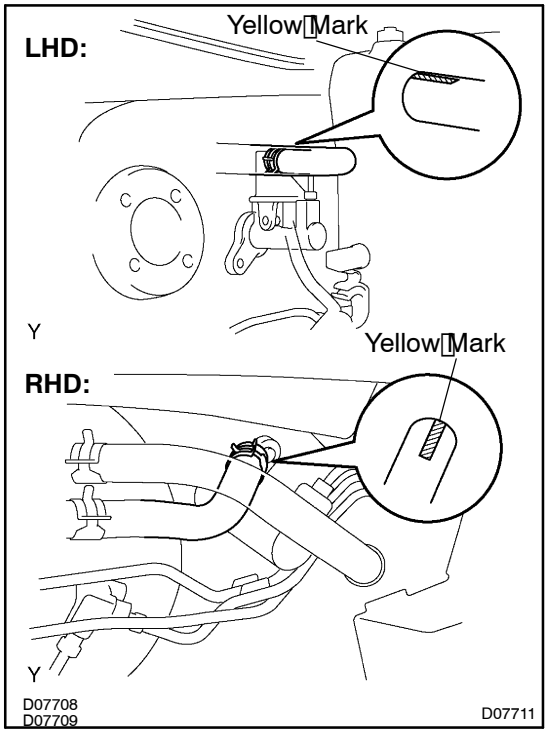

4. CONNECT RESERVOIR HOSE

(a) Connect the reservoir hose to the inlet union.

NOTICE:

Facing the yellow mark upwards.

(b) Using pliers, connect the clip.

5. **LHD:**
   INSTALL BRAKE BOOSTER (See page BR–15)
6. **FILL BRAKE RESERVOIR WITH BRAKE FLUID AND BLEED CLUTCH SYSTEM (See page BR–4)**
7. **ADJUST CLUTCH PEDAL (See page CL–2)**
8. **CHECK FOR LEAKS**