
SA1P6–01

REASSEMBLY

1. INSTALL LOWER INSULATOR ONTO SHOCK ABSORBER

2. INSTALL SPRING BUMPER TO PISTON ROD

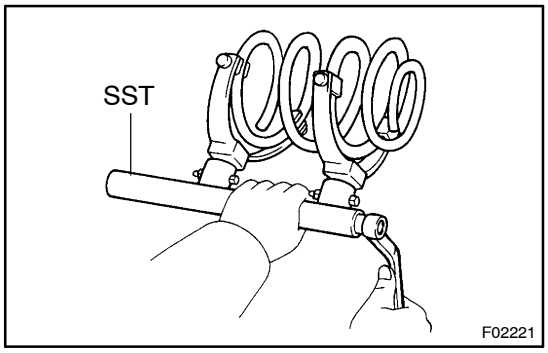

3. INSTALL COIL SPRING

(a) Using SST, compress the coil spring.
SST 09727–30021 (09727–00010, 09727–00021, 09727–00031)

NOTICE:


Do not use an impact wrench. It will damage the SST.


(b) Install the coil spring to the shock absorber.

HINT:

Fit the lower end of the coil spring into the gap of the spring lower seat.


(c) Install the upper insulator as shown in the illustration.

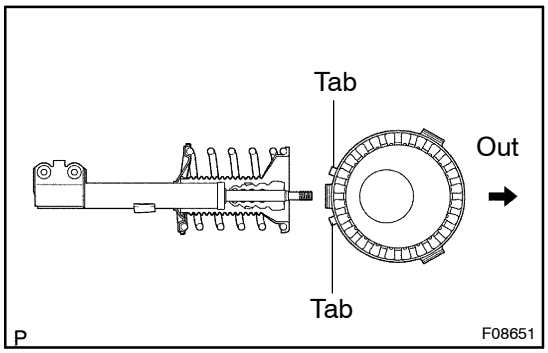

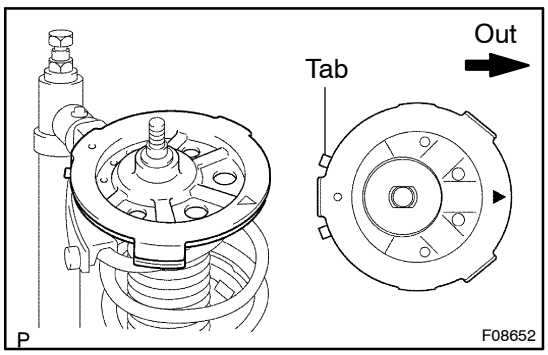


(d) Install the spring seat to the shock absorber with the "▲" mark facing to the outside of the vehicle.

(e) Install the dust seal and suspension support.

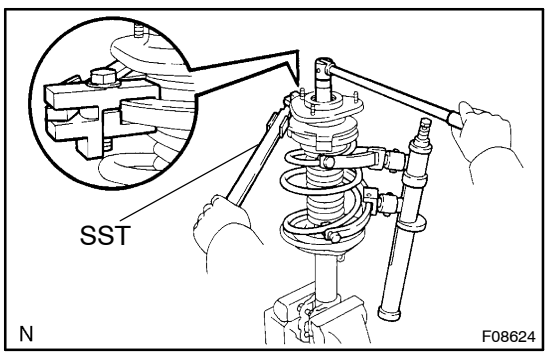

(f) Using SST to hold the suspension support, install a new nut.
SST 09729–22031
Torque: 47 N·m (475 kgf·cm, 34 ft·lbf)

(g) Remove the SST.
SST 09727–30021 (09727–00010, 09727–00021, 09727–00031)

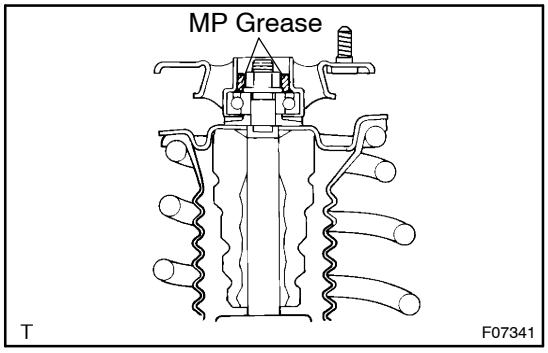

(h) Apply MP grease into the suspension support.
(i) Install the cap.