
SA1OX–01

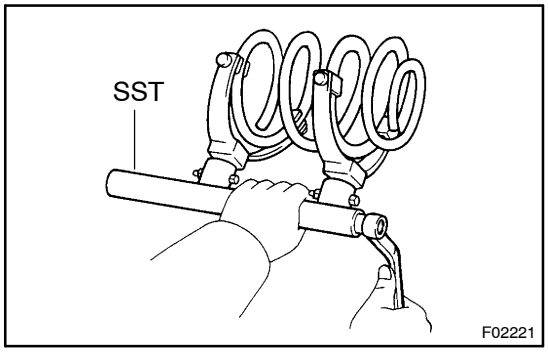


# REASSEMBLY

**1. INSTALL COIL SPRING**

(a) Using SST, compress the coil spring.
SST 09727–30021 (09727–00010, 09727–00021, 09727–00031)

**NOTICE:**

**Do not use an impact wrench. It will damage the SST.**

(b) Insert the coil spring to the shock absorber.


HINT:

Fit the lower end of the coil spring into the gap of the spring lower seat.

**2. INSTALL SPRING BUMPER AND SUSPENSION SUPPORT**

**3. INSTALL SPRING BRACKET**

(a) Set the upper insulator to the spring bracket.

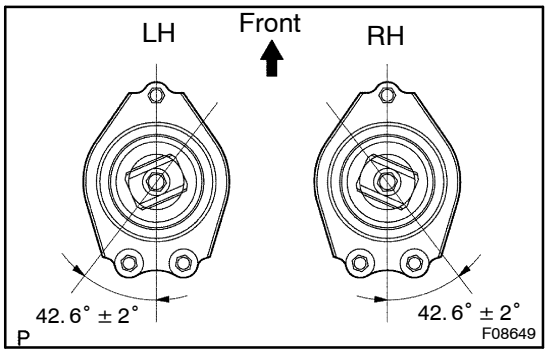



(b) Position the spring bracket with upper insulator as shown in the illustration.

(c) Install the cushion and washer.

(d) Temporarily tighten the center nut.

(e) Remove the SST.
SST 09727–30021 (09727–00010, 09727–00021, 09727–00031)

(f) Recheck the direction of the spring bracket.

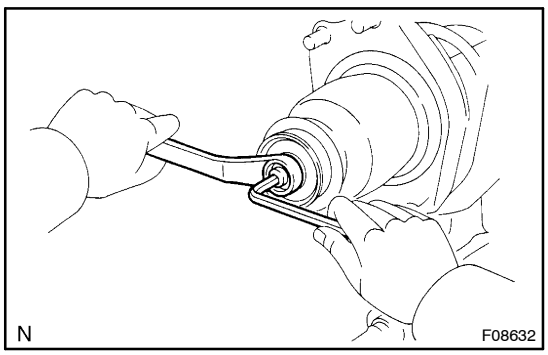


(g) Using a 6 mm hexagon wrench to hold the piston rod, tighten the nut.
**Torque: 56 N·m (571 kgf·cm, 41 ft·lbf)**