
BO2S9–01

# DISASSEMBLY

**1. w/ Rear spoiler:**
**REMOVE REAR SPOILER**

**2. REMOVE DOOR PULL HANDLE**

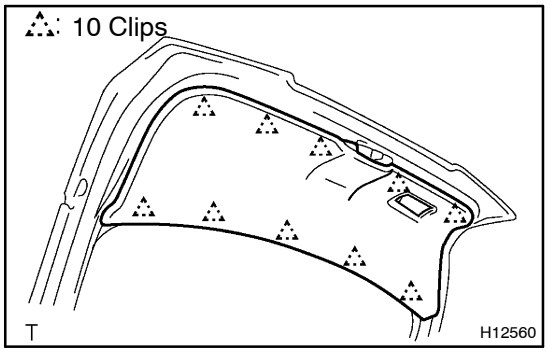


**3. REMOVE BACK DOOR TRIM BOARD**

Using a screwdriver, remove the back door trim board.


HINT:

Tape the screwdriver tip before use.


**4. REMOVE REAR WIPER ARM**

HINT:

- At the time of reassembly, please refer to the following items
- Operate the wiper motor once and turn the wiper switch OFF.
- Install the rear wiper arm and tighten the nut by hand.

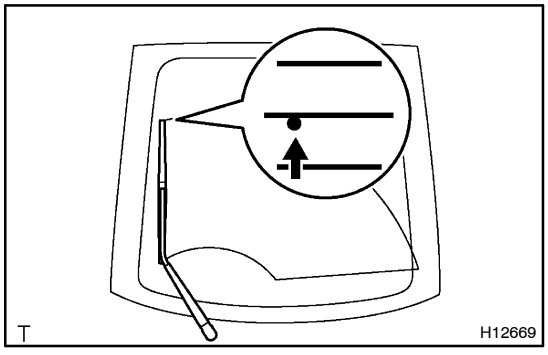


- Adjust the installation position of the wiper arm at a point in defogger pattern.
- Tighten the nut.
  **Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**

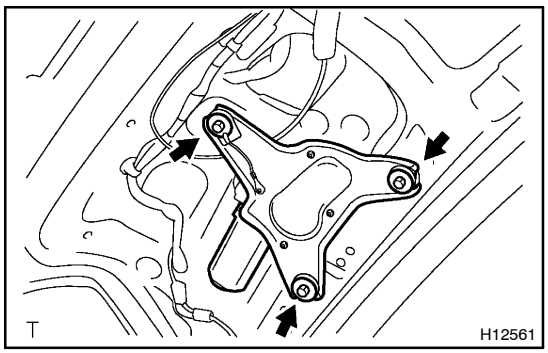



**5. REMOVE REAR WIPER MOTOR**

(a) Disconnect the connector.

(b) Unfasten the 3 bolts and remove the rear wiper motor.
**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**

(c) Remove the packing.

(d) Europe (RHD):
Remove the grommet from the rear wiper motor.

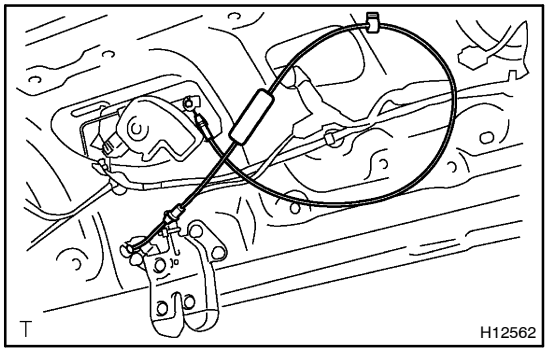


**6. REMOVE CONTROL CABLE**

(a) Disconnect the cable from the back door lock.
(b) Disconnect the cable from the outside back door handle.
(c) Remove the clamp and control cable.

**7. REMOVE BACK DOOR LOCK**


(a) Remove the wire harness clamp from the door lock.
(b) Remove the 3 bolts and back door lock.
**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**
(c) Disconnect the connector.

**8. REMOVE KEY CYLINDER**

(a) Disconnect the control link.
(b) Remove the 2 nuts and key cylinder.


**9. REMOVE OUTSIDE BACK DOOR HANDLE**

(a) w/ Power door lock:
Disconnect the connector.
(b) Remove the 2 nuts and outside back door handle.
**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**
(c) Remove the control link from the outside back door handle.

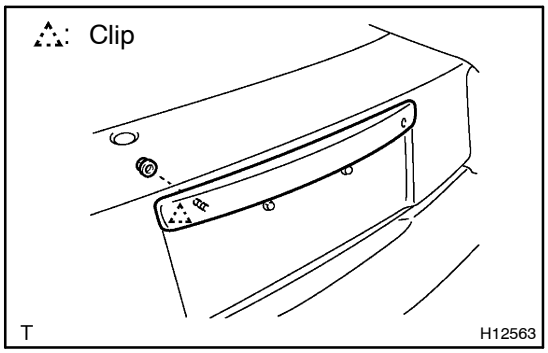


**10. REMOVE OUTSIDE BACK DOOR GARNISH**


(a) Remove the nut.
(b) Remove the outside back door garnish by compressing clip from the inside to disengage them.

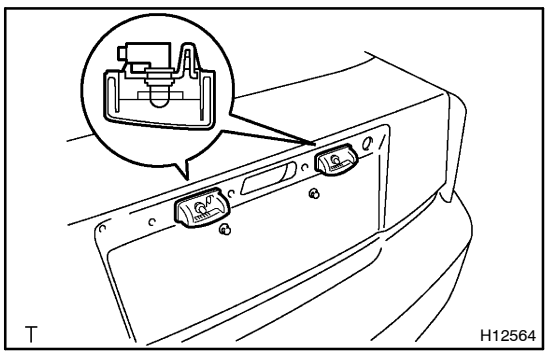


**11. REMOVE LICENSE PLATE LIGHTS**

(a) Disconnect the connectors.
(b) Using a screwdriver, remove the license plate lights.

HINT:
Tape the screwdriver tip before use.

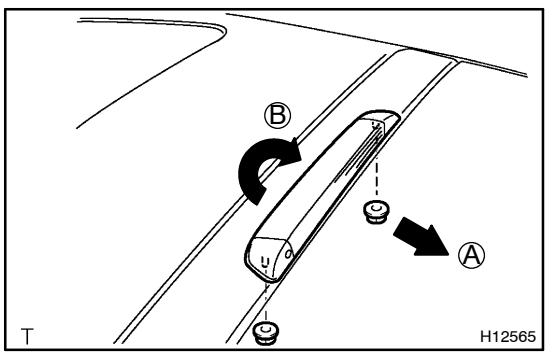


**12. REMOVE CENTER STOP LIGHT**

(a) Remove the 2 nuts.
(b) Disconnect the connector and washer hose, then remove the center stop light in order A, B as shown in the illustration..

**13. REMOVE BACK DOOR WEATHERSTRIP**