

BO2SL–01

INSTALLATION

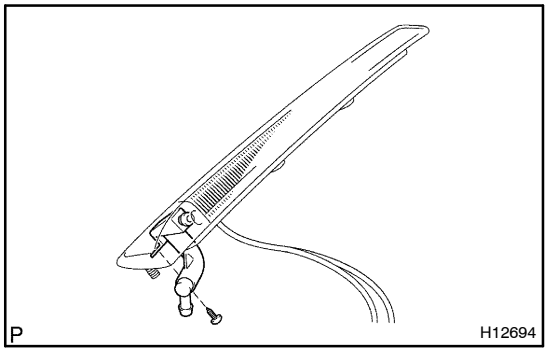


1. INSTALL REAR WASHER NOZZLE


(a) Install the rear wiper nozzle to the center step light with the screw.

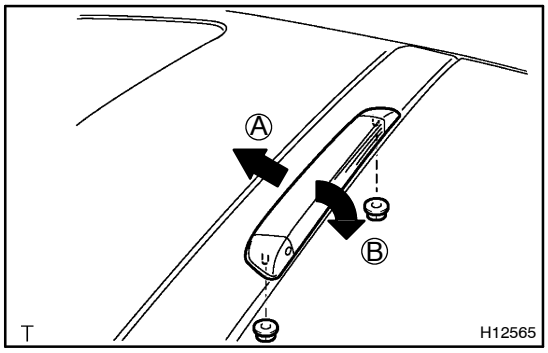

(b) Connect the connector and washer hose, then install the center stop light with the 2 nuts in order A, B as shown in the illustration.

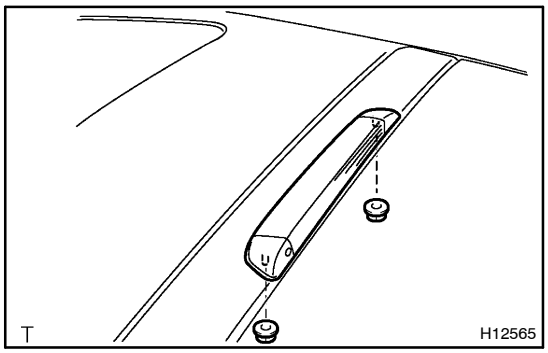

(c) Connect the connector and washer hose, then install the center stop light with the 2 nuts.

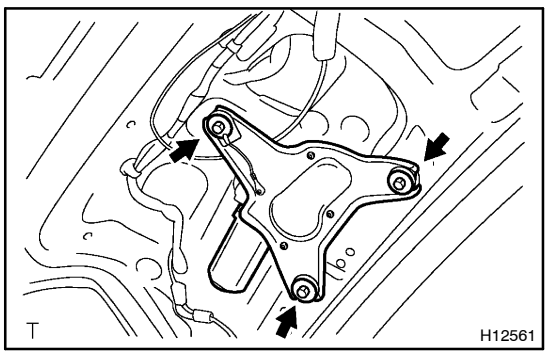

2. INSTALL REAR WIPER MOTOR

(a) Europe (RHD):
Install the grommet to the rear wiper motor.

(b) Install the packing.

(c) Install the rear wiper motor and fasten the 3 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(d) Connect the connector.


3. INSTALL BACK DOOR TRIM BOARD

4. INSTALL DOOR PULL HANDLE

5. INSTALL REAR WIPER ARM

(a) Operate the wiper motor once and turn the wiper switch OFF.

(b) Install the rear wiper arm and tighten the nut by hand.

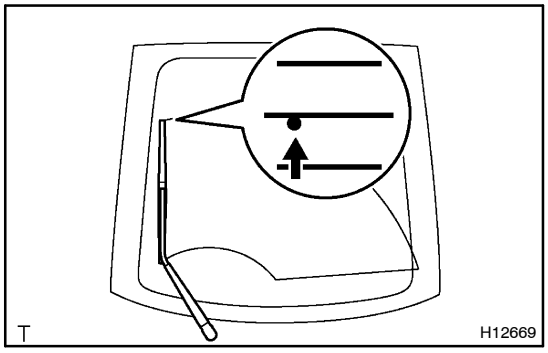

(c) Adjust the installation position of the wiper arm at a point in defogger pattern.

(d) Tighten the nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

6. w/ Rear spoiler:
REMOVE REAR SPOILER