

BRAKE MASTER CYLINDER

COMPONENTS

BR15I–01

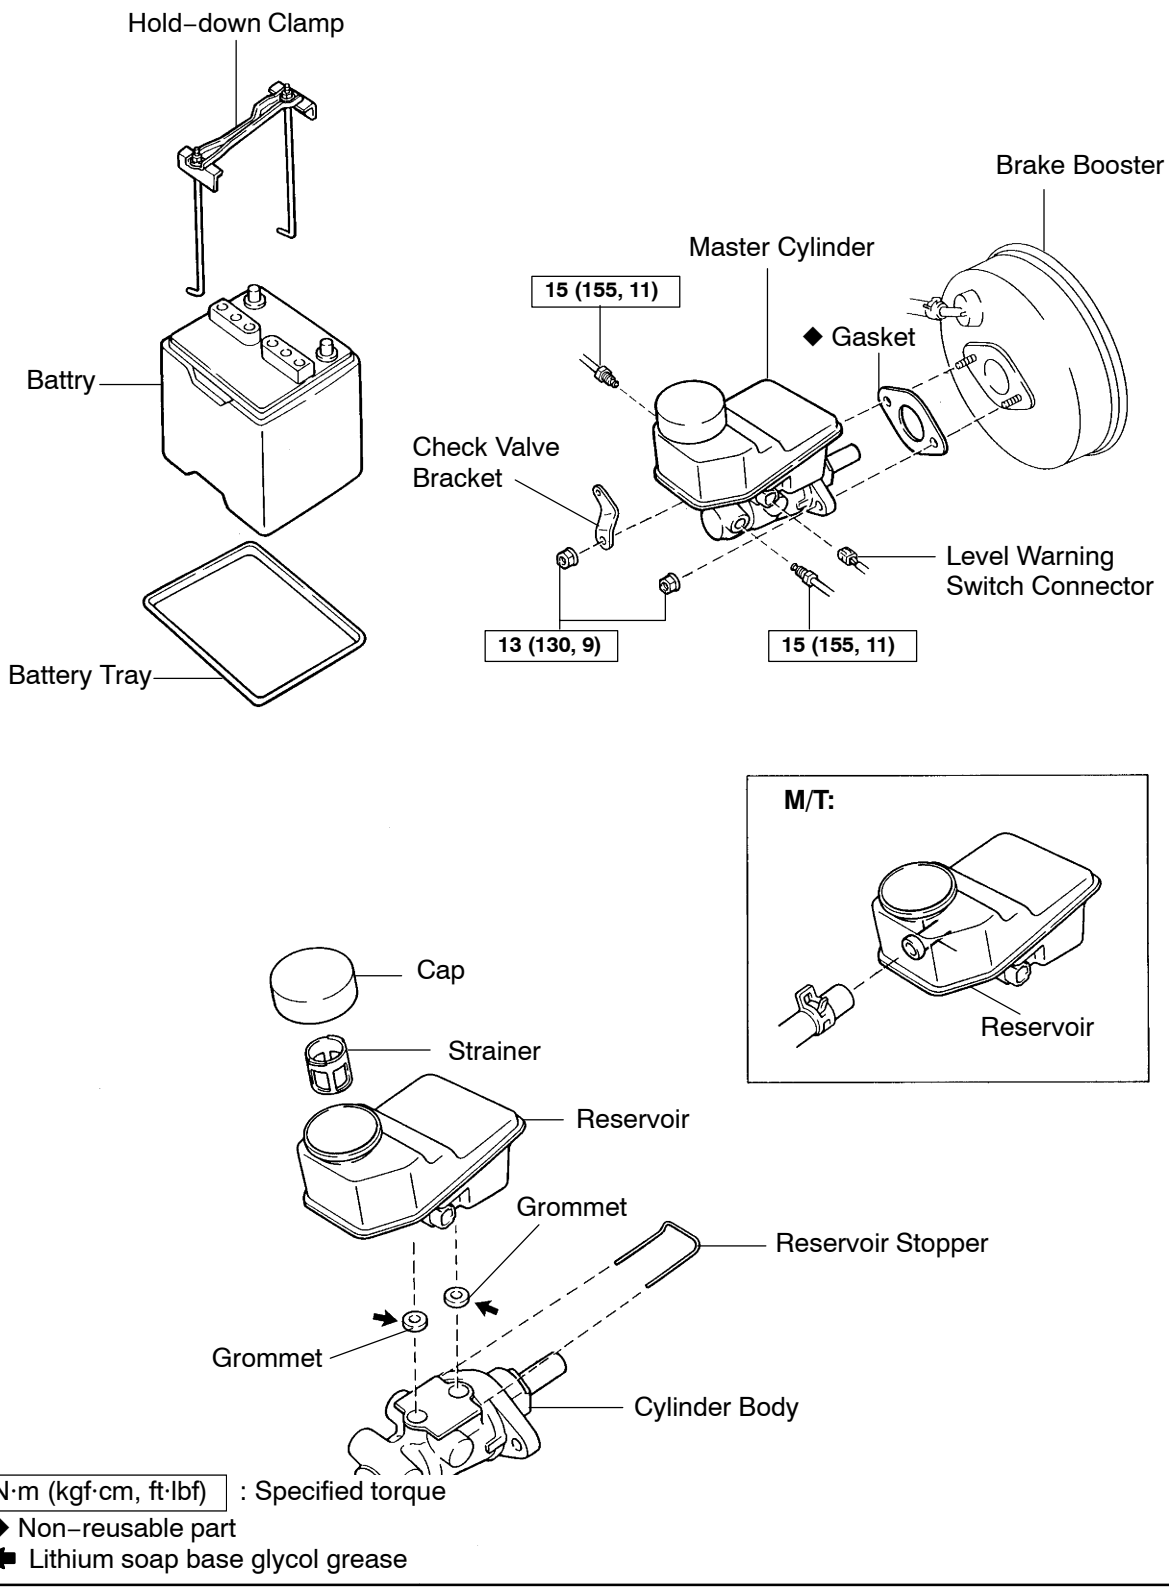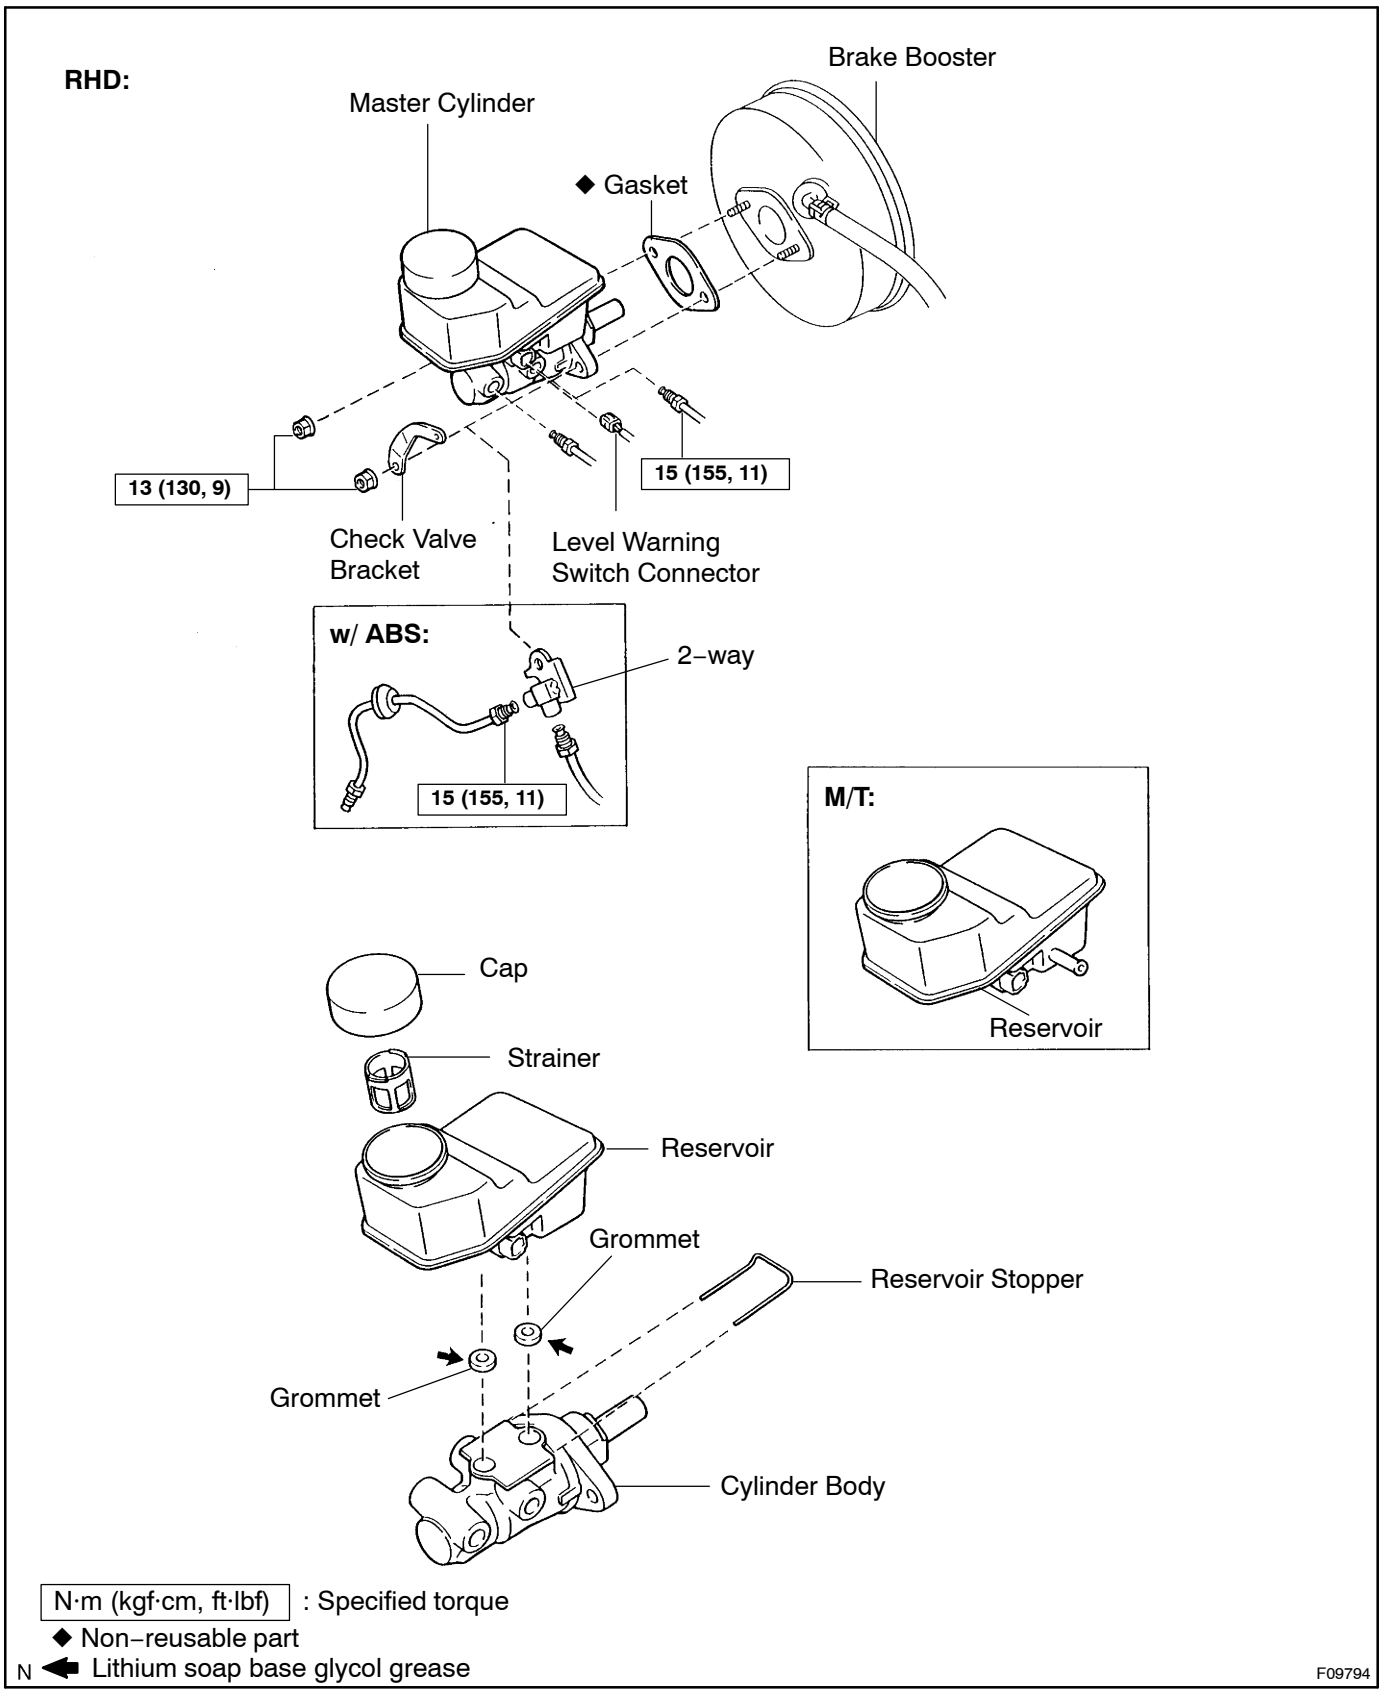


RHD:
Brake Booster
Master Cylinder
◆ Gasket
13 (130, 9)
15 (155, 11)
Check Valve Bracket
Level Warning Switch Connector
w/ ABS:
2–way
15 (155, 11)
M/T:
Reservoir
Cap
Strainer
Reservoir
Grommet
Reservoir Stopper
Grommet
Cylinder Body
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
N Lithium soap base glycol grease
F09794